



# IP Office

1408, 1416, 1608 and 1616 Phone  
Guide

#### Notices

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

#### Documentation disclaimer

Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of this documentation unless such modifications, additions, or deletions were performed by Avaya.

End User agree to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

#### Link disclaimer

Avaya is not responsible for the contents or reliability of any linked Web sites referenced within this site or documentation(s) provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

#### Warranty

Avaya provides a limited warranty on this product. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product, while under warranty, is available to Avaya customers and other parties through the Avaya Support Web site: <http://www.avaya.com/support>. Please note that if you acquired the product from an authorized Avaya reseller outside of the United States and Canada, the warranty is provided to you by said Avaya reseller and not by Avaya.

#### Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, [HTTP://SUPPORT.AVAYA.COM/LICENSEINFO/](http://support.avaya.com/licenseinfo/) ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC., ANY AVAYA AFFILIATE, OR AN AUTHORIZED AVAYA RESELLER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AUTHORIZED AVAYA RESELLER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING, AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA AUTHORIZED RESELLER, AND AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE ("AVAYA").

Avaya grants End User a license within the scope of the license types described below. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the Documentation or other materials available to End User. "Designated Processor" means a single stand-alone computing device. "Server" means a Designated Processor that hosts a software application to be accessed by multiple users. "Software" means the computer programs in object code, originally licensed by Avaya and ultimately utilized by End User, whether as stand-alone products or pre-installed on Hardware. "Hardware" means the standard hardware originally sold by Avaya and ultimately utilized by End User.

#### License types

Designated System(s) License (DS). End User may install and use each copy of the Software on only one Designated Processor, unless a different number of Designated Processors is indicated in the Documentation or other materials available to End User. Avaya may require the Designated Processor(s) to be identified by type, serial number, feature key, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.

#### Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation(s) and Product(s) provided by Avaya. All content on this site, the documentation(s) and the product(s) provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil, offense under the applicable law.

#### Third Party Components

Certain software programs or portions thereof included in the Product may contain software distributed under third party agreements ("Third Party Components"), which may contain terms that expand or limit rights to use certain portions of the Product ("Third Party Terms"). Information regarding distributed Linux OS source code (for those Products that have distributed the Linux OS source code), and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply to them is available on the Avaya Support Web site: <http://support.avaya.com/Copyright>.

#### Preventing toll fraud

"Toll fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of toll fraud associated with your system and that, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

#### Avaya fraud intervention

If you suspect that you are being victimized by toll fraud and you need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Support Web site: <http://support.avaya.com>. Suspected security vulnerabilities with Avaya products should be reported to Avaya by sending mail to: [securityalerts@avaya.com](mailto:securityalerts@avaya.com).

#### Trademarks

Avaya and Aura are trademarks of Avaya, Inc. The trademarks, logos and service marks ("Marks") displayed in this site, the documentation(s) and product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the documentation(s) and product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party. Avaya is a registered trademark of Avaya Inc. All non-Avaya trademarks are the property of their respective owners.

#### Downloading documents

For the most current versions of documentation, see the Avaya Support Web site: <http://www.avaya.com/support>

#### Contact Avaya Support

Avaya provides a telephone number for you to use to report problems or to ask questions about your product. The support telephone number is 1-800-242-2121 in the United States. For additional support telephone numbers, see the Avaya Web site: <http://www.avaya.com/support>



# Contents

## 1. Introduction

1.1 Important Safety Information.....	9
1.2 1408 and 1608 Phones.....	10
1.3 1416 and 1616 Phones.....	11
1.4 Button Modules.....	12
1.5 Phone Keys.....	13
1.6 The Phone Stand.....	14
1.7 Labels.....	15
1.8 IP Phone Features (1608 and 1616).....	15
1.9 The Main Phone Menus.....	16
1.10 Other Menus.....	18
1.11 Appearance Buttons/Menu.....	19
1.11.1 Using the Appearance Menu.....	20
1.11.2 Phone Status Letters.....	20
1.11.3 Call Appearance Buttons.....	21
1.11.4 Bridged Appearance Buttons.....	23
1.11.5 Call Coverage Buttons.....	25
1.11.6 Line Appearance Buttons.....	27

## 2. Making Calls

2.1 En-Bloc Dialing.....	31
2.2 Call Soft Key Options.....	32
2.3 Calling a Person from the Contacts List.....	33
2.4 Calling a Person from the Call Log.....	33
2.5 Redialling a Previous Number.....	34
2.6 Making a Page Call.....	34
2.7 Withholding Your Number.....	35
2.8 Adjust the Call Volume.....	36
2.9 Muting a Call.....	36
2.10 Ending Calls.....	36

## 3. Answering Calls

3.1 Divert a Call to Voicemail.....	39
3.2 Ignore an Incoming Call.....	39
3.3 Answering a Page Call.....	39
3.4 Auto Answer.....	39
3.5 Call Pickup.....	40

## 4. Redialling

4.1 Redial a Call (One Mode).....	42
4.2 Redial a Call (List Mode).....	42
4.3 Selecting Your Redial Mode.....	43
4.4 View Call Details.....	44
4.5 Add a Call to Your Contacts.....	44

## 5. Holding and Parking Calls

5.1 Holding Calls.....	47
5.1.1 Holding a Call.....	47
5.1.2 Taking a Call Off Hold.....	47
5.1.3 Switching Between Calls.....	48
5.1.4 Transfer a Held Call.....	48
5.2 Parking Calls.....	49
5.2.1 Park Using the Menu.....	50
Features Menu).....	50
Status Menu).....	50

## 6. Transferring Calls

6.1 Transfer to Voicemail.....	52
6.2 Transferring a Held Call.....	52

## 7. Account Codes

7.1 Forced Account Code Entry.....	54
7.2 Manual Account Code Entry.....	54

## 8. Conference Calls

8.1 Starting a Conference.....	56
8.2 Adding a Call to a Conference.....	56
8.3 Viewing Conference Details.....	57
8.4 Dropping Parties from a Conference.....	57
8.5 Holding a Conference Call.....	58
8.6 Transferring Calls Using Conference.....	58

## 9. Headset Operation

9.1 Headset Volume.....	60
9.2 Default Handsfree Audio Path.....	60

## 10. Handsfree Speaker Operation

10.1 Speaker Volume.....	62
10.2 Default Handsfree Audio Path.....	62

## 11. Contacts/Directory

11.1 Viewing Contacts Details.....	65
11.2 Make a Call from the Directory.....	66
11.3 Using the Directory for Other Functions.....	66
11.4 Adding a New Contact.....	67
11.4.1 Add a Contact from the Call Log.....	68
11.4.2 Add a Contact from the Redial List.....	68
11.5 Editing a Contact.....	69
11.6 Deleting a Contact.....	70

## 12. Call Log

12.1 Using the Call Log.....	73
12.2 Making a Call from the Call Log.....	73
12.3 Viewing Call Details.....	74
12.4 Deleting a Record.....	75
12.5 Deleting All Records.....	75
12.6 Adding a Record to Your Contacts.....	76

## 13. Voicemail

13.1 Message Waiting Indication.....	78
13.2 Checking Messages.....	79
13.3 Sending a Message.....	80
13.4 Mailbox Greeting.....	81
13.5 Email Mode.....	82
13.6 Changing Your Voicemail Code.....	83
13.7 Voicemail On/Off.....	83
13.8 Transfer to Voicemail.....	84
13.9 Send a Call to Voicemail.....	84
13.10 Visual Voice.....	84

## 14. Logging In/Out

14.1 Logging In.....	87
14.1.1 Logging In on a Phone Already in Use.....	87
14.1.2 Logging In on a Not Logged In Phone.....	87
14.1.3 Logging In on an Unregistered Phone.....	87



14.2 Logout .....	88	17.2.20 Self-Administer.....	121
14.3 Lock .....	88	17.2.21 Send All Calls.....	121
14.4 Auto Lock.....	89	17.2.22 Set Hunt Group Night Service.....	121
14.5 Unlock .....	89	17.2.23 Time of Day.....	121
14.6 Changing Your Login Code.....	90	17.2.24 Timer.....	121
14.7 Unregistering.....	90	17.2.25 User.....	123

## 15. Redirecting Calls

15.1 Follow Me.....	93
15.1.1 Follow Me To (Features Menu).....	94
15.1.2 Follow Me (Status Menu).....	94
15.1.3 Follow Me Here (Features Menu).....	95
15.2 Forwarding Calls.....	96
15.2.1 Forward Unconditional (Status Menu).....	98
15.2.2 Forward Unconditional (Features Menu).....	99
15.2.3 Forward On No Answer (Status Menu).....	100
15.2.4 Forward On Busy (Status Menu).....	101
15.2.5 Forward On Busy/No Answer (Features Menu).....	102
15.3 Do Not Disturb.....	103
15.3.1 DND On/Off (Features Menu).....	104
15.3.2 DND Off (Status Menu).....	104
15.3.3 Do Not Disturb Exceptions.....	104
15.4 Twinning.....	105
15.4.1 Mobile Twinning Control.....	105

## 16. Groups

16.1 Group Membership.....	108
16.1.1 Group Membership On/Off (Status Menu).....	108
16.1.2 Group Membership On/Off (Features Menu).....	109
16.2 Group Service Status and Fallback.....	110
16.2.1 Changing the Group Service Status (Features Menu).....	111
16.2.2 Changing the Group Service Status (Status Menu).....	112
16.2.3 Changing the Group Fallback.....	113

## 17. Button Features

17.1 Programming a Button.....	116
17.2 Features.....	117
17.2.1 Abbreviated Dial.....	118
17.2.2 Abbreviated Dial Program.....	118
17.2.3 Account Code Entry.....	118
17.2.4 AD Suppress.....	118
17.2.5 Automatic Callback.....	118
17.2.6 Breakout.....	118
17.2.7 Call Forwarding All.....	118
17.2.8 Call Park.....	119
17.2.9 Call Park to Other Ext.....	119
17.2.10 Call Pickup.....	119
17.2.11 Directed Call Pickup.....	119
17.2.12 Directory.....	119
17.2.13 Drop.....	119
17.2.14 Flash Hook.....	119
17.2.15 Group.....	120
17.2.16 Group Paging.....	120
17.2.17 Group Paging at Toggle.....	120
17.2.18 Internal Auto Answer.....	120
17.2.19 Internal Auto Answer Off.....	120

## 18. Phone Settings

18.1 Mobile Twinning.....	127
18.2 Withhold Number.....	127
18.3 Redial Mode.....	128
18.4 En-Bloc Dialing.....	129
18.5 Erase Options.....	129
18.6 Auto Lock.....	130
18.7 Ringer Controls.....	131
18.7.1 Disabling the Ringer.....	131
18.7.2 Visual Alerting.....	132
18.7.3 Audible Alerting.....	132
18.7.4 Coverage Ring.....	132
18.7.5 Ring Sound.....	133
18.7.6 Ringer Volume.....	134
18.7.7 Internal Auto Answer.....	134
18.8 Display Controls.....	135
18.8.1 Display Brightness.....	135
18.8.2 Display Contrast.....	135
18.8.3 Call Timer Display.....	136
18.8.4 Last Call Duration Display.....	136
18.8.5 Display Language.....	137
18.8.6 Display Name.....	138
18.8.7 A-Menu Auto Exit.....	138
18.8.8 Show Call Waiting.....	139
18.8.9 Inactivity Timer (Auto Return).....	139
18.9 Volume and Sound.....	140
18.9.1 Button Clicks.....	141
18.9.2 Error Tones.....	141
18.9.3 Ringer Volume.....	141
18.9.4 Handset Volume.....	141
18.9.5 Headset Volume.....	141
18.9.6 Speaker Volume.....	142
18.9.7 Automatic Gain Control.....	142
18.9.8 Default Handsfree Audio Path.....	142
18.10 Backup/Restore.....	143
18.10.1 Backup.....	143
18.10.2 Restore.....	144
18.11 Viewing Information.....	145

## 19. Status Menu

19.1 Do Not Disturb.....	148
19.2 Follow Me To.....	148
19.3 Follow Me Here.....	149
19.4 Forward On Busy.....	149
19.5 Forward On No Answer.....	150
19.6 Forward Unconditional.....	150
19.7 Forwarded Here.....	151
19.8 Group Membership.....	151
19.9 Group Service Status.....	151
19.10 Mobile Twinning.....	152
19.11 Parked Calls.....	152
19.12 System Alarms.....	152



**20.Short Codes**

23.33 Twinning..... 185  
 Index .....187

**21.System Administration**

21.1 Checking the System and Software Version..... 158  
 21.2 Checking the Time Settings..... 159  
 21.3 Setting the Date..... 159  
 21.4 Setting the Time..... 159  
 21.5 Setting the Time Offset..... 161  
 21.6 System Shutdown..... 162  
 21.7 Memory Card Management..... 163  
 21.8 System Alarms..... 164

**22.The Phone Menus**

22.1 Features Menu..... 167  
 22.2 Self-Administer Menu..... 169  
 22.3 Visual Voice Menu..... 170  
 22.4 Status Menu..... 171  
 22.5 Phone A-Menu ..... 172  
 22.6 Call Log Menu..... 174  
 22.7 Contacts Menu..... 175  
 22.8 Redial Menu..... 176  
 22.9 Phone Locked Menu ..... 177  
 22.10 System Admin Menu..... 178  
 22.11 Error Screens..... 179

**23.Glossary**

23.1 Abbreviated Ring..... 182  
 23.2 Appearance Button..... 182  
 23.3 Attention Ring..... 182  
 23.4 Auto Hold..... 182  
 23.5 Bridged Appearance Button ..... 182  
 23.6 Call Appearance Button..... 182  
 23.7 Call Coverage Button..... 182  
 23.8 Coverage Ring..... 182  
 23.9 Do Not Disturb..... 182  
 23.10 Do Not Disturb Exceptions ..... 183  
 23.11 Follow Me..... 183  
 23.12 Follow Me Here..... 183  
 23.13 Follow Me To..... 183  
 23.14 Forward on Busy ..... 183  
 23.15 Forward on No Answer..... 183  
 23.16 Forward Unconditional..... 183  
 23.17 Group ..... 184  
 23.18 Idle Line Preference..... 184  
 23.19 Internal Twinning..... 184  
 23.20 Line Appearance Button..... 184  
 23.21 Logged Out..... 184  
 23.22 Login Code..... 184  
 23.23 Missed Call..... 184  
 23.24 Missed Group Call..... 184  
 23.25 Mobile Twinning..... 184  
 23.26 Park Call..... 185  
 23.27 Park Slot Number..... 185  
 23.28 Ringing Line Preference..... 185  
 23.29 Short Codes..... 185  
 Unity Network..... 185  
 Administrator..... 185  
 e User..... 185





# Chapter 1.

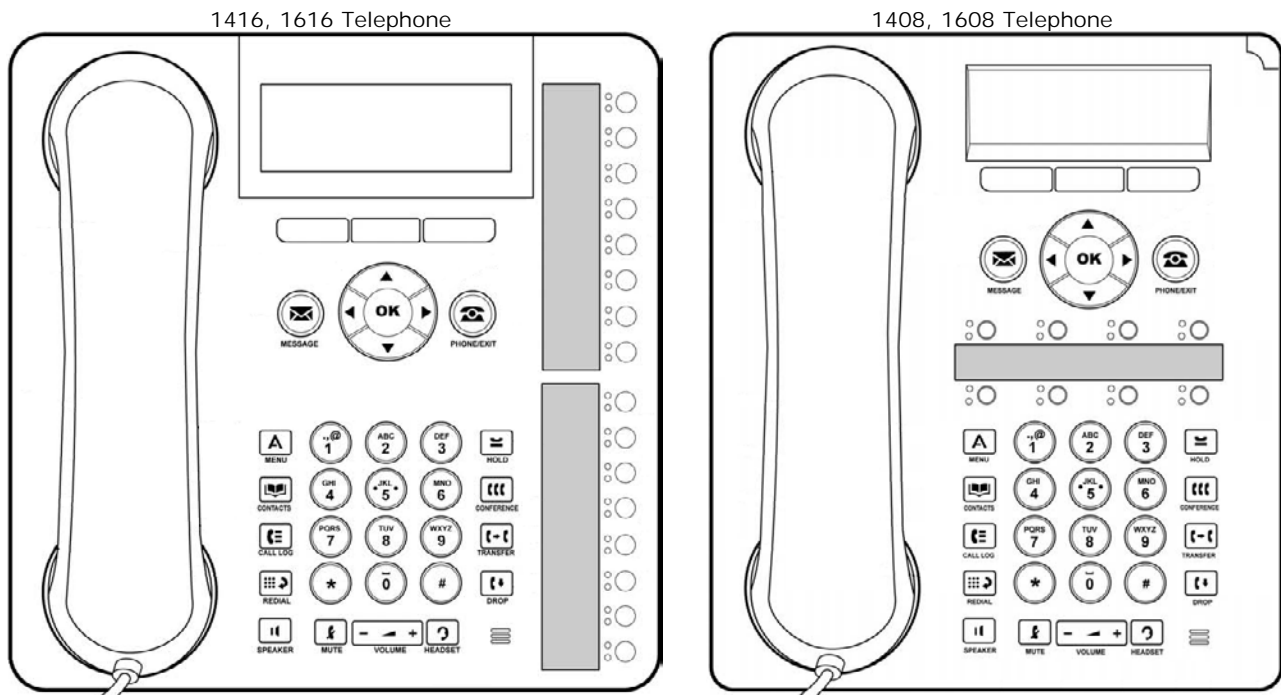
# Introduction





# 1. Introduction

This guide is for 1408, 1608, 1416 and 1616 phones when being used on an IP Office telephone system running IP Office Release 6.1 and higher software.



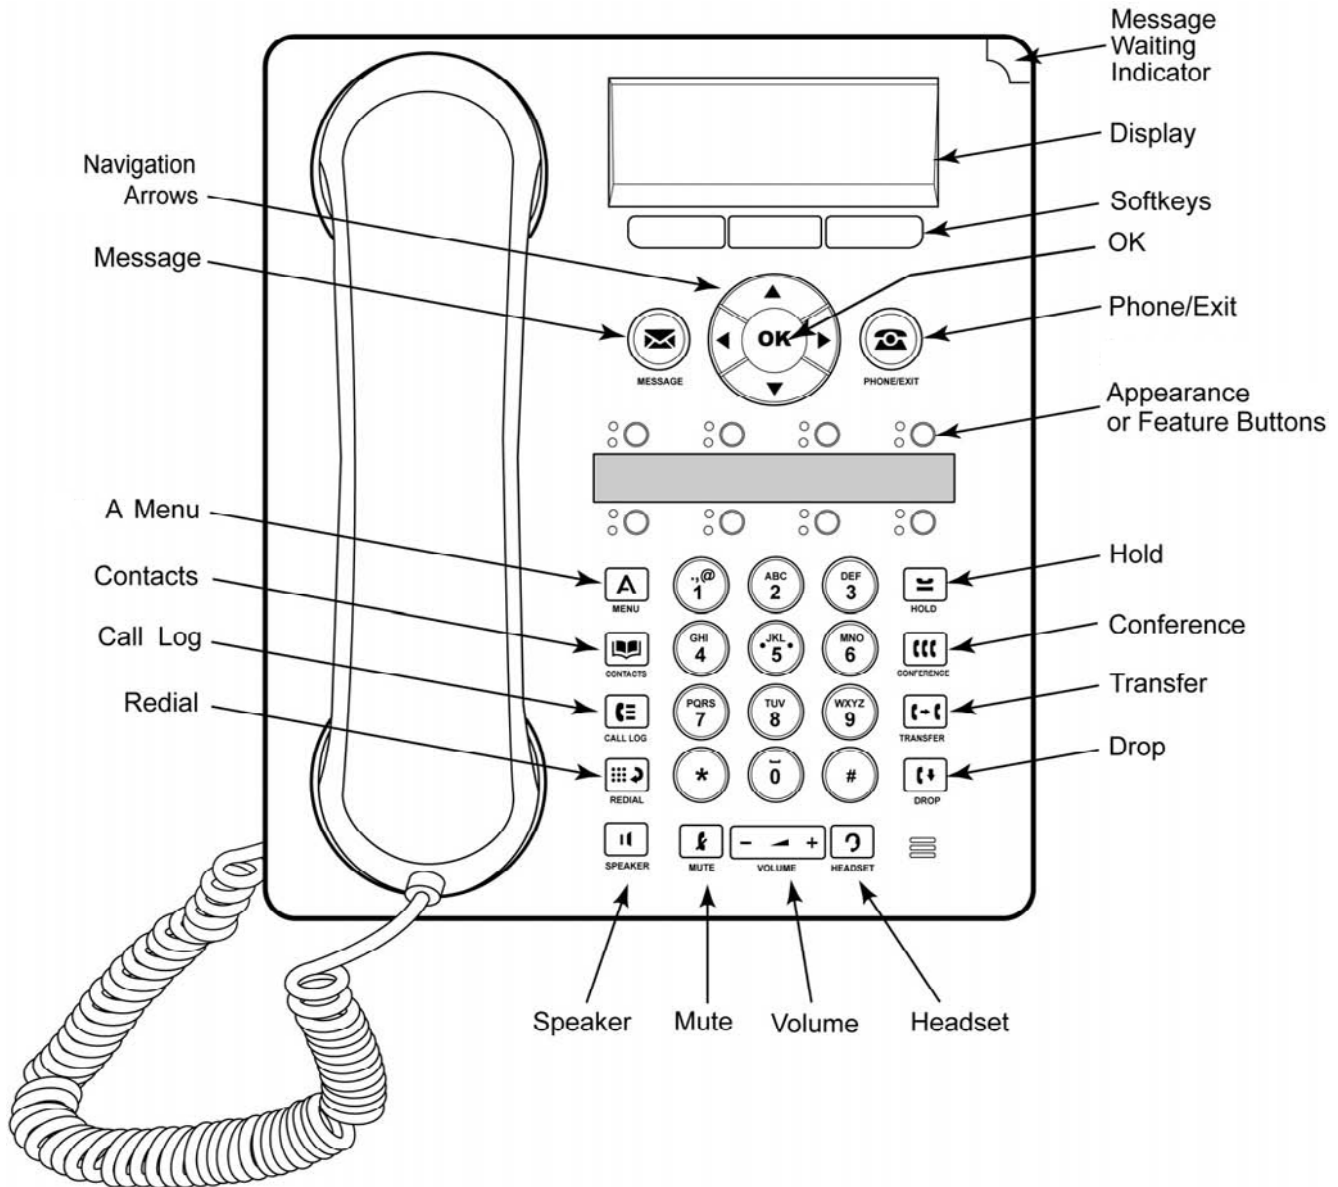
## 1.1 Important Safety Information

- **!** Warning: This handset may pickup small metal objects such as metal pins or staples.
- During a power surge, EFT or ESD, calls may be dropped. After a power surge, EFT or ESD, it is normal for the phone to restart.
- Using a cell phone, mobile phone, GSM phone or two-way radio in close proximity to an Avaya telephone might cause interference.
- The phone should not be connected directly to the outdoor telecommunication network.



## 1.2 1408 and 1608 Phones

The diagram below shows the main features of a 1408 or 1608 phone.

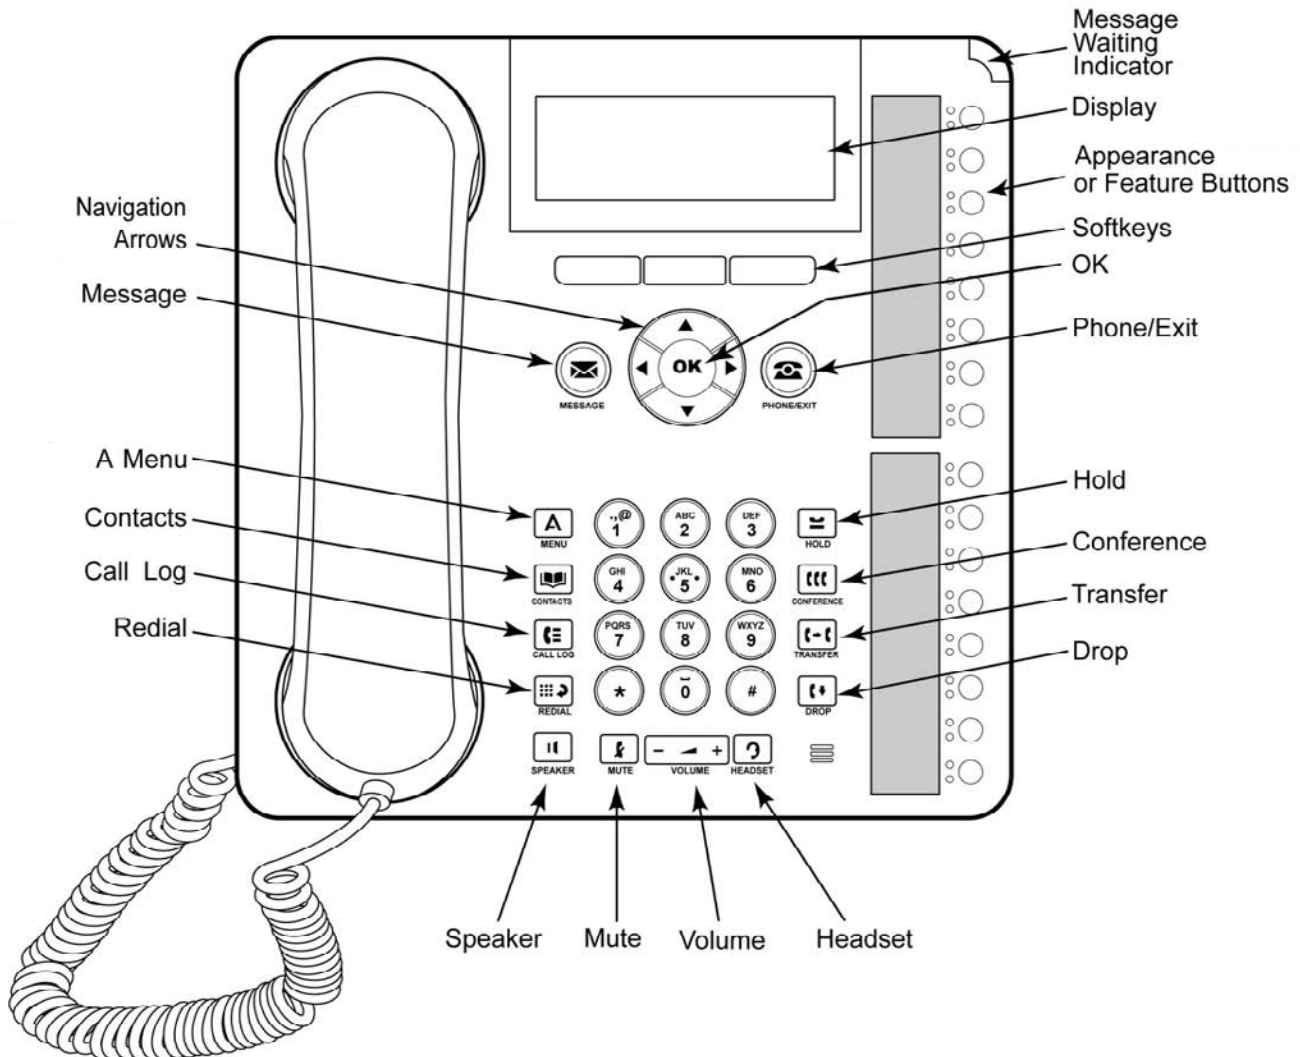


- This phone has 8 programmable buttons.
  - By default the first 3 buttons are used as appearance buttons for calls you make and receive. Your system administrator can configure additional appearance buttons.
  - Any button not configured as appearance buttons can be configured for a range of telephone system features. These are called feature buttons. Your system administrator can do this or, for a limited number of functions, you can do this using the phones [self-administration](#) [118] menu.
- The phone includes an integral stand that can be flipped to either of two positions without needing any tools. When used in the upright position, a plastic peg in the earpiece rest area for the handset can be reversed if a more secure grip on the handset when not in use is required.
- The phone includes a handsfree speaker and microphone for operation as a handsfree speakerphone. The speaker is located under the handset. The microphone is located at the bottom right of the keypad.
- The phone includes a headset socket for connection of phone headsets.
- The 1608 and 1616 phones are connect to the telephone system via the IP data network and so have some additional options, see [IP Phone Features](#) [157].



## 1.3 1416 and 1616 Phones

The diagram below shows the main features of a 1416 or 1616 phone.

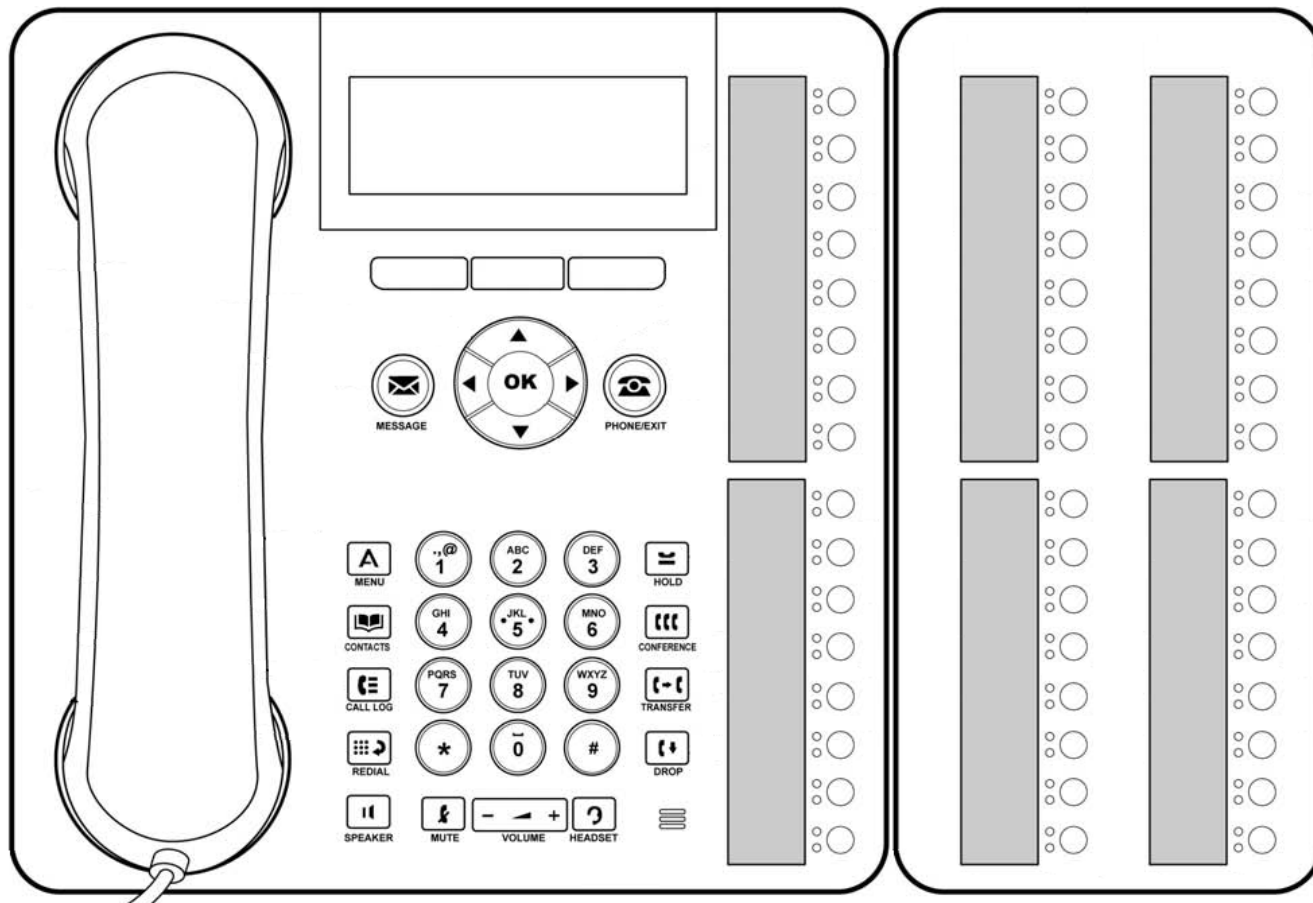


- The display angle can be adjusted for optimal viewing.
- This phone has 16 programmable buttons.
- The phone also supports up to 3 add-on BM32 button modules, each providing an addition 32 buttons.
  - By default the first 3 buttons are used as appearance buttons for calls you make and receive. Your system administrator can configure additional appearance buttons.
  - Any button not configured as appearance buttons can be configured for a range of telephone system features. These are called feature buttons. Your system administrator can do this or, for a limited number of functions, you can do this using the phones [self-administration](#) <sup>[15]</sup> menu.
- The phone includes an integral stand that can be flipped to either of two positions without needing any tools. When used in the upright position, a plastic peg in the earpiece rest area for the handset can be reversed if a more secure grip on the handset when not in use is required.
- The phone includes a handsfree speaker and microphone for operation as a handsfree speakerphone. The speaker is located under the handset. The microphone is located at the bottom right of the keypad.
- The phone includes a headset socket for connection of phone headsets.
- The 1608 and 1616 phones are connect to the telephone system via the IP data network and so have some additional options, see [IP Phone Features](#) <sup>[15]</sup>.

## 1.4 Button Modules

The 1416 and 1616 phones can support additional units called button modules. Each button module provides the phone with an additional 32 buttons which can be used as [appearance buttons](#) [19] and or [feature buttons](#) [116].

Up to 3 button modules can be attached to a 1416 or 1616 phone. However the number of button modules supported by the telephone system may be limited by the total number of button modules attached to other phones on the telephone system.



- Do not connect or disconnect a button module yourself. Your system administrator will arrange this if necessary. Failure to connect and restart the equipment in the correct order may cause the phone to not function correctly.
- The button module used for 1416 phones is not interchangeable with that used for 1616 phones and vice versa.

## 1.5 Phone Keys

The following keys are found on the phone:

Key	Description
	Soft Keys - These 3 keys below the display have variable functions. When the key is active, its function is indicated by the text label above it. The left hand key is usually linked to the OK key.
	Message - This key is used to access your voicemail system. By default this uses a series of menus on your phone's display.
	Navigation Keys - Press the ▲ up and down ▼ arrow keys to scroll through lists. The ↓ ↕ ↑ arrow icons indicate where you are in a list. In some menus, you can also use the ◀ left and right ▶ arrow keys to enter and exit different levels of the menu. A menu option that accesses a sub-menu is indicated by the ... dots (ellipsis) icon after its name. In some menus, the ◀ and ▶ symbols in the display indicate a value that can be changed by pressing the ◀ left and right ▶ arrow keys.
	OK - The OK key normally matches the function offered by the left hand soft key below the screen.
	PHONE/EXIT - This key is used to exit any menu you are in and return to the appearance buttons menu. During a call it can also be used to toggle the options displayed on the appearance menu.
	MENU - This key is used to access a menu for phone settings and information.
	<a href="#">CONTACTS</a> <sup>[64]</sup> - This key is used to display the various directories (personal and shared) of names and telephone numbers to which you have access.
	<a href="#">CALL LOG</a> <sup>[72]</sup> - This key displays a record of you most recent answered, missed and outgoing calls. The button is illuminated when you have new missed calls.
	<a href="#">REDIAL</a> <sup>[42]</sup> - This key is used to either redial the last call you made or to show a list of the last calls you made from from which you can select the number to redial.
	<a href="#">HOLD</a> <sup>[47]</sup> - This key is used to put the call you are currently talking to on hold.
	<a href="#">CONFERENCE</a> <sup>[56]</sup> - This key is used to start a conference call and to add callers to an existing conference.
	<a href="#">TRANSFER</a> <sup>[52]</sup> - This key is used to transfer calls to another number.
	<a href="#">DROP</a> <sup>[36]</sup> - Press the Drop key to drop the active call. It can also be used to redirect a ringing call to voicemail. While on a conference call, you can press the Drop key to drop a person from the conference call.
	<a href="#">VOLUME</a> <sup>[14]</sup> - Press + plus or – minus on the Volume key to adjust the volume of the incoming call. Separate volumes can be adjusted for the ringer, handset, headset and speaker.
	<a href="#">HEADSET</a> <sup>[60]</sup> - This key is used to answer and end calls using a headset connected to the phones headset socket. The button is lit when you are connected to a call using the headset.
	<a href="#">MUTE</a> <sup>[38]</sup> - This key can be used to mute your speech to the currently connected call. The button is lit while mute is active.
	<a href="#">SPEAKER</a> <sup>[62]</sup> - This key is used to answer and end calls using the phone's handsfree speaker and microphone. The button is lit when you are connected to a call handsfree.
	These keys have two roles: <ul style="list-style-type: none"> <li><a href="#">Appearance Keys</a> <sup>[19]</sup> - These buttons represent calls that you can make or receive.</li> <li><a href="#">Feature Buttons</a> <sup>[11]</sup> - Those keys not configured as appearance keys can be used for other functions.</li> </ul>

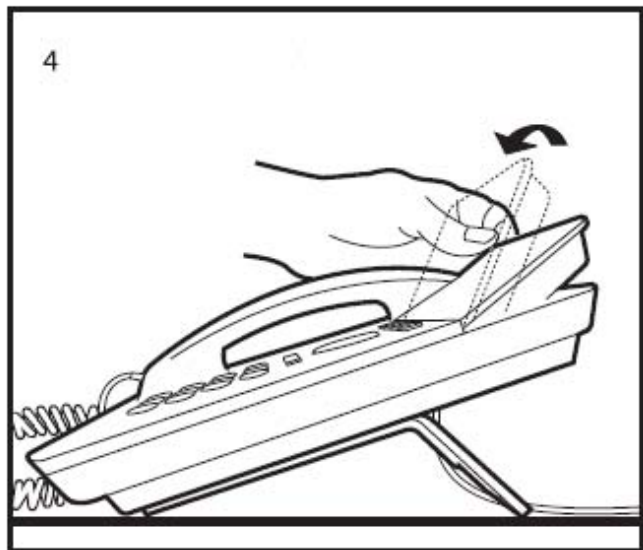
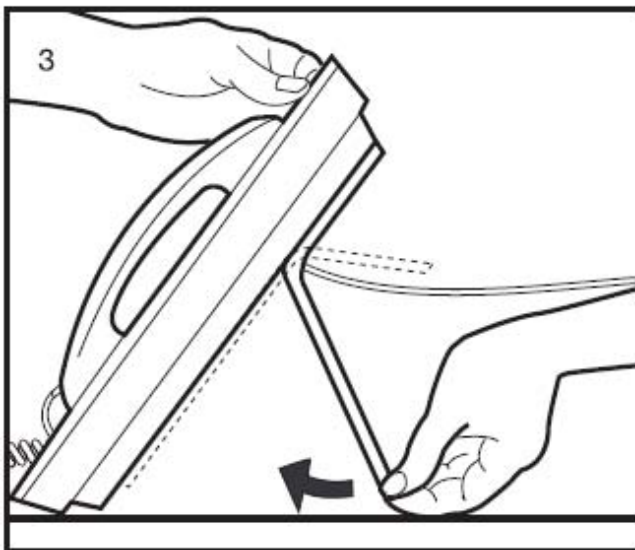
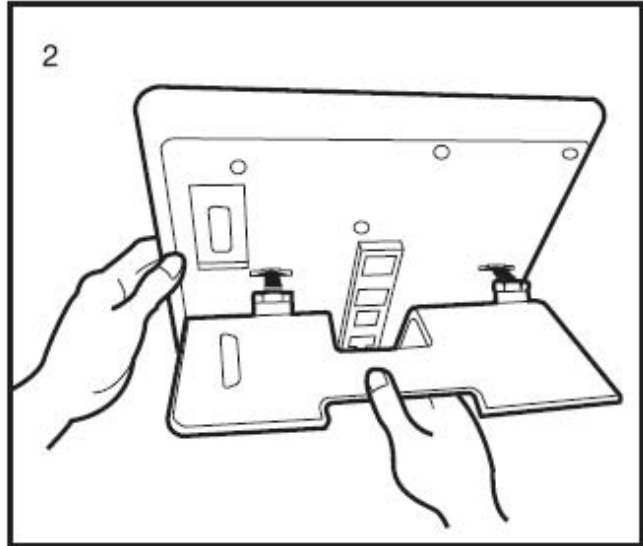
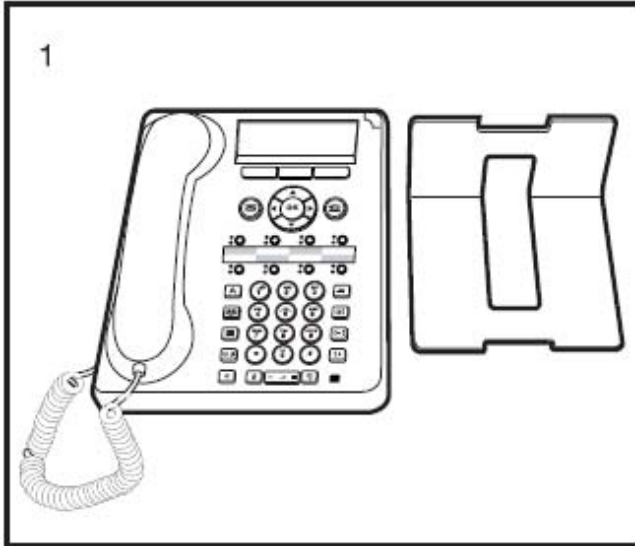


## 1.6 The Phone Stand

The phones all include a two-position stand that clips to the base of the phone as shown below. Once attached the stand can be used in either position to change the angle of the phone.

When changing the position of the stand, be sure to check that the stand has locked into the chosen position. A small plastic peg is located just under the phone's handset. This peg can be reversed to more securely anchor the handset when the stand places the phone in an upright position.

On the 1416 and 1616 phones, the angle of the phone display can also be adjusted as shown below.



## 1.7 Labels

Next to each call/line appearance button and feature button is a paper label. The label identifies the call/line appearance number or the feature that has been programmed on the button by your system administrator. You can remove the labels if you want to change a label or write on a blank one. Printed labels are also available for your telephone. See your system administrator for more information.


## 1.8 IP Phone Features (1608 and 1616)

The 1608 and 1616 phones connect to the phone system using an IP connection and support a number of additional features:

- The phone uses a 10/100 Ethernet connection to connect to the telephone system via the IP network.
- The phone includes a PC pass through 10/100 Ethernet port that can be used to also connect a computer to the network through the same connection as the phone. Use of this port can be disabled by the system administrator if not supported.
- The phone may be powered from the network if Power over Ethernet (PoE) is available. Otherwise the phone needs its own power supply unit.

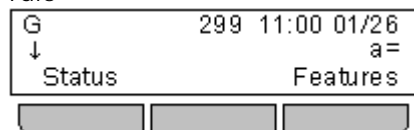



# 1.9 The Main Phone Menus

The main menus are detailed below. You can move between them using the  PHONE key. You can do this even during a call including when a call is alerting. In addition the menus are accessible from the call appearance menu by pressing the Status and Features soft keys when they are displayed.

## The Appearance Menu

Idle



This menu is used to display information about the  buttons that have been configured for appearance functions. These will normally be the first 3 button on the phone but the system administrator can configure additional buttons.

Using the  up and down  arrow keys you can scroll through the details of each of the buttons.

Active

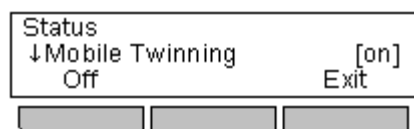


The display for buttons that currently have a call in progress will show details of the associated call.

The display for buttons that are idle will show the default label for the button and also soft key labels for accessing the other main menus.

Those buttons that have not been configured as appearance buttons can be used as [feature buttons](#) <sup>[116]</sup>.

## The Status Menu



The Status menu is not always visible. It is shown when you have any special call routing features active. For example do not disturb switched on.

It is also shown if the system administrator has given you the rights to change the status of your hunt group memberships or to change the service status of the hunt groups.

A summary of the menu options is shown in the [Status Menu diagram](#) <sup>[171]</sup>.

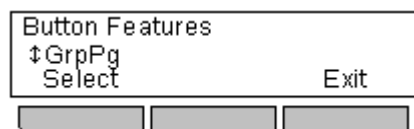
## The Features Menu




 
 
The Features menu is used to access and configure range of your user settings. The system administrator can control some of the options that will be available to you within the menu. Typically these are settings stored by the telephone system which will be applicable even if you login at another phone.

A summary of the menu options is shown in the [IP Office Features menu diagram](#) <sup>[167]</sup>.

## The Button Features Menu




Those  buttons not configured by the system administrators as appearance buttons can be used for other special features.

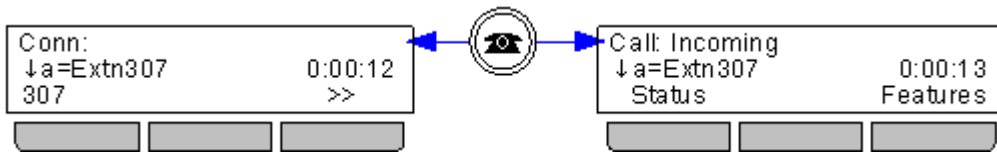
The button feature can be accessed by pressing the appropriate button. However they can also be accessed through the Button Features section of the Features menu (press the Features soft key and selecting Button Features). The  up and down  arrow keys can then be used to scroll through the programmed buttons. The associated button will briefly flash its red lamp.


The action of each button is normally set by the system administrator. However you can also use the [self-administer menu](#) <sup>[116]</sup> to select and assign actions to the buttons.



Switching Menus

With a call connected, you can still access the other main menus. Press the  PHONE key to toggle between the normal appearance menu or one that lists the other menus accessible.






You can also use the  left arrow key to switch between the Appearance menu , Features menu and Button Features menu.



## 1.10 Other Menus

In addition to the [main phone menus](#)<sup>[16]</sup>, there are a number of additional menus which are accessed by pressing specific keys.




### - [The Redial Menu](#)<sup>[42]</sup>


Redial		
↓Extn 307	307	16:12 01/26
Call	Details	Exit
		

This menu is accessed by pressing the  key. It shows a list of up to the 10 last outgoing calls that you have made.

You can [configure your phone](#)<sup>[43]</sup> to simply redial the last number dialed in which case the menu is not shown.

### - The A Menu

Menu: Top		
↓Screen/Sounds...		
Select		Exit
		

Pressing the  MENU key accesses a menu that can be used to control various phone settings. These are mainly settings stored by the phone rather than user settings that move with you.

The [Phone A-Menu diagram](#)<sup>[172]</sup> shows a summary of the menu options.

### - [The Contacts/Directory Menu](#)<sup>[64]</sup>




Directory: ◀All▶		
DIAL NAME		
List	New	Exit
		


This menu is accessed by pressing the  key. It is used to display names and numbers that you can then use for making calls.

The directory includes names stored for use by all users, names stored for use by just you and the name and numbers of all the other users and groups on the phone system.

The [Contact Menu](#)<sup>[175]</sup> diagram shows a summary of the menu options.

### - [The Call Log Menu](#)<sup>[72]</sup>

Call Log: ▶All▶		
↓Extn201		15:19 01/26
Call	Details	More
		




This menu is accessed by pressing the  key. The call log you see is a call log stored on the telephone system. If you login at another 1408, 1416, 1608 or 1616 phone, your call log moves with you.


Your call log contains your 10 most recent answered calls, 10 most recent calls you made and 10 most recent missed calls.

If configured by the system administrator, it can also include calls missed by hunt groups of which you are a member.

The [Call Log](#)<sup>[174]</sup> menu diagram shows a summary of the menu options.

### - [The Visual Voice Menu](#)<sup>[78]</sup>

Visual Voice		
↓Listen		4/0/1
Select	-	Exit
		

This menu is accessed by pressing the  key. It is used to access the voicemail system and to then play messages in your voicemail mailbox, record and send messages to other users and to change various mailbox settings.

The [Visual Voice menu diagram](#)<sup>[176]</sup> shows a summary of the menu options.

## 1.11 Appearance Buttons/Menu

Appearance buttons are used to represent calls made and received by you and other users on the telephone system. They are configured by your system administrator. Normally your first 3 buttons are call appearance buttons but additional buttons can be configured as appearance buttons.


There are 4 different types of appearance keys that your system administrator can configure:

- [Call Appearance Buttons](#)<sup>[21]</sup>  
These represent ordinary phone calls. Each call appearance that you have can be used to make and or receive calls. By default you normally have 3 call appearance keys and no other appearance keys.
- [Bridged Appearance Buttons](#)<sup>[23]</sup>  
These appearance keys each match a specific call appearance key of another user. They allow you to answer the other user's calls on the matching call appearance or to make a call that the other user can then pickup using their matched call appearance.
- [Call Coverage Buttons](#)<sup>[25]</sup>  
These appearance keys represent another user. When that other user has any calls alerting unanswered, the call coverage key for that user will start alerting and can be used to answer the call.
- [Line Appearance Buttons](#)<sup>[27]</sup>  
These represent specific phone lines connected to the telephone system. You can use the button to make calls using that line or to answer calls on that line. Several users can have line appearance keys that represent the same line. Your phone's display and the key lamps will indicate when the line is being used by other users as well as by yourself.

### Appearance Button Display/Menu

Idle

G	299 11:00 01/26	a=
↓		
Status		Features

This menu is used to display information about the  buttons that have been configured for appearance functions. These will normally be the first 3 button on the phone but the system administrator can configure additional buttons.

Using the ▲ up and down ▼ arrow keys you can scroll through the details of each of the buttons.

Active

Call: Incoming		
↓ a=Extn307	0:00:12	
307	>>	

The display for buttons that currently have a call in progress will show details of the associated call.

The display for buttons that are idle will show the default label for the button and also soft key labels for accessing the other main menus.

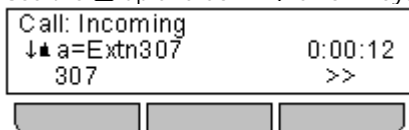
Those buttons that have not been configured as appearance buttons can be used as [feature buttons](#)<sup>[116]</sup>.






 

## 1.11.1 Using the Appearance Menu

These icons are shown to indicate the status of the call on the currently displayed appearance button:

1. Use the ▲ up and down ▼ arrow keys to scroll through details of the current call on each appearance button.



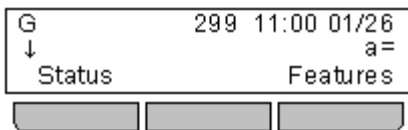
2. If there is currently a call on the appearance button, an icon will be displayed indicating the status of the call.

-  Alerting  
The call is alerting your phone.
-  Connected  
The call is the currently connected call to which you are talking.
-  On Hold  
The call is on hold.
-  Held Elsewhere  
The call has been put on hold by someone else who answered the call using an appearance button on their phone.
-  Conference  
The call is a conference call.

3. A >> double-arrow at the bottom left indicates that there are [soft key options](#) <sup>[32]</sup> available that could be applied to the call. To access these, press the >> double-arrow soft key and select the required function.

## 1.11.2 Phone Status Letters

The series of letters that appear in the top left of the display are used to indicate the status of various features.



- B = Barred  
A B is shown on your phone's display when the system administrator has set you to outgoing call barred status. You will only be able to make internal calls while this is applied.
- D = Diverting (Forwarding) Calls  
A D is shown on your phone's display when you have forward unconditional enabled.
- G = Group Member (In Group)  
A G is shown on your phone's display when have been configured as a member of a hunt group and your membership is enabled. While this is the case, you may receive calls targeted to the hunt group.
- N = No Calls (Do Not Disturb)  
An N is shown on your phone's display when you have do not disturb enabled.
- O = Out of Service  
An O is shown on your phone's display when any of the groups of which you are enabled as a member is set to night service mode. In that mode calls to that group are diverted to its fallback if set or otherwise to voicemail if available.
- T = Twinned  
A T is shown on a phone's display if it is internally twinned with your phone. Calls to you will alert on both phones and can be answered by you at either phone.
- R = Resilience  
An R is shown on your phone's display your phone is working in resilience mode. This is used when there may have been a problem with the telephone system to which your phone was registered and another IP Office system is currently providing support for your phone. In this mode, some features may not be available and calls may be routed differently.
- S = System Alarm  
If configured as a [system administrator](#) <sup>[158]</sup>, an S in the phone's display indicates a [system alarm](#) <sup>[164]</sup>.



 








### 1.11.3 Call Appearance Buttons

Call appearance buttons are used to display calls to and from your phone. By having several call appearance buttons, you are able to answer and make several calls, switch between calls and perform other actions.

When all your call appearance buttons are in use, any further calls to your number follow your forward on busy setting if set or otherwise go to voicemail if available.

#### Call Appearance Button Lamps

The following lamp states are used by appearance buttons configured to be call appearance buttons.

Button Lamps	State
 Red off. Green off.	Idle The call appearance is not in use and is not currently selected.
 Red on. Green off.	Idle + Selected The call appearance is not in use but is the current selected button that will be used if the user goes off hook.
 Red off. Green slow flash.	Alerting The matching call appearance is alerting for an incoming call. This is accompanied by ringing. If the user is already on a call, only a single ring is given.
 Red on. Green slow flash.	Alerting + Selected As above but Ringing Line Preference has made this the user's current selected button.
 Red on. Green on.	In Use Here The user has a call connected on the call appearance or is dialing.
 Red off. Green on.	In Use Elsewhere The call appearance button is in use on a bridged appearance.
 Red off. Green fast flash.	On Hold Here The call has been put on hold by this user.
 Red off. Green flash.	On Hold Elsewhere A call on a bridged appearance button matched to the call appearance has been put on hold. Calls on a call appearance that are put on hold by another user will continue to show connected lamp status, though the phone display will indicate a held call.
 Red off. Green broken flash.	Inaccessible The button pressed is not accessible. The call is still dialing, ringing or cannot be bridged into.



## Call Appearance Button Display

G	299 11:00 01/26	a=
↓		
Status		Features

Idle  
Indicates that the call appearance is available to be used to make a call or to receive an incoming call.

Call: Incoming		0:00:12
↓▲ a=Extn307		>>
307		

Alerting  
This call appearance is alerting with an incoming call. You can press the >> double-arrow soft key to select the I ignore or ToVrn soft key options.

Call		0:00:12
↓[ a=Mark		>>
201		

Outgoing Call  
You have made a call with the appearance but it is not yet connected.

Conn:		0:00:22
↓[ a=Mark		>>
201		

Connected  
The appearance is the one with which you are currently talking.

Held:		0:00:22
↓[ a=Mark		>>
201		

Held  
The call that you made or received on the call appearance has been put on hold by the other party.

Call: On-Hold		0:00:22
↓↵ a=Mark		>>
201		

Holding  
You have put the call on hold.



## 1.11.4 Bridged Appearance Buttons









A bridged appearance button shows the state of one of another user's call appearance buttons. It can be used to answer or join calls on that other user's call appearance button. It can also be used to make a call that the call appearance user can then join or retrieve from hold.

- When the user's call appearance button alerts, your matching bridged appearance button also alerts. The bridged appearance button can be used to answer the call on the call appearance button user's behalf.
- When the call appearance button user answers or makes a call using that call appearance, your matching bridged appearance button show the status of that call, for example connected, on hold, etc. The bridged appearance button can be used to retrieve the call if on hold or to join the call if active.
- Bridged appearance buttons are not supported between users on different systems in a [Small Community Network](#) <sup>[185]</sup>.

If you have any bridged appearance and or call coverage buttons, you can [set the type of ringing \(coverage ring\)](#) <sup>[132]</sup> that should be used when a call alerts on any of those buttons. The options are to use normal ringing, a single non-repeated ring (abbreviated ring) or no ring. The coverage ring setting is only used if you do not already have a connected call. If you already have a connected call in progress, the shorter of your coverage ring and the system administrator set attention ring settings is used.

### Bridged Appearance Button Lamps

The following lamp states are used by appearance buttons configured to be bridged appearance buttons.

Button Lamps	Bridge Appearance Button State
 Red off. Green off.	Idle The bridged appearance is not in use.
 Red off. Green slow flash.	Alerting The matching call appearance is alerting for an incoming call. This is accompanied by ringing. If the user is already on a call, only a single ring is given.
 Red on. Green slow flash.	Alerting + Selected As above but Ringing Line Preference has made this the user's current selected button.
 Red off. Green on.	In Use Elsewhere The matching call appearance button is in use.
 Red on. Green on.	In Use Here The user has made a call or answered a call on the bridged appearance, or bridged into it.
 Red off. Green fast flash.	On Hold Here The call has been put on hold by this user.
 Red off. Green flash.	On Hold Elsewhere The call on that call appearance has been put on hold by another user.
 Red off. Green broken flash.	Inaccessible The button pressed is not useable. The call is still dialing, ringing or cannot be bridged into.



## Bridged Appearance Button Display

G 299 18:26 01/03  
 ↑ Extn 201 a=

Idle  
 By default, a bridged appearance is labeled with the name of the user and the label of their call appearance button that your bridged appearance matches.



G 299 18:27 01/03  
 ↑ [ Extn201 a=  
 Join

In Use  
 The bridged appearance will show when the matching call appearance is in use on a call. The Join soft key, if displayed, indicates that you can intrude into the call to make it a conference call by pressing the soft key or the bridged appearance button.



Call: Incoming  
 ↑ Extn201 a=Extn20 0:00:23  
 203 >>

Ringing  
 The bridged appearance will shown when the matching call appearance is being presented a call to answer. Typically just a single ring is given on your phone, however that can be changed by the system administrator. You can answer the call by pressing the bridged appearance button.



Dial: Number?  
 ↑ [ Extn201 a=  
 Dir

Making a Call  
 If idle (see above), you can press the bridged appearance to make a call. The matching call appearance will indicate that it is in use and the other user can join the call by pressing that call appearance.



Call: On-Hold  
 ↑ Extn201 a=  
 Pickup

Held Call  
 If the other user puts their call on the matching call appearance on hold, your bridged appearance will indicate the held call. You can retrieve the held call by pressing the Pickup soft key or pressing the bridged appearance button.



## 1.11.5 Call Coverage Buttons






Each call coverage button is associated with another user on your telephone system. The button allows you to be alerted when that user has an unanswered call still ringing. You can view the details of the call and answer it if required.

The settings of the user being covered control how long it rings at their phone before it also starts alerting on your call coverage button for that user. Call coverage appearance buttons are not supported between users on different systems in a Small Community Network.

If you have any bridged appearance and or call coverage buttons, you can [set the type of ringing \(coverage ring\)](#)<sup>[132]</sup> that should be used when a call alerts on any of those buttons. The options are to use normal ringing, a single non-repeated ring (abbreviated ring) or no ring. The coverage ring setting is only used if you do not already have a connected call. If you already have a connected call in progress, the shorter of your coverage ring and the system administrator set attention ring settings is used.

### Call Coverage Button Lamps

The following lamp states are used by appearance buttons configured to be call coverage buttons.

Button Lamps		Call Coverage Button State
	Red off. Green off.	Idle The button is not in use.
	Red off. Green slow flash.	Alerting The call coverage is alerting for an unanswered call at the covered user's phone. This is accompanied by ringing. If the user is already on a call, only a single ring is given.
	Red on. Green slow flash.	Alerting + Selected As above but Ringing Line Preference has made this the user's current selected button.
	Red on. Green on.	In Use Here The user has answered the call requiring coverage.
	Red off. Green fast flash.	On Hold Here The covered call has been put on hold by the call coverage button user.



## Call Coverage Button Display

G	299	18:27 01/03
↑	Extn201 Cov	

Idle  
By default the display shows the name of the user being covered and Cov. In this state the button cannot be used to make calls or perform other actions.

Call: Incoming		
↑▲Extn201 Cov Ext	0:00:23	
203	>>	

Alerting  
If the covered user has any alerting call, when their call coverage time is reached the call will also be alerting on your call coverage button for that user. You can answer the call by pressing the button.

Call:		
↑[ Extn201 Cov Ext	0:00:23	
203	>>	

Connected  
When you use the call coverage button to answer the call, it becomes your call.

Call: On-Hold		
↑◀Extn201 Cov Ext	0:00:03	
203		

On Hold  
When you put the call on hold, the

Held:		
↑[ Extn201 Cov Ext	0:00:23	
203		

Held  
If the call is from another internal user and they put the call on hold, the held state is indicated. You can retrieve the call from hold by pressing the call coverage button again.



## 1.11.6 Line Appearance Buttons










Line appearance buttons allow you to make and receive calls on a specific telephone line connected to your telephone system. The button also allows you to see when the line is in use by other users.

For incoming calls, the telephone system still determines the destination for the call. That may be a user or group. However, if you have a line appearance button for the line, you will see that there is a call alerting and can answer it if required.

- **Private Lines**  
Special behaviour is applied to calls where the user has both a line appearance for the line involved and is also the Incoming Call Route destination of that call. Such calls will alert only on the Line Appearance button and not on any other buttons. These calls will also not follow any forwarding.

### Line Appearance Button Lamps

The following lamp states are used by appearance buttons configured to be line appearance buttons.

Button Lamps	Line Appearance Button State
 Red off. Green off.	Idle The associated line is not in use.
 Red on. Green off.	Idle + Selected The associated line is not in use but the button is the user currently selected button.
 Red off. Green slow flash.	Alerting The line is ringing at its incoming call route destination. This is accompanied by ringing. If the user is already on a call, only a single ring is given.
 Red on. Green slow flash.	Alerting + Selected As above but Ringing Line Preference has made this the user's current selected button.
 Red off. Green on.	In Use Elsewhere The line is in use.
 Red on. Green on.	In Use Here The user has answered the line, made a call on it or bridged into the call on the line.
 Red off. Green fast flash.	On Hold Here The call on the line has been put on hold by this user.
 Red off. Green flash.	On Hold Elsewhere The call on the line has been put on hold by another appearance button user.
 Red off. Green broken flash.	Inaccessible The button pressed is not accessible. The call is still dialing, ringing, routing or cannot be bridged into.





# Chapter 2.

# Making Calls



---

## 2. Making Calls

If you are not already on a call, then you can just dial the number. The currently selected appearance button, shown by a red lamp, will be used for the call.

Alternatively, you can press a specific appearance button in order to make a call using that button. Using this method you can press the Dir soft key to [select a number from the directory](#)<sup>[66]</sup>.

If the number you dial matches a user or group on the telephone system, the directory name of the user or group is shown and the call starts altering the target.

If the call is to a user, and they do not answer, press the >> double-arrow soft key to access additional options. For example, to set a callback, press the AutCB soft key.

If the call is external and no external line is currently available, the message WAITING FOR LINE is displayed.

The display will indicate when the call is connected to the destination or to an outgoing line.




## 2.1 En-Bloc Dialing

By default, when you start dialing a number on your phone, the phone immediately connects to the telephone system and starts passing the digits you dial to the phone system. You cannot correct the digits you have already dialed except by ending the call and starting again. Also if you pause dialing for too long the phone system may think that you have finished dialing and will attempt to connect the call using only the digits you have completed dialing so far.

En-bloc dialing allows you to compose and edit the number to dial on your phone's display before it is sent to the phone system to be dialed.










Through the phone's menus you can select whether you want to use traditional or en-bloc dialing when making calls. Your chosen setting is then applied whenever you are using a phone that supports en-bloc dialing.

### Dialing a Number Using En-Bloc Mode

1. With no connected call on the phone, start dialing. Do not lift the handset or select headset or speaker before dialing.
2. You can use the  right arrow key to delete the previous digit dialed if you need to correct the number.
3. When you have completed the number as required, you can select how you want to make the call.
  - Lift the handset to start a call using the handset.
  - Pressing the Call soft key or OK button to start the call using the phone's [default handsfree audio path](#)<sup>[142]</sup> (speaker or headset). You can also press one of your idle call appearance to make the call using that appearance.
  - Press the Headset button to start the call on a headset connected to your phone.
  - Press the Speaker button to start the call on your phone's handsfree speaker.

### Enabling/Disabling En-Bloc Dialing

You can enable or disable your en-bloc dialing setting through the phone's Features menu.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the  up and down  arrow keys to scroll the display to the option Call Settings.
3. Press the Select soft key or the OK button or the  right arrow key.
4. Use the  up and down  arrow keys to scroll the display to the option En-Bloc Dial.
5. Use the  left and right  arrow keys to change the setting or use the indicated soft key.



---

## 2.2 Call Soft Key Options

When making, answering and during a call, a >> double-arrow soft key appears on the display, it indicates that there are additional options that you can access. The options will vary according to the type of call and system features available to you.

- **Account**  
Enter an account code to associate with the call.
- **Answer**  
Answer a page call, turning it into a normal call.
- **AutCB**  
Set an automatic callback on the user that you have called but who has not answered. When they next end a call, the telephone system will call you and when answered, will automatically make a call to the user.
- **Complete**  
Complete the transfer of a held call. A Cancel option is also shown which will end the transfer attempt.
- **Dir**  
Access the directory in order to select a number by name.
- **Drop**  
End the call.
- **Ignore**  
Quiet the ringer for the current alerting call. The call will continue alerting until either answered or it goes to voicemail.
- **Pickup**  
Answer the call that is held or alerting another user.
- **ToVM**  
Send an alerting call to your voicemail.




## 2.3 Calling a Person from the Contacts List

1408 1416 1608 1616

You can use any directory contacts to make a call. You can also use the directory in almost any telephone function where you need to select the number for a destination, for example during transfers.

1. Access the contacts directory:

- a. Press the  CONTACTS key. The directory menu is displayed.
- b. Use the ◀ left and right ▶ arrow keys to select which type of directory entries you want displayed.
  - All  
All directory entries.
  - External  
Directory entries stored by the telephony system for all users to use.
  - Groups  
The names and numbers of hunt groups on the telephone system.
  - Users  
The names and numbers of other users on the telephone system.
  - Personal  
Your own personal directory entries.
- c. Either press the List soft key to display all the directory entries or start dialing the name to display only matching entries.
- d. Use the ▲ up and down ▼ arrow keys to scroll through the matching entries. To return to the start to match a different directory selection, press the Clear soft key.

2. When the required entry is displayed, press Call.


3. Continue as for a normally dialed call.

## 2.4 Calling a Person from the Call Log

1408 1416 1608 1616

You can use the call log to make calls to the number included in the currently selected call record.

1. Access the call log.


- a. Press the  CALL LOG button.
- b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
- c. Use the ◀ left and right ▶ arrow keys to select which call log records you are viewing. The options are *All*, *Missed*, *Answered* and *Outgoing*.
  - If you have any new missed call records (ie. the CALL LOG button lamp is illuminated) the call log will open showing your missed calls.
- d. Use the ▲ up and down ▼ arrow keys to scroll through the records.

2. Press the Call soft key or OK to call the number displayed in the call record.



---


## 2.5 Redialling a Previous Number

Your phone's  REDIAL key can work in one of two ways, set by its [redial mode setting](#) <sup>[43]</sup>.

### List Mode

**1408 1416 1608 1616**


This redial method is used when your phone's [redial mode](#) <sup>[43]</sup> is set to *List*.

1. Access the redial list.
  - a. Press the  Redial key. The list of outgoing calls is displayed.
  - b. Use the ▲ up and down ▼ arrow keys to scroll through the 10 most recent outgoing calls.
2. Press the Call soft key or OK to call the number displayed in the call record.
3. Continue in the same way as for a normal dialed call.

### One Number Mode

**1408 1416 1608 1616**

This redial method is used when your phone's [redial mode](#) <sup>[43]</sup> is set to *One*.

1. Press the  REDIAL key.
2. The number for the most recent outgoing call in your personal call log is redialed.
3. Continue in the same way as for a normal dialed call.

## 2.6 Making a Page Call

**1408 1416 1608 1616**

In order to make page calls you must have access to a paging short code provided by the system administrator or to a [paging feature button](#) <sup>[12b]</sup>.

If the dialing short code or the paging button have been pre-configured with a number, the user or group at that number will be paged if available.

The dialing short code can be configured to accept the number of the user or group to page when dialed. Similarly a paging button can be set to allow number entry when pressed as follows:

1. Press the paging button.
2. Dial the number of the user or group you want to page.
3. When the dialing is completed, the page call is made.
  - If the destination is a user and they already have a call connected, they cannot be paged. If the destination is a group which is not in service or has no available members, it cannot be paged.

### Feature Button


The [self-administer function](#) <sup>[11b]</sup> can be used to assign a feature button as a page button using the [Group Paging](#) <sup>[12b]</sup> action.



## 2.7 Withholding Your Number

1408 1416 1608 1616

You can select to withhold your number on external calls. Note that this option may not be supported in all situations. It may depend on the configuration of your phone system and options supported by your telephone line provider.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Call Settings.
3. Press the Select soft key or the OK button or the ► right arrow key.
4. Use the ▲ up and down ▼ menu keys to scroll the menu to Withhold Number.
5. Use the ◀ left or right ▶ arrow keys to change the current setting or press the indicated soft key.




---

## 2.8 Adjust the Call Volume

1408 1416 1608 1616

While talking, you can adjust the volume of the incoming call. The volume is separately adjusted for which every device you are currently using (handset, headset or speaker).


1. With the call connected, press the  key.
2. Use the + plus and – minus keys to adjust the volume.
3. The display will return to normal after a few seconds.

## 2.9 Muting a Call

1408 1416 1608 1616




Muting a call stops the caller from hearing you. However you can still hear them.

- The mute setting remains active even if you switch between calls using hold and or appearance buttons.
- If you change how you are listening to the call, for example switching from the handset to the speaker, the mute setting is canceled.

1. To activate mute, press the  MUTE key. The button will be lit while mute is active.
2. To switch mute off, press the key again.

## 2.10 Ending Calls

1408 1416 1608 1616

- The  DROP key can be used to end the current call to which you are talking. If the call is a conference call, it displays a menu to allow selection of which [conference party to drop](#) <sup>57</sup>.
- If the call is connected on the phone's speaker, the  SPEAKER key is lit. Pressing the key again will end the call.
- If the call is connected on the phone's headset, the  HEADSET key is lit. Pressing the key again will end the call.
- If the call is connected on the phone's handset, replacing the handset will end the call.




# Chapter 3.

# Answering Calls




---

## 3. Answering Calls


 

A slow flashing green lamp on an  appearance button indicates an alerting call. This may also be accompanied by [ringing](#)<sup>[13]</sup> and by the message lamp flashing.

### Selected Button

 
 

If the button also has a red lamp () that indicates that it is already the selected button that will be used if you lift the handset or go off hook in any other way. If that in the case you can answer the call in the following ways:

To answer a call on the selected button:   = Red on, Slow green flash.

1. Select the method which you want to use to talk to the caller:

- To quiet the ringing, press the >> double-arrow soft key and then press the Ignore soft key. The call will still continue alerting visually and can be answered or ignored.
- To redirect the call to voicemail, press the >> double-arrow soft key and then press the To VM soft key.
- To answer the call using the handset, lift the handset.
- To answer the call handsfree, press the  SPEAKER key.
- To answer the call on a headset, press the  HEADSET key.
- Just pressing the  key will answer the call either on the speaker or headset depending on the phones [audio path](#)<sup>[60]</sup> setting.

2. The green lamp will stop its slow flash. Once you have answered the call, you can switch between talk modes:


- To switch to using the handset, lift the handset.
- To switch to handsfree, press the  SPEAKER key. If you were using the handset you can now safely replace it.
- To switch to headset mode, press the  HEADSET key. If you were using the handset you can now safely replace it.
- If you have answered the call on the speaker or headset, pressing the SPEAKER or HEADSET key again before you select another mode will end the call.
- Just pressing the  key or any other appearance button will put the call on hold.

### Answering Another Call

If the button that with a slow green flash does not have a red light, it is not the currently selected button. That may be because you are already on a call on another button. If that is the case, answering the new call will automatically put the existing call on hold.<sup>[1]</sup>

1. Using the ▲ up and down ▼ arrow keys, you can scroll the display to see details of the waiting call.

- To quiet the ringing, press the >> double-arrow soft key and then press the Ignore soft key. The call will still continue alerting and can be answered or ignored.
- To redirect the call to voicemail, press the >> double-arrow soft key and then press the To VM soft key.

2. Press the flashing green appearance button  to answer the new call and put the existing call on hold. The call will be answered using which ever talk mode you were already using for the existing call.

### Notes

1. This guide assumed that auto hold is enabled (the default). The system administrator can disable auto hold for the system, in which case calls are automatically disconnected rather than held.



### 3.1 Divert a Call to Voicemail

1408 1416 1608 1616

You can transfer a call targeted at you directly to voicemail.

1. If the call is not the current call on the display, use the ▲ up and down ▼ arrow keys to scroll the display to the alerting call.
2. Press the >> double-arrow soft key.
3. Press the To VM soft key.
4. The call is redirected to voicemail.

### 3.2 Ignore an Incoming Call

1408 1416 1608 1616


You can quiet the ringer of a currently alerting call. The call will continue alerting but with no audible ring.

1. If the call is not the current call on the display, use the ▲ up and down ▼ arrow keys to scroll the display to the alerting call.
2. Press the >> double-arrow soft key.
3. Press the Ignore soft key.
4. The call will continue alerting but with no audible ring.

### 3.3 Answering a Page Call

1408 1416 1608 1616


Your phone can be paged if you have no other connected call in progress. The page is heard through the phone's speaker.

1. A page call is indicated in the display by the word Page.
  - To answer the page call, press the  CONFERENCE key.
  - Alternatively, press the >> double-arrow soft key.
    - Press the Answer soft key.
2. The call is turned into a normal call.

### 3.4 Auto Answer

1408 1416 1608 1616

You can select to have internal calls automatically connected if you are not already on a call. The call will be connected, after the phone gives a brief tone, using either the phone's speaker or the headset as set by the phone's [audio path setting](#)<sup>[142]</sup>.

1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Call Settings....
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the option Internal Auto-Answer.
5. Press the Change soft key to change the setting.

This function can be assigned to a [feature button](#)<sup>[116]</sup> configured with the [Internal Auto Answer](#)<sup>[120]</sup> action. The button lamp will indicate when internal auto answer is on.



---


## 3.5 Call Pickup

1408 1416 1608 1616

Pickup is used to answer a call ringing elsewhere on the phone system. There are a number of pickup options:

- Answer any ringing call on the telephone system.
- Answer a call ringing a particular user.
- Answer a call ringing a particular group.
- Answer a call, not necessarily a group call, ringing the members of a group.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Press the Select soft key or the OK button or the ► right arrow key.

- To answer a ringing call, press the Any soft key.
- To answer a call ringing against a particular target, dial the targets number. Alternatively, press the Dir soft key to [select the target from the directory](#) <sup>166</sup>.

3. The following menus will depend on the type of number entered:

- User Number
  - To answer a call ringing against the user, press the Pickup soft key.
  - To return to entering a number, press the Clear key.
- Hunt Group Number
  - To answer a call ringing against the members of the group, press the Members soft key. The call does not have to be a call to the hunt group.
  - To answer a call ringing for the hunt group, press the Group soft key.
  - To return to entering a number, press the Clear key.

### Default Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. Your system administrator will confirm any additional short codes that they may have configured for your use.

- Pickup Any Call: \*30  
Answer a call ringing on the telephone system.
- Pickup a Group Call: \*31  
Answer a call ringing a group of which you are a member.
- Pickup a Users Call: \*32\*N#  
Pickup a call ringing a user's extension number (N).
- Pickup a Group Members Call: \*53\*N#  
Pickup a call ringing the members of a group (N). This does not necessarily have to be a group call.



# Chapter 4.

# Redialling



---

## 4. Redialling

The phone's redial operation can work in either of the following modes:

- *List*  
If this mode is selected, pressing the Redial will display a menu of the 10 most recent outgoing calls in your call log. You can select the call that you want to redial and perform a number of other functions.
- *One*  
If this mode is selected, pressing Redial will immediately repeat the most recent outgoing call in your call log. None of the other redial functions will be accessible.

You can [select the redial mode](#)<sup>[43]</sup> that the phone uses. In either case, the redial function uses the outgoing call records in your [personal call log](#)<sup>[72]</sup>. If you delete the records in your call log, redial will not work until new outgoing call records exist in your personal call log.


### Notes

1. Use of centralized call log can be switched off by the system administrator. In that case the numbers used for the redial function are stored by the phone. This guide only covers redial using outgoing call records in the user's centralized call log.

### 4.1 Redial a Call (One Mode)

1408 1416 1608 1616


This redial method is used when your phone's [redial mode](#)<sup>[43]</sup> is set to *One*.

1. Press the  REDIAL key.
2. The number for the most recent outgoing call in your personal call log is redialed.
3. Continue in the same way as for a normal dialed call.

### 4.2 Redial a Call (List Mode)

1408 1416 1608 1616

This redial method is used when your phone's [redial mode](#)<sup>[43]</sup> is set to *List*.

1. Access the redial list.
  - a. Press the  Redial key. The list of outgoing calls is displayed.
  - b. Use the ▲ up and down ▼ arrow keys to scroll through the 10 most recent outgoing calls.
2. Press the Call soft key or OK to call the number displayed in the call record.
3. Continue in the same way as for a normal dialed call.




## 4.3 Selecting Your Redial Mode

1408 1416 1608 1616

You can select whether your phone uses the redial list or last call redial mode.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Call Settings.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the menu to Redial Action.

5. The current mode, *List* or *One* is displayed.

- *List*

If this mode is selected, pressing the Redial will display a menu of the 10 most recent outgoing calls in your call log. You can select the call that you want to redial and perform a number of other functions.

- *One*

If this mode is selecting, pressing Redial will immediately repeat the most recent outgoing call in your call log. None of the other redial function will be accessible.

6. Use either the Change soft key or the ◀ left or right ▶ arrow keys to change the mode.

7. When the required mode is displayed, press the Done soft key.




---

## 4.4 View Call Details

1408 1416 1608 1616


You can view additional details about the currently shown call.

1. Access the redial list.
  - a. Press the  Redial key. The list of outgoing calls is displayed.
  - b. Use the ▲ up and down ▼ arrow keys to scroll through the 10 most recent outgoing calls.
2. Press the Details soft key. The individual details of the currently selected call record are displayed.
3. Use the ▲ up and down ▼ arrow keys to scroll through the details. The possible values are:
  - Time  
The time of the call.
  - Ring Time  
How long the call rang.
  - Name  
The name of the caller if known.
  - Number  
The number of the caller if available.
  - Reason  
The type of call record, ie. *Answered, Outgoing or Missed*.
  - Count  
How many time a call of the same type, name and number has occurred. Only the details of the most recent call are kept in your call log. However the count will indicate if the caller has rung or has been rung several times.
4. While you are in the details of a call record, the soft key functions available are:
  - Call  
Call the number shown in the call record. You can also do this by pressing the OK button.
  - +Contact  
Add the name and number to your personal directory. You can edit the details before they are added.
  - Back  
Go back to the normal call screen to select another call record.

## 4.5 Add a Call to Your Contacts

1408 1416 1608 1616

You can add the details of a call in your redial list to your personal contacts.

1. Access the redial list.
  - a. Press the  Redial key. The list of outgoing calls is displayed.
  - b. Use the ▲ up and down ▼ arrow keys to scroll through the 10 most recent outgoing calls.
2. Press the Details soft key. The individual details of the currently selected call record are displayed.
3. Press the +Contact soft key.
4. Use the ▲ up and down ▼ arrow keys to switch between the name and number details for the new contact.
5. Using the telephone keypad and the Bksp soft key you can edit the name and the number. When editing the number, use the Pause soft key to enter a comma (,) for a 1 second pause in the number dialing.
6. When the name and number are set as required, press the Save soft key. To return without saving the name and number, press the Cancel soft key.



# Chapter 5.

## Holding and Parking Calls



---

## 5. Holding and Parking Calls


Holding a call and parking a call are two similar actions. The current caller is placed on hold and hears music on hold if available. The table below summarizes the main differences between parking a call or holding a call.

When used to park or hold a call...	Hold	Park
... the call occupies an appearance button.	Yes	No
... the caller hears music on hold if available.	Yes	Yes
... the calls can be retrieved by other users dialing a short code.	No	Yes
... the calls recalls you automatically if your phone is idle.	Yes Default 15 seconds	Yes Default 5 minutes.
... can be used with conference calls.	Yes	No
... can be used to start or add calls to a conference.	Yes	No
... the call is assigned a unique ID.	No	Yes



## 5.1 Holding Calls

You can hold a call or several calls.







- The held call will still occupy the appearance button on which it was made or answered.
- While held the caller will hear music on hold. If your system does not have music on hold available, the caller will hear double beep tones every few seconds.
- If you have more than one held call, or one held call and a connected call, pressing the  CONFERENCE key will start a conference between yourself and the calls.

### Important - Holding Conference Calls

You can hold a conference call in the same way as holding a normal call. Holding the conference call does not affect the other conference parties who can continue talking. You will also still be listed as a member of the conference call in the conference details.

- Warning: This only applies to conference calls hosted by your own telephone system. Holding your call to a conference hosted on another telephone system may cause that conference to hear your system's music on hold.

### 5.1.1 Holding a Call

1. To put your current call on hold, press the  HOLD key or the call's  appearance button.
2. The held call will be indicated by its appearance key using a fast flashing green lamp .
3. While held the caller will hear music on hold. If your system does not have music on hold available, the caller will hear double beep tones every few seconds.
4. If you can scroll the display using the  up and down  arrow keys, the held call will appear with a  icon.





### Important - Holding Conference Calls

You can hold a conference call in the same way as holding a normal call. Holding the conference call does not affect the other conference parties who can continue talking. You will also still be listed as a member of the conference call in the conference details.

- Warning: This only applies to conference calls hosted by your own telephone system. Holding your call to a conference hosted on another telephone system may cause that conference to hear your system's music on hold.

### 5.1.2 Taking a Call Off Hold



Either of the following methods can be used to retrieve a call from hold. If you have a currently connected call, that call will be automatically put on hold.

1. Press the appearance button with the fast flashing green lamp .
2. Scroll the display using the  up and down  arrow keys, the held call will appear with a  icon.
  - You can press the >> double-arrow soft key.
  - Press the Pickup soft key to take the call off hold.


 


---

### 5.1.3 Switching Between Calls

With a call on hold (fast flashing green  appearance button) and another call connected (red and green  appearance button), you can switch between calls by pressing the appearance button of the held call. The current call is automatically put on hold and the previously held call connected.

### 5.1.4 Transfer a Held Call

When you already have a call on hold and a call connected, you can connect them by starting a conference. Press the  CONFERENCE key. Your current call and the held call will be connected. You can now [drop yourself](#)  from the conference.

#### Note

1. If you are the only internal user in the conference, depending on your telephone systems configuration, dropping yourself from the conference may end it. Consult your system administrator for details.



## 5.2 Parking Calls

Parking a call is similar to holding a call. However parked calls can be unparked by other users on the phone system.

Each parked call is given a number. By default the number is your extension number plus a digit.

Calls that you have parked will return to your phone if they remain parked for too long. The default return delay is 5 minutes. This is a system delay that is applied to all users and can be changed by the system administrator. Returning calls ignore any forwarding or do not disturb settings.

If you park a call without specifying a park slot number, the system will assign a number based on your extension number plus a single digit. For example for extension 201, the first parked call will use park slot number 2010 if available. If you already have one parked call, the next parked call will use park slot 2011 if available.

Call park buttons can be configured with a specific park slot numbers. A calls parked using that button will be given that park slot number. Any other users with a call park button set to the same number will see that there is a parked call and can unpark it using their button.

A [feature button](#) set to the [Call Park](#) action can be used to park and unpark calls. If configured to a specific park number, the button will indicate when another user has parked a call using that park slot number.

### Default Short Codes


Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. Your system administrator will confirm any additional short codes that they may have configured for your use.




- Park Call: \*37\*N#  
Parks the held call using the park number dialed in place of *N*.
- Unpark Call: \*38\*N#  
Unpark the call parked using the park number *N*.

 


## 5.2.1 Park Using the Menu

1408 1416 1608 1616


1. Press the Features soft key if shown.
  - To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Park.
3. Press the Select soft key or the OK button or the ► right arrow key.
4. You can park the call and have the parked call indication sent to your phone or another phone. Use the ▲ up and down ▼ arrow keys to select either the method of parking your want:
  - Park Here  
With Park Here displayed, press the Select soft key or the OK button or the ► right arrow key.
  - Park to Other User
    - With Park to Other displayed, press the Select soft key or the OK button or the ► right arrow key.

RPark		
201_		
Done	Dir	Back
		

- Enter the target user extension number. Alternatively, press the Dir soft key to [use the directory](#) .
- Press Done.


## 5.2.2 Unpark (Features Menu)

1408 1416 1608 1616

1. Press the Features soft key if shown.
  - To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Park.
3. Press the Select soft key or the OK button or the ► right arrow key.
4. Press the Select soft key or the OK button or the ► right arrow key. If you have any parked calls, they are listed.
5. Use the ▲ up and down ▼ arrow keys to scroll through the parked calls.
6. To unpark a particular call, press the CPkUp soft key.

## 5.2.3 Unpark (Status Menu)

While parked calls are parked on the telephone system and can be unparked by any other user, the parked call indication is sent to a particular extension. If there are any calls parked against your phone, you can view and unpark them using the Status menu.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. If you have any parked calls, the Parks option is displayed. The option is not present if you do not have calls parked against your extension.
3. Press the Details soft key.
4. Use the ▲ up and down ▼ arrow keys to scroll through the parked calls.
5. To unpark a particular call, press the CPkUp soft key.



# Chapter 6.

# Transferring Calls

 
 
 


---

## 6. Transferring Calls


1408 1416 1608 1616


To transfer a call your phone must have an available call appearance button. If all your current call appearance buttons are in use, you must [end](#)<sup>[36]</sup> or [park](#)<sup>[50]</sup> one of your existing calls.

1. Press the  TRANSFER key. The current call is automatically put on hold.
2. Dial the number for the transfer. Alternatively, press Dir to [select a destination from the directory](#)<sup>[66]</sup>.
  - To complete the transfer, press the  TRANSFER key or press the Complete soft key. You can do this while the call is still ringing.
    - Transferring a call while it is still ringing is called an unsupervised transfer.
    - Transferring a call after ringing finishes is called a supervised transfer.
  - If the transfer destination does not answer or, after answering the call, does not want to accept the call, press the Cancel soft key.
3. Press the  TRANSFER key to complete the transfer or press the Complete soft key. If the transfer destination does not answer or does not want to accept the call, press the Cancel soft key.


### 6.1 Transfer to Voicemail

1408 1416 1608 1616

When set to visual voice mode, the  key can be used to transfer your current call to the voicemail mailbox of another user or group.

1. With the call connected, press the  key. You are still connected to the call and can continue talking.
2. Dial the extension number of the user or group to which you want to transfer the call.
3. When the number matches a user or group, their name is displayed.
  - To transfer the call to the user or group's mailbox, press the Select soft key. The caller will hear a few seconds of ringing and then the mailbox greeting.
  - To exit the transfer menu, press the Exit soft key.

### 6.2 Transferring a Held Call

When you already have a call on hold and a call connected, you can connect them by starting a conference. Press the  CONFERENCE key. Your current call and the held call will be connected. You can now [drop yourself](#)<sup>[57]</sup> from the conference.

#### Note

1. If you are the only internal user in the conference, depending on your telephone systems configuration, dropping yourself from the conference may end it. Consult your system administrator for details.



# Chapter 7.

# Account Codes



---

## 7. Account Codes

The telephone system can store a number of account codes. Account codes may be used to keep track of calls in relation to particular activities or clients. They can also be used to keep track of calls by particular users or sets of users.

- When an account code is entered while making a call or during a call, that account code is included in the call records output by the system.
- Accounts entered are checked against those stored by the telephone system. If an invalid code is entered, the account code is requested again.
- The system administrator can configure certain numbers or types of numbers to require entry of an account code before you can continue making a call to such a number.
- The system administrator can also configure you to have to enter an account code before making any external call.

### 7.1 Forced Account Code Entry

1408 1416 1608 1616









The system administrator can configure certain numbers or types of numbers to require entry of an account code before you can continue making a call to such a number.

1. ENTER ACCOUNT is displayed when you are required to enter an account code.
2. Enter the account code that you want to use.
3. Press the Done soft key.
4. If the account code was not a valid account code, the REENTER ACCOUNT menu is displayed.

 
 
### 7.2 Manual Account Code Entry

1408 1416 1608 1616

You can enter account codes during a call or before making a call. The account code that you enter must match an account code set on the telephone system.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the  up and down  arrow keys to scroll the display to the option Call Settings.
3. Press the Select soft key or the OK button or the  right arrow key.
4. Use the  up and down  arrow keys to scroll the menu to Account Code.
5. Press the Select soft key or the OK button or the  right arrow key.
6. Enter the account code that you want to use.
7. Press the Done soft key.
8. If the account code was not a valid account code, the REENTER ACCOUNT menu is displayed.

#### Feature Button

Access to the enter account code menu can be assigned to a [feature button](#)  configured with the [Account Code Entry](#)  action. The button can also be preset with a specific account code.



# Chapter 8.

# Conference Calls



---

## 8. Conference Calls

All IP Office telephone systems support conferencing. Multiple conference calls are supported, with parties addable to each conference call until the IP Office systems conference capacity is reached. The conference capacity varies between IP Office systems, however all systems support a maximum of 64 parties in any particular conference call.

Conference resources are also used for call recording and other features, reducing the available conference capacity for ordinary conference calls.


Note that some conference controls, for example dropping other parties, only apply for conferences started on the same phone system as you extension.

### Default Short Codes



 
Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. Your system administrator will confirm any additional short codes that they may have configured for your use.

- Conference Held Calls: \*47  
Start a conference between yourself and any calls that you have on hold.

## 8.1 Starting a Conference

 


If you have more than one held call, or one held call and a connected call, pressing the  CONFERENCE key will start a conference between yourself and the calls.

If you do not already have a held call, you can use the process below to start a conference.

1. Make a call to the first party or answer a call.
2. Press the  CONFERENCE key. The current call is automatically put on hold.
3. Dial the party that you want to add to the conference.
4. If they answer and want to join the call, press the  CONFERENCE key again or press the Join soft key.
5. If they do not want to join the call or do not answer, press  DROP and then press the appearance key of the held call (fast green flash).

## 8.2 Adding a Call to a Conference


You can add additional parties to an existing conference.

1. Press the  HOLD key to put the conference on hold. This does not affect the other conference parties who can continue talking to each other.
2. Press an available appearance key on which to make a call.
3. Dial the party that you want to add to the conference.
4. If they answer and want to join the call, press the  CONFERENCE key again or press the Join soft key.
5. If they do not want to join the call or do not answer, press  DROP and then press the appearance key of the held call (fast green flash).





## 8.3 Viewing Conference Details

You can display a list of the parties involved in a conference call.

1. If not already displayed, press the ▲ up or down ▼ arrow key to display the conference call.
2. Press the Details soft key.
  - To scroll through the list of callers in the conference, use the ▲ up and down ▼ arrow keys.
  - To drop the caller displayed from the conference, press the Drop soft key. Press the  DROP key will also drop the displayed party.
  - To return to the call display, press the Exit soft key.

## 8.4 Dropping Parties from a Conference

You can drop parties from a conference call, including yourself.

1. While connected to a conference call, if you press the  DROP key, the conference details menu is displayed.
2. You can then perform the following actions:
  - To scroll through the list of callers in the conference, use the ▲ up and down ▼ arrow keys.
  - To drop the caller displayed from the conference, press the Drop soft key. Press the  DROP key will also drop the displayed party.
  - To return to the call display, press the Exit soft key.

 
### Note

1. If you are the only internal user in the conference, depending on your telephone systems configuration, dropping yourself from the conference may end it. Consult your system administrator for details.



---

## 8.5 Holding a Conference Call

Using the  HOLD key you can put a conference call on hold in the same way as you can for a normal call. The appearance key for the conference call will show a fast flashing green lamp.


 
To take the conference call off hold, press the appearance key.

### Important - Holding Conference Calls

You can hold a conference call in the same way as holding a normal call. Holding the conference call does not affect the other conference parties who can continue talking. You will also still be listed as a member of the conference call in the conference details.

- Warning: This only applies to conference calls hosted by your own telephone system. Holding your call to a conference hosted on another telephone system may cause that conference to hear your system's music on hold.

## 8.6 Transferring Calls Using Conference

When you already have a call on hold and a call connected, you can connect them by starting a conference. Press the  CONFERENCE key. Your current call and the held call will be connected. You can now [drop yourself](#)  from the conference.

### Note

1. If you are the only internal user in the conference, depending on your telephone systems configuration, dropping yourself from the conference may end it. Consult your system administrator for details.



# Chapter 9.


 
# Headset Operation



 
 
 
---

## 9. Headset Operation

Your phone has a headset socket located under the phone. This is suitable for the connection of phone headsets that connect via a HIS headset cable.

- Pressing the  HEADSET key can be used to answer a call through the headset. It can also be pressed to end a headset call.
- The key is lit when there is a call connected through the headset.
- The key can also be pressed to turn a call already answered using the handset or handsfree into a headset call.
- If there are no currently connected call to which you are talking, a call answered by pressing its appearance button is connected either handsfree or through the headset according to the phone's [audio path setting](#) .
- If there is already a connected call to which you are talking through the headset, answering another call by pressing the appearance button will answer that call using the headset.


You can adjust the following handsfree settings:

- [Headset Volume](#) 
- [Headset Automatic Gain Control On/Off](#) 
- [Default Audio Path](#) 



 
 
### 9.1 Headset Volume

While talking via the headset, you can adjust the volume of the incoming call.


1. With the call connected on the headset, press the  key.
2. Use the + plus and – minus keys to adjust the volume.
3. The display will return to normal after a few seconds.

### 9.2 Default Handsfree Audio Path

By default, when you make a call or answer a call without lifting the handset, the audio is played through the phone's speaker while you speak via the phone's microphone.

If you have a headset attached, you can change the phone's behavior so the audio is played through the headset by default rather than the speaker.

1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Call Settings....
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the option Audio Path.
5. Use the ◀ left and right ▶ arrow keys or press the Change soft key to change the setting.
6. When completed, press the Done soft key.
7. Press the Exit soft key to exit the menus.



# Chapter 10.


 
# Handsfree Speaker Operation



 
 
 
---

## 10. Handsfree Speaker Operation

Your phone has a speaker and microphone that allows you make and answer calls handsfree. The speaker is located under the handset. The microphone is located near the bottom right of the phone's keypad.

- Pressing the  SPEAKER key can be used to answer a call handsfree. It can also be pressed to end a handsfree call.
- The key is lit when there is a call connected handsfree.
- The key can also be pressed to turn a call already answered using the handset or headset into a handsfree call.
- If there are no currently connected call to which you are talking, a call answered by pressing its appearance button is connected either handsfree or through the headset according to the phone's [audio path setting](#) .
- If there is already a connected call to which you are talking handsfree, answering another call by pressing the appearance button will answer that call handsfree.


 
 
 
You can adjust the following handsfree settings:

- [Speaker Volume](#) 
- [Speaker Automatic Gain Control On/Off](#) 
- [Default Audio Path](#) 


### Conference Phones

Your phone is not designed as a conference room speakerphone. It is designed for use by a speaker located directly in front of the phone with no obstructions between themselves and the microphone. Phones designed to be used as conference speakerphones typically have multiple microphones and are able to handle sounds coming from multiple directions. For details of conference speakerphones supported by your phone system contact your system administrator.

 
 
 
 
## 10.1 Speaker Volume

While talking handsfree via the phone's speaker, you can adjust the volume of the incoming call.


1. With the call connected on the speaker, press the  key.
2. Use the + plus and – minus keys to adjust the volume.
3. The display will return to normal after a few seconds.

## 10.2 Default Handsfree Audio Path

By default, when you make a call or answer a call without lifting the handset, the audio is played through the phone's speaker while you speak via the phone's microphone.

If you have a headset attached, you can change the phone's behavior so the audio is played through the headset by default rather than the speaker.

1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Call Settings....
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the option Audio Path.
5. Use the ◀ left and right ▶ arrow keys or press the Change soft key to change the setting.
6. When completed, press the Done soft key.
7. Press the Exit soft key to exit the menus.



# Chapter 11.

## Contacts/Directory



# 11. Contacts/Directory



This menu is accessed by pressing the  key. It is used to display names and numbers that you can then use for making calls.

The directory includes names stored for use by all users, names stored for use by just you and the name and numbers of all the other users and groups on the phone system.

The [Contact Menu](#)<sup>[175]</sup> diagram shows a summary of the menu options.

The contacts shown in the directory come from a number of sources.

- **Personal Directory Contacts**  
These contacts are stored by the telephone system as part of your user settings.
  - They are displayed on the phone while you are using it. If you hot desk to another 1408, 1416, 1608 or 1616 phone, your personal contacts move with you.
  - You can have up to 100 personal directory entries<sup>[2]</sup> which you can add, edit and delete these through the phone.
  - The system administrator can also add, edit and delete your personal directory entries.
- **User Contacts**  
These contacts list all<sup>[3]</sup> the other users on the telephone system. If your system is part of a Small Community Network of IP Office telephone systems, it includes users on the other systems.
- **Group Contacts**  
These contacts list all the hunt groups on the telephone system. If your system is part of a Small Community Network of IP Office telephone systems, it includes those hunt groups that the system administrator has configured to be advertised across the network.
- **External Contacts**  
These contacts are viewable and useable by all phone users. These are two types of external contacts:
  - Some external contacts are entered into the telephone system configuration by the system administrator.<sup>[1]</sup>
  - Other external contacts are those imported by the telephone system from other directory sources.

## Notes






1. If you have been configured as a system phone user by the system administrator, then you can also add, edit and delete some external directory contacts.
  - This only applies to external directory contacts entered locally into configuration of the IP Office at which you are logged in.
  - External directory contacts imported by the system cannot be edited.
  - However, if a local entry is created with the same name or number as an imported entry, the imported entry is discarded in favour of the local one.
2. While each user is allowed up to 100 personal directory entries, the total capacity of the IP Office telephone system may limit the addition of further personal directory entries for any users.
3. The system administrator can set other users as Ex Directory. Those users are then not included in the user directory.





## 11.1 Viewing Contacts Details

1408 1416 1608 1616

 
 

1. Access the contacts directory:

- a. Press the  CONTACTS key. The directory menu is displayed.
- b. Use the  left and right  arrow keys to select which type of directory entries you want displayed.
  - All  
All directory entries.
  - External  
Directory entries stored by the telephony system for all users to use.
  - Groups  
The names and numbers of hunt groups on the telephone system.
  - Users  
The names and numbers of other users on the telephone system.
  - Personal  
Your own personal directory entries.
- c. Either press the List soft key to display all the directory entries or start dialing the name to display only matching entries.
- d. Use the  up and down  arrow keys to scroll through the matching entries. To return to the start to match a different directory selection, press the Clear soft key.

2. When the required entry is displayed, press Details to display the name and number.

3. Use the  up and down  arrow key to switch between the name and the number.

4. The range of soft keys available will depend on the type of directory entry:

- [Call](#)   
Make a call to the stored number.
- Back  
Go back to the directory listing.
- More  
If the contact is one of your personal directory entries, the More soft key will be present to allow you to access the options below. It is also present for external directory entries if you have been setup as a system phone user by the system administrator.
- [Edit](#)   
Edit the name and number.
- [Delete](#)   
Delete the name and number.




---

## 11.2 Make a Call from the Directory

1408 1416 1608 1616

You can use any directory contacts to make a call. You can also use the directory in almost any telephone function where you need to select the number for a destination, for example during transfers.

1. Access the contacts directory:

- a. Press the  CONTACTS key. The directory menu is displayed.
- b. Use the ◀ left and right ▶ arrow keys to select which type of directory entries you want displayed.
  - All  
All directory entries.
  - External  
Directory entries stored by the telephony system for all users to use.
  - Groups  
The names and numbers of hunt groups on the telephone system.
  - Users  
The names and numbers of other users on the telephone system.
  - Personal  
Your own personal directory entries.
- c. Either press the List soft key to display all the directory entries or start dialing the name to display only matching entries.
- d. Use the ▲ up and down ▼ arrow keys to scroll through the matching entries. To return to the start to match a different directory selection, press the Clear soft key.

2. When the required entry is displayed, press Call.

3. Continue as for a normally dialed call.

## 11.3 Using the Directory for Other Functions

1408 1416 1608 1616

Within other menus where entry of a number is required, it may be possible to use the the directory to select an existing number by name. If this option is available, it will be indicated by the presence of a Dir soft key in the menu.

When using the directory in this way, the names made available will depend on the type of function that is being setup. For example, for some functions only group names will be displayed, for others only user names.

1. Press the Dir soft key.
2. Either dial the name to see a list of matches or press the List soft key to list all names.
  - To clear the list of names and start entry again, press the Clear soft key.
  - To view additional details about the currently displayed name, press the Details key.
  - When the required entry is displayed, press Select.
3. You will be returned to the menu in which you selected the Dir soft key.




## 11.4 Adding a New Contact

1408 1416 1608 1616

So long as the telephone system capacity has not been reached, you can add up to 100 personal directory entries.

1. Access your personal directory contacts:

- a. Press the  CONTACTS key. The directory menu is displayed.
- b. Use the ◀ left and right ▶ arrow keys to select your *Personal* directory.

2. Press the New soft key.

- The menu now allows editing of the name and number. Use the ▲ up and down ▼ arrow keys to switch between number and name entry.
- When the name has been entered as required, press the OK soft key.
- When the number has been entered as required, press the Save soft key.
- To exit without making any changes, press the Cancel soft key.

### Notes

1. If you have been configured as a system phone user by the system administrator, then you can also add, edit and delete some external directory contacts.
  - This only applies to external directory contacts entered locally into configuration of the IP Office at which you are logged in.
  - External directory contacts imported by the system cannot be edited.
  - However, if a local entry is created with the same name or number as an imported entry, the imported entry is discarded in favour of the local one.

 

 



 


---

## 11.4.1 Add a Contact from the Call Log

1408 1416 1608 1616


 


 
You can add a name and number shown in your call log to your personal contacts.

1. Access the call log.
  - a. Press the  CALL LOG button.
  - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
  - c. Use the  left and right  arrow keys to select which call log records you are viewing. The options are *All*, *Missed*, *Answered* and *Outgoing*.
    - If you have any new missed call records (ie. the CALL LOG button lamp is illuminated) the call log will open showing your missed calls.
  - d. Use the  up and down  arrow keys to scroll through the records.
2. Press the Details soft key. The individual details of the currently selected call record are displayed.
3. Press the +Contact soft key.
4. Use the  up and down  arrow keys to switch between the name and number details for the new contact.
5. Using the telephone keypad and the Bksp soft key you can edit the name and the number. When editing the number, use the Pause soft key to enter a comma (,) for a 1 second pause in the number dialing.
6. When the name and number are set as required, press the Save soft key. To return without saving the name and number, press the Cancel soft key.

## 11.4.2 Add a Contact from the Redial List

1408 1416 1608 1616

You can add the details of a call in your redial list to your personal contacts.

1. Access the redial list.
  - a. Press the  Redial key. The list of outgoing calls is displayed.
  - b. Use the  up and down  arrow keys to scroll through the 10 most recent outgoing calls.
2. Press the Details soft key. The individual details of the currently selected call record are displayed.
3. Press the +Contact soft key.
4. Use the  up and down  arrow keys to switch between the name and number details for the new contact.
5. Using the telephone keypad and the Bksp soft key you can edit the name and the number. When editing the number, use the Pause soft key to enter a comma (,) for a 1 second pause in the number dialing.
6. When the name and number are set as required, press the Save soft key. To return without saving the name and number, press the Cancel soft key.




## 11.5 Editing a Contact

1408 1416 1608 1616

You can edit the contacts in your own personal directory.

1. Access your personal directory contacts:

- a. Press the  CONTACTS key. The directory menu is displayed.
- b. Use the ◀ left and right ▶ arrow keys to select your *Personal* directory.
- c. Either press the List soft key to display all the directory entries or start dialing the name to display only matching entries.
- d. Use the ▲ up and down ▼ arrow keys to scroll through the matching entries. To return to the start to match a different directory selection, press the Clear soft key.

2. Locate the required entry.

3. Press the Details soft key.

4. Press the More soft key and then the Edit soft key.

- The menu now allows editing of the name and number. Use the ▲ up and down ▼ arrow keys to switch between number and name entry.
- When the name has been entered as required, press the OK soft key.
- When the number has been entered as required, press the Save soft key.
- To exit without making any changes, press the Cancel soft key.

### Notes

1. If you have been configured as a system phone user by the system administrator, then you can also add, edit and delete some external directory contacts.

- This only applies to external directory contacts entered locally into configuration of the IP Office at which you are logged in.
- External directory contacts imported by the system cannot be edited.
- However, if a local entry is created with the same name or number as an imported entry, the imported entry is discarded in favour of the local one.




---

## 11.6 Deleting a Contact

1408 1416 1608 1616

You can delete a contact from your own personal directory.

1. Access your personal directory contacts:

- a. Press the  CONTACTS key. The directory menu is displayed.
- b. Use the ◀ left and right ▶ arrow keys to select your *Personal* directory.
- c. Either press the List soft key to display all the directory entries or start dialing the name to display only matching entries.
- d. Use the ▲ up and down ▼ arrow keys to scroll through the matching entries. To return to the start to match a different directory selection, press the Clear soft key.

2. Locate the required entry.

3. Press the Details soft key.

4. Press the More soft key and then the Delete soft key.

### Notes

1. If you have been configured as a system phone user by the system administrator, then you can also add, edit and delete some external directory contacts.

- This only applies to external directory contacts entered locally into configuration of the IP Office at which you are logged in.
- External directory contacts imported by the system cannot be edited.
- However, if a local entry is created with the same name or number as an imported entry, the imported entry is discarded in favour of the local one.



# Chapter 12.


## Call Log



---

## 12. Call Log

Call Log: ▾All▾
↓Extn201                      15:19 01/26
Call                      Details                      More

This menu is accessed by pressing the  key. The call log you see is a call log stored on the telephone system. If you login at another 1408, 1416, 1608 or 1616 phone, your call log moves with you.

Your call log contains your 10 most recent answered calls, 10 most recent calls you made and 10 most recent missed calls.

If configured by the system administrator, it can also include calls missed by hunt groups of which you are a member.

The [Call Log](#) <sup>[174]</sup> menu diagram shows a summary of the menu options.

- [Making a Call](#) <sup>[73]</sup>
- [Viewing Call Details](#) <sup>[74]</sup>
- [Deleting a Record](#) <sup>[75]</sup>
- [Deleting All Records](#) <sup>[75]</sup>
- [Add a Record to Your Contacts](#) <sup>[76]</sup>

### Missed Calls

Missed calls are calls to you that you did not answer. Your system administrator can also configure if the log includes calls presented to you but answered by someone else or by voicemail.

The Call Log button is illuminated when you have any new missed calls in your call log. The lamp is extinguished when you have viewed the missed call in the call log or the record of that call is no longer in your call log.

### Missed Group Call

If you are a member of any hunt groups, the system administrator can configure whether your missed calls log should also include missed hunt groups calls. The hunt group does not necessarily have to have rung your phone. It will be recorded as missed if it was presented to the hunt group and not answered by any of the members including you.


 
### Notes


1. Centralized call log can be turned off by the [system administrator](#) <sup>[185]</sup>. In that case the call log is one stored by the phone and is lost if the phone is reset. This guide only covers the centralized call log stored by the IP Office telephone system.
2. The call log on other types of phones is a local call log maintained by that phone. It will not move with you when you hot desk and it will be lost if the phone is restarted.
3. The redial function uses the outgoing call records stored in the call log.

 


 
## 12.1 Using the Call Log

 
1408 1416 1608 1616

1. Access the call log.
  - a. Press the  CALL LOG button.
  - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
  - c. Use the ◀ left and right ▶ arrow keys to select which call log records you are viewing. The options are *All*, *Missed*, *Answered* and *Outgoing*.
    - If you have any new missed call records (ie. the CALL LOG button lamp is illuminated) the call log will open showing your missed calls.
  - d. Use the ▲ up and down ▼ arrow keys to scroll through the records.
2. Pressing OK will make a call to the number stored with the currently displayed record.
3. You can use the functions listed at the bottom of the display by pressing the soft key below the function name.
  - [Call](#) 

Make a call to the number stored in the currently displayed call log record.
  - [Details](#) 

Display more details about the current call log record. You can then also [add the caller details to your personal directory](#)  if required.
  - More
 

Switch between the different sets of available soft key functions.
  - [Delete](#) 


Deletes the current displayed record.
  - [Del All](#) 

Delete all the call log records, not just the current types of records being shown.
4. To exit the call log, press the PHONE/EXIT button.

## 12.2 Making a Call from the Call Log

1408 1416 1608 1616

You can use the call log to make calls to the number included in the currently selected call record.

1. Access the call log.
  - a. Press the  CALL LOG button.
  - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
  - c. Use the ◀ left and right ▶ arrow keys to select which call log records you are viewing. The options are *All*, *Missed*, *Answered* and *Outgoing*.
    - If you have any new missed call records (ie. the CALL LOG button lamp is illuminated) the call log will open showing your missed calls.
  - d. Use the ▲ up and down ▼ arrow keys to scroll through the records.
2. Press the Call soft key or OK to call the number displayed in the call record.




---

## 12.3 Viewing Call Details

1408 1416 1608 1616

You can view additional details about the currently shown call.

1. Access the call log.

- a. Press the  CALL LOG button.
- b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
- c. Use the ◀ left and right ▶ arrow keys to select which call log records you are viewing. The options are *All*, *Missed*, *Answered* and *Outgoing*.
  - If you have any new missed call records (ie. the CALL LOG button lamp is illuminated) the call log will open showing your missed calls.
- d. Use the ▲ up and down ▼ arrow keys to scroll through the records.

2. Press the Details soft key. The individual details of the currently selected call record are displayed.

3. Use the ▲ up and down ▼ arrow keys to scroll through the details. The possible values are:

- Time  
The time of the call.
- Ring Time  
How long the call rang.
- Name  
The name of the caller if known.
- Number  
The number of the caller if available.
- Reason  
The type of call record, ie. *Answered*, *Outgoing* or *Missed*.
- Count  
How many time a call of the same type, name and number has occurred. Only the details of the most recent call are kept in your call log. However the count will indicate if the caller has rung or has been rung several times.

4. While you are in the details of a call record, the soft key functions available are:



 


- Call  
Call the number shown in the call record. You can also do this by pressing the OK button.
- +Contact  
Add the name and number to your personal directory. You can edit the details before they are added.
- Back  
Go back to the normal call screen to select another call record.



## 12.4 Deleting a Record

1408 1416 1608 1616



 


You can delete the currently displayed call record. If the record is a missed hunt group call, the record is also deleted from the call log of other users configured to see the same hunt group's missed calls.

1. Access the call log.
  - a. Press the  CALL LOG button.
  - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
  - c. Use the  left and right  arrow keys to select which call log records you are viewing. The options are *All*, *Missed*, *Answered* and *Outgoing*.
    - If you have any new missed call records (ie. the CALL LOG button lamp is illuminated) the call log will open showing your missed calls.
  - d. Use the  up and down  arrow keys to scroll through the records.
2. Press the More soft key.
3. Press the Delete soft key to delete the currently displayed call log record.

## 12.5 Deleting All Records

1408 1416 1608 1616

You can delete all call records from your call log. This action deletes all call log record types (*Answered*, *Missed* and *Outgoing*), not just the type you are currently viewing. This action deletes your personal call records and any hunt group call records.

1. Access the call log.
  - a. Press the  CALL LOG button.
  - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
  - c. Use the  left and right  arrow keys to select which call log records you are viewing. The options are *All*, *Missed*, *Answered* and *Outgoing*.
    - If you have any new missed call records (ie. the CALL LOG button lamp is illuminated) the call log will open showing your missed calls.
  - d. Use the  up and down  arrow keys to scroll through the records.
2. Press the More soft key.
3. Press the Del All soft key to delete all your call log records.




---

## 12.6 Adding a Record to Your Contacts

1408 1416 1608 1616

You can add a name and number shown in your call log to your personal contacts.

1. Access the call log.
  - a. Press the  CALL LOG button.
  - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
  - c. Use the ◀ left and right ▶ arrow keys to select which call log records you are viewing. The options are *All*, *Missed*, *Answered* and *Outgoing*.
    - If you have any new missed call records (ie. the CALL LOG button lamp is illuminated) the call log will open showing your missed calls.
  - d. Use the ▲ up and down ▼ arrow keys to scroll through the records.
2. Press the Details soft key. The individual details of the currently selected call record are displayed.
3. Press the +Contact soft key.
4. Use the ▲ up and down ▼ arrow keys to switch between the name and number details for the new contact.
5. Using the telephone keypad and the Bksp soft key you can edit the name and the number. When editing the number, use the Pause soft key to enter a comma (,) for a 1 second pause in the number dialing.
6. When the name and number are set as required, press the Save soft key. To return without saving the name and number, press the Cancel soft key.




# Chapter 13.

## Voicemail



---

## 13. Voicemail

If your telephone system includes a voicemail server, pressing the  MESSAGES button accesses a series of menus referred to as "visual voice".<sup>[1]</sup> You can use these menus to playback messages and change various voicemail settings.

- [Checking Messages](#) <sup>[79]</sup>
- [Record and Send a Message](#) <sup>[80]</sup>
- [Change Your Mailbox Greeting](#) <sup>[81]</sup>
- [Select a Voicemail Email Mode](#) <sup>[82]</sup>
- [Change Your Voicemail Code](#) <sup>[83]</sup>
- [Turn Use of Voicemail On/Off](#) <sup>[83]</sup>
- [Transfer to Voicemail](#) <sup>[84]</sup>
- [Send a Call to Voicemail](#) <sup>[84]</sup>

By default voicemail is used to answer calls to you that have rung unanswered for your no answer time. It is also used to answer calls when you have do not disturb enabled.

### Default Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. Your system administrator will confirm any additional short codes that they may have configured for your use.

- Check Messages: \*17  
Access mailboxes to check for messages.
- Voicemail On: \*18  
Allow voicemail to be used to answer calls.
- Voicemail Off: \*19  
Stop voicemail being used to answer calls.
- Voicemail Ringback On: \*48  
Have voicemail ring your phone when you have any new messages. It will call when you use the phone.
- Voicemail Ringback Off: \*49  
Switch off ringback.

### Notes

1. The system administrator can change the default operation of the MESSAGES button to access either visual voice or a spoken voice prompts. That is a system wide setting that will affect all users. This guide assumes the default operation of using visual voice.

## 13.1 Message Waiting Indication


The message lamp on your phone is used to indicate when you have new messages in your voicemail mailbox. The lamp will remain lit until you have played each of the new messages.

The system administrator can also configure it so that you receive new message waiting indication for a hunt group or hunt groups.



## 13.2 Checking Messages

1408	1416	1608	1616
------	------	------	------

1. Press the  MESSAGES button.
  - Depending on how your system is configured, you may be required to enter your voicemail password and then press the Done soft key.
2. The visual voice menu is displayed. The numbers shown against the Listen option indicate the number of new, old and saved messages in your mailbox.
  - If the system administrator has configured you to receive message waiting indication for any hunt group mailboxes, you can also use the ▲ up and down ▼ arrow keys to display the hunt group names and the number of messages in those mailboxes.
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to select which messages (New, Old or Saved) that you want to listen to and press Select. The details of the first message of that type are displayed.
5. You can use the ▲ up and down ▼ arrow keys to scroll through the messages.
6. Use the soft keys to control the playback actions:
  - Listen / Pause  
Start/stop playback of the currently displayed message.
  - Delete  
Delete the message.
  - More  
Switch between the different sets of available soft key functions.
  - Save  
Mark the message as saved. Saved messages are not normally automatically deleted.<sup>[1]</sup>
  - Copy  
Copy the message to another mailbox. The menu will prompt you to enter the destination number.
  - Call  
Call the person who left the message.

### Notes

1. Automatic Message Deletion  
By default, messages are automatically deleted a set time after being played. The delay depends on the particular voicemail server (24 hours for embedded voicemail, 30 days for Voicemail Pro). For voicemail messages on a Voicemail Pro system, the system administrator can customize the delay and can also apply automatic deletion times to new and saved messages.




---

## 13.3 Sending a Message

1408 1416 1608 1616

You can use visual voice to record and send a voicemail message to other users' mailboxes.


1. Press the  MESSAGES button.
  - Depending on how your system is configured, you may be required to enter your voicemail password and then press the Done soft key.
2. The visual voice menu is displayed.
3. Use the ▲ up and down ▼ arrow keys to scroll to the option Message.
4. Press the Select soft key or OK.
5. Enter the user to which you want to send the message.
6. Press the Message soft key.
7. When you are ready to start recording, press the Record soft key.
8. To stop recording, press the Stop soft key.
9. You can now use the following soft keys:
  - Listen  
Listen to the recording. You can use the Record option to record the message again.
  - Submit  
Send the message.
  - More  
Switch between the different sets of available soft key functions.
  - Others  
Add other extension numbers to which you want to send the message.
  - Record  
Record the message again.



## 13.4 Mailbox Greeting

1408 1416 1608 1616

While the voicemail system will play a generic greeting to caller, prompting them to leave a message, you can record your own greeting.

1. Press the  MESSAGES button.
  - Depending on how your system is configured, you may be required to enter your voicemail password and then press the Done soft key.
2. The visual voice menu is displayed.
3. Use the ▲ up and down ▼ arrow keys to scroll to the option Greeting.
4. Press the Select soft key or OK.
5. Use the soft keys to listen to and record your mailbox greeting.
  - Listen  
Listen to the current greeting or the new greeting just recorded.
  - Record  
Record a new greeting. Note that the greeting must be at least 3 seconds long or the voicemail system will discard it.
  - More  
Switch between the different sets of available soft key functions.
  - Submit  
Submit the new recording as your mailbox greeting.
  - Delete  
Delete your current mailbox greeting. The voicemail will use its default greeting.

### Personal Greetings

Intuity voicemail allows a number of greeting to be recorded and then used for different call types (internal, external, etc). These greetings are setup and recorded through the mailbox voice prompt interface or using the IP Office Phone Manager application.



---


## 13.5 Email Mode

1408 1416 1608 1616

Voicemail email is a feature where emails are sent to your email address when your voicemail mailbox receives a new voicemail message. The email can include the voicemail message as an attachment or it can be just an alert.

This option is only available if configured by your system administrator.


Through the visual voice menu you can change the mode of voicemail email operation.

1. Press the  MESSAGES button.
  - Depending on how your system is configured, you may be required to enter your voicemail password and then press the Done soft key.
2. The visual voice menu is displayed.
3. Use the ▲ up and down ▼ arrow keys to scroll to the option Email. This option is only available if your email address has been set in your voicemail settings by the system administrator.
4. Press the Select soft key or OK.
5. The menu displays your current voicemail email mode setting. Use the ▲ up and down ▼ arrow keys to scroll through the possible settings:
  - Email Mode Off  
Do not send any emails.
  - Email Mode Copy  
Send an email with a copy of the new voicemail message attached.
  - Email Mode Fwd  
Send an email with the new voicemail message attached and delete the message from the voicemail mailbox.
  - Email Mode Alert  
Send an email telling you there is a new message but do not attach a copy of the message.
6. When the required setting is displayed, press the Select soft key. To exit without changing the setting, press the Exit soft key.



## 13.6 Changing Your Voicemail Code


1408 1416 1608 1616

1. Press the  MESSAGES button.
  - Depending on how your system is configured, you may be required to enter your voicemail password and then press the Done soft key.
2. The visual voice menu is displayed.
3. Use the ▲ up and down ▼ arrow keys to scroll to the option Password.
4. Press the Select soft key or OK.
5. Enter your current password and press Done.
6. Enter the new password that you want to use.
  - The new password must be at least 4 digits long.
  - A series of numbers (for example 1234) or repeated numbers are not allowed.
7. Press Done.

## 13.7 Voicemail On/Off

1408 1416 1608 1616

You can control whether the telephone system uses voicemail to answer your unanswered calls. This does not switch off your mailbox which you can still access to play existing messages and use other functions.


1. Press the  MESSAGES button.
  - Depending on how your system is configured, you may be required to enter your voicemail password and then press the Done soft key.
2. The visual voice menu is displayed.
3. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Voicemail.
4. Press the Select soft key.
5. Press the On or Off soft key to change the setting.




---

## 13.8 Transfer to Voicemail

1408 1416 1608 1616



When set to visual voice mode, the  key can be used to transfer your current call to the voicemail mailbox of another user or group.

1. With the call connected, press the  key. You are still connected to the call and can continue talking.
2. Dial the extension number of the user or group to which you want to transfer the call.
3. When the number matches a user or group, their name is displayed.
  - To transfer the call to the user or group's mailbox, press the Select soft key. The caller will hear a few seconds of ringing and then the mailbox greeting.
  - To exit the transfer menu, press the Exit soft key.

## 13.9 Send a Call to Voicemail

1408 1416 1608 1616



 


 

You can transfer a call targeted at you directly to voicemail.

1. If the call is not the current call on the display, use the  up and down  arrow keys to scroll the display to the alerting call.
2. Press the >> double-arrow soft key.
3. Press the To VM soft key.
4. The call is redirected to voicemail.

## 13.10 Visual Voice

1408 1416 1608 1616

This menu option provides a route into visual voice if the MESSAGES key has not been setup to do that.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the  up and down  arrow keys to scroll the display to the option Visual Voice.
3. Press the Select soft key or the OK button or the  right arrow key.
4. Use the  up and down  arrow keys to scroll the menu to Visual Voice.
5. Press the Select soft key.
  - Depending on how your system is configured, you may be required to enter your voicemail password and then press the Done soft key.
6. You will now see the [visual voice menu](#)<sup>[170]</sup>.



# Chapter 14.

## Logging In/Out



---

## 14. Logging In/Out

You may always use the same phone in the same location. However the telephone system provides a number of features that allow you to use any phone on the system to make and receive your calls.

- [Log In](#) <sup>87</sup>  
You can login at any phone that you want to use. All your calls are then directed to that phone and your user settings are applied to calls made and received. If it is a 1408, 1416, 1608 or 1616 phone, your contacts and call log are displayed by the phone.
  - Any existing user of the phone is logged out while you are logged in.
  - If you were logged in on another phone, you are logged out from that phone.
  - If your phone system is in a [Small Community Network](#) <sup>185</sup> of phone systems, it may be possible to login at extensions located on other phone systems in the network. Your system administrator will advise you if you can remote hot desk and what features will still be available to you when you do.
- [Log Out](#) <sup>88</sup>  
When you log out from a phone (or are logged out by another user logging in), the telephone system may apply several actions:
  - If you have a normal default extension and no one else is logged in there, you return to being logged in on that phone.
  - If you remain logged out, you are treated the same as being on do not disturb except that all calls to you go to voicemail if available.
  - If you have a mobile twinned number, the system administrator can configure the system so that calls are still presented to your mobile twin while you are logged out.
- [Lock/Unlock](#) <sup>88</sup>  
Separately from logging in and out, you can lock your phone settings. While locked, the phone can still be used to answer your calls and can be used to make internal and emergency calls. However it cannot be used to make external calls and your user settings cannot be accessed through the phones menus.
  - You can set your phone to automatically lock itself after a period of inactivity.
- Default Extension  
Each extension can be configured with a default user. If you are logged off from an extension, if you have a default extension the system will automatically log you in at your default extension if it is not in use by another user.
- Login Idle Period  
Your system administrator can configure a timeout which will automatically log you out if you do not use the phone in that time to make or answer a call.

### Default Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. Your system administrator will confirm any additional short codes that they may have configured for your use.

- Login: \*35\*N\*P#  
Login to a phone using your extension number (*N*) and login code (*P*).
- Log Out: \*36  
Log yourself out from the phone where you are currently logged in.



## 14.1 Logging In

When you login to a phone, you take control of that phone. Incoming calls for you are redirected to it phone and your user information and settings are available. Any existing user on the phone is logged off when you login.

The method for logging in depends on the current state of the phone:

- [Phone In Use](#)<sup>[87]</sup>  
If the phone is already in use you can still login. The existing user will be logged out.
- [Logged Out](#)<sup>[87]</sup>  
If the phone has no current user, it displays NOT LOGGED IN.
- [Unregistered Phone](#)<sup>[87]</sup>  
If the phone is not registered with the phone system, the Enter Extension menu is displayed.

### 14.1.1 Logging In on a Phone Already in Use

1408 1416 1608 1616

You can login at a phone that is already in use by another user. The existing user is logged out.

1. If the phone is already in use:
  - Press the Features soft key.
  - Use the ▲ up and down ▼ arrow keys to scroll the display to the option Phone User.
  - Press the Select soft key or the OK button or the ► right arrow key.
  - Use the ▲ up and down ▼ arrow keys to scroll the display to the option Login....
  - Press the Select soft key or the OK button or the ► right arrow key.
2. The login menu is displayed. Enter your extension number.
3. Press the Next soft key. Enter your login code.
4. Press the Done soft key.

### 14.1.2 Logging In on a Not Logged In Phone

1408 1416 1608 1616

This method is used to login at an extension where the previous user has [logged out](#)<sup>[88]</sup> and the phone has no current user. You can recognize a phone in this state as it displays NOT LOGGED IN.

1. Press the Select soft key or the OK button.
2. The login menu is displayed. Enter your extension number.
3. Press the Next soft key. Enter your login code.
4. Press the Done soft key.

### 14.1.3 Logging In on an Unregistered Phone

1608 1616

This method is used to login at an [unregistered phone](#)<sup>[90]</sup>. You can recognize an unregistered phone as it displays Enter Extension.

This method is not supported for hot desking on IP Office systems, you can only login using the original base extension number with which the phone was originally installed.









1. Enter your extension number. As you enter it, you can use the Bksp and Clear soft keys to make corrections.
2. When your number is displayed, press the OK soft key.
3. Enter your password. As you enter it, you can use the Bksp and Clear soft keys to make corrections.
4. When you have entered your password, press the OK soft key. If the details are correct, your user details will be loaded into the phone.



---

## 14.2 Logout

1408 1416 1608 1616

1. Press the Features soft key if shown.
  - To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the  up and down  arrow keys to scroll the display to the option Phone User.
3. Press the Select soft key or the OK button or the  right arrow key.
4. Use the  up and down  arrow keys to scroll the display to the option Logout.
5. Press the Select soft key or the OK button or the  right arrow key.
6. You will be logged out of the phone. The follow action will depend on several factors:
  - If the phone does not have a default user, or the default user is currently logged on elsewhere, it displays NOT LOGGED IN.
  - If the phone has a default user and they are not current logged on elsewhere, they are automatically logged back in.







## 14.3 Lock

1408 1416 1608 1616

Rather than logging out, you can lock your phone. You can either lock your phone manually using the steps below or have it [automatically locked](#) <sup>[89]</sup> after a period of phone inactivity.

When your phone is locked:

- It can only be used to make internal and emergency calls.
- None of the menus for your user settings can be accessed.
- To [unlock the phone](#) <sup>[89]</sup> requires your login code if you have [configured a login code](#) <sup>[90]</sup>.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the  up and down  arrow keys to scroll the display to the option Phone User.
3. Press the Select soft key or the OK button or the  right arrow key.
4. Press the Select soft key or the OK button or the  right arrow key.
5. The phone is now locked as indicated by the display.



## 14.4 Auto Lock



1408 1416 1608 1616



Rather than logging out, you can lock your phone. You can either [lock your phone manually](#)<sup>[88]</sup> using the steps below or have it automatically locked after a period of phone inactivity.

When your phone is locked:



- It can only be used to make internal and emergency calls.
- None of the menus for your user settings can be accessed.
- To [unlock the phone](#)<sup>[89]</sup> requires your login code if you have [configured a login code](#)<sup>[90]</sup>.


1. Press the Features soft key if shown.


- To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.


2. Use the  up and down  arrow keys to scroll the display to the option Phone User.

3. Press the Select soft key or the OK button or the  right arrow key.

4. Use the  up and down  arrow keys to scroll the display to the option Phone Screen Settings.

5. Press the Select soft key or the OK button or the  right arrow key.

4. Use the  up and down  arrow keys to scroll the display to the option Auto Lock. The (m) indicates that the setting is in minutes.

5. Press the Change soft key to change the setting or use the  left or right  arrow keys.

- Off  
Do not use the inactivity timer.
- 1 / 5 / 30 / 60  
Lock the phone after the indicated number of minutes.

6. Press the Done soft key.

## 14.5 Unlock

1408 1416 1608 1616

The message PHONE LOCKED indicates that the phone has been [locked](#)<sup>[88]</sup>. While locked, the phone can only be used to make internal calls to other extensions and none of the phone and user menus can be accessed.

1. Press the Unlock soft key.
2. Enter your login code.
3. Press the Done soft key.




---

## 14.6 Changing Your Login Code

1408 1416 1608 1616

You can change your own login code.


1. Press the Features soft key if shown.
  - To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Phone User.
3. Press the Select soft key or the OK button or the ► right arrow key.
4. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Set Password.
5. Press the Select soft key or the OK button or the ► right arrow key.
6. Enter your current login code if you already have one.
7. Press the Done soft key.
8. Enter your new password.
9. The password changed message will appear for a few moments.

## 14.7 Unregistering

1608 1616

This method of logging out will unregister the phone from the telephone system.

- WARNING
  - In this state the phone cannot be used to make or answer any calls including emergency calls.
  - It is strongly recommended that you do not use this option unless directly advised to do so by your system administrator. To log out it is recommended that you use the [preferred log out method](#) <sup>88</sup> provided.

1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Log Out...
3. Press the Select soft key.
4. Press the Log Out soft key.
5. The phone now displays the menu for [unregistered phone log in](#) <sup>87</sup>.



# Chapter 15.

# Redirecting Calls



# 15. Redirecting Calls

This section looks at the different ways that you can redirect your calls to another phone.

- [Follow Me](#) <sup>(93)</sup>  
Temporarily redirect all your calls to another phone that you will be sharing with that phone's normal user. This function can be used in two ways:
  - Follow Me To  
Set the follow me destination from your own phone.
  - Follow Me Here  
Set the follow me destination from the phone that you want to use.
- [Forward](#) <sup>(96)</sup>  
Forward calls to an internal or external number.
  - Forward on Busy  
Forward calls when you have reached the limit of the number of calls that the phone can present to you.
  - Forward on No Answer  
Forward calls if they have rung unanswered at your phone.
  - Forward Unconditional  
Immediately forward calls. Forwarding to voicemail can be selected as an option.
- [Do Not Disturb](#) <sup>(103)</sup>  
Redirect all calls to voicemail if available or otherwise to busy tone.
  - Do not disturb exception numbers can be used to allow calls from specific numbers to ignore do not disturb.
- [Twinning](#) <sup>(105)</sup>  
Twinning is a process whereby you can have your calls ring at two different phones. You can answer calls at either phone. There are two variants of twinning, internal twinning which uses two internal extensions and mobile twinning which twins your internal extension with an external number.

Method		Calls Redirected			Destination		
		Internal	External	Group	Internal	External	Voicemail
Follow Me	Follow Me To	✓	✓	✓	✓	✗	✗
	Follow Me Here	✓	✓	✓	✓	✗	✗
Forward	Forward on Busy	✓	✓	✗	✓	✓	✗
	Forward on No Answer	✓	✓	✗	✓	✓	✗
	Forward Unconditional	✓	✓	✓	✓	✓	✓
Do Not Disturb		✓	✓	✗	✗	✗	✓
Twinning		✓	✓	✓	✓	✓	✓



## 15.1 Follow Me

Follow me to is used to redirect your calls to another extension where you will be working.

The calls are presented with your user name so that they can be distinguished from calls for the extensions normal user. This allows you to share another person's phone without logging them off their phone.

The calls are still subject to all your user settings as if they were ringing at your phone.

All calls are redirected.

### Follow Me To

Follow me to is the function used to enable follow me from your own phone.

### Follow Me Here

Follow here the function used to enable follow me at the extension to which you want your calls redirected.

### Default Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. Your system administrator will confirm any additional short codes that they may have configured for your use.

- Follow Me Here: \*12\*N#  
Dialed at the extension to which you want you calls redirected. Use your own extension number (N) when dialing the short code.
- Follow Me Here Cancel: \*13\*N#  
Dialed at the extension to which you want your calls were redirected. Use your own extension number (N) when dialing the short code.
- Follow Me To: \*14\*N#  
Dialed at your phone. Dial the extension number (N) to which you want your calls redirected. You can dial just \*14# to cancel follow me.
- Cancel All Forwarding: \*00  
Switch off any forwarding. Includes forward unconditional, forward on busy, forward on no answer, follow me and do not disturb.

### Access Control


The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.



---

## 15.1.1 Follow Me To (Features Menu)

Using the user menu you can set and clear follow me to settings.


1. Press the Features soft key if shown.
  - To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Forward.
3. Press the Select soft key or the ► right arrow key.
4. Press the Select soft key or the ► right arrow key. If you already has a follow me to number set, the display below is skipped.
5. Dial the number of another user. When it matches a user their name is displayed. Alternatively use the Dir soft key to [select a user from the directory](#)<sup>[66]</sup>.
  - Save  
Save the selected number as your follow me to destination. All calls to your extension number will be redirected to that destination.
  - Clear  
Clear the currently selected or set number.
  - Back  
Go back to the previous menu.

### Access Control

The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.

## 15.1.2 Follow Me (Status Menu)

If you have set a follow me destination for calls to your phone, you can clear or change the setting through the Status menu.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Follow Me To.
  - To clear the follow me to setting, press the Clear soft key.
  - To change the destination of the setting, press the Edit soft key.

### Access Control


The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.



### 15.1.3 Follow Me Here (Features Menu)

You may be able to change follow me here using the Features menu.

1. Press the Features soft key if shown.

 
- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Forward.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the menu to Follow Me Here.

5. Press the Select soft key or the OK button or the ► right arrow key.

- Use the menu to add or remove users.
  - Use the ▲ up and down ▼ arrow keys to scroll through the names.
  - To remove a user, press the Clear soft key.
  - To add a user, press the Add soft key.
    - Dial the number of another user. When it matches a user their name is displayed. Alternatively, use the Dir soft key to [select a user from the directory](#) .
  - Press the Save soft key to set the follow me here.

#### Access Control

The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.



 
---

## 15.2 Forwarding Calls

Forwarding is used to redirect calls to another extension or an external number.

 
### Forward Unconditional

Forward unconditional can be used to immediately redirect your calls.

- By default this function is only applied to incoming external calls to you. However, if required internal calls and or hunt group calls can also be selected.
- When enabled, all calls matching the settings are forwarded to the number set as the forward unconditional destination. That number can be internal or external.
- You can still use the phone to make outgoing calls. When you go off-hook you will hear broken dial tone.
- The forward on busy and forward on no answer options use the same forwarding destination number. If no number is set, they use the same destination as set for forward unconditional.
- If you have [voicemail enabled](#) , the telephone system will attempt to redirect forwarded calls to voicemail if they are still unanswered after having rung for your no answer time (default 15 seconds). This is not always possible for calls that have been forwarded to an external number.
- D = Diverting (Forwarding) Calls  
A D is shown on your phone's display when you have forward unconditional enabled.

 
### Forward on Busy

Forward on busy redirects your calls when your phone is not able to present you with any more alerting calls.

- By default this function is only applied to incoming external calls to you. However, if required internal calls can also be selected.
- When enabled, all calls matching the settings are forwarded to the number set as the forward on busy/no answer destination. That number can be internal or external.
- Busy is defined as having no available call appearance buttons on which further calls can be presented.
- Hunt group calls are not presented when you are busy and so are not forwarded by this setting.
- The forward on busy and forward on no answer options use the same forwarding destination number. If no number is set, they use the same destination as set for forward unconditional.
- If you have [voicemail enabled](#) , the telephone system will attempt to redirect forwarded calls to voicemail if they are still unanswered after having rung for your no answer time (default 15 seconds). This is not always possible for calls that have been forwarded to an external number.

### Forward on No Answer

Forward on no answer redirect calls that have alerted your phone but have not been answered for some reason.

- By default this function is only applied to incoming external calls to you. However if required internal calls can also be selected.
- When enabled, all calls matching the settings are forwarded to the number set as the forward on busy/no answer destination. That number can be internal or external.
- No answer is defined as having been presented to your phone for your no answer time (default 15 seconds).
- Hunt group calls are not forwarded.
- The forward on busy and forward on no answer options use the same forwarding destination number. If no number is set, they use the same destination as set for forward unconditional.
- If you have [voicemail enabled](#) , the telephone system will attempt to redirect forwarded calls to voicemail if they are still unanswered after having rung for your no answer time (default 15 seconds). This is not always possible for calls that have been forwarded to an external number.



### Default Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. Your system administrator will confirm any additional short codes that they may have configured for your use.

- **Cancel All Forwarding: \*00**  
Switch off any forwarding. Includes forward unconditional, forward on busy, forward on no answer, follow me and do not disturb.
- **Set the Forward Unconditional Destination: \*07\*N#**  
Set the destination number (*N*) for forward unconditional when it is switched on.
  - **Switch Forward Unconditional On: \*01**  
Switch on forward unconditional. A destination must have been set.
  - **Switch Forward Unconditional Off: \*02**
  - **Include Hunt Group Calls in Forward Unconditional: \*50**
  - **Exclude Hunt Group Calls from Forward Unconditional: \*51**
- **Set the Forward On Busy/No Answer Destination: \*57\*N#**  
Set the destination number (*N*) for forward on busy and forward on no answer. If no number has been set, those functions will use the forward unconditional number if set.
  - **Switch Forward On Busy On: \*03**
  - **Switch Forward On Busy Off: \*04**
  - **Switch Forward on No Answer On: \*05**
  - **Switch Forward on No Answer Off: \*06**

### Access Control


The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.



---

## 15.2.1 Forward Unconditional (Status Menu)

You can clear or change your forward unconditional settings through the Status menu.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Fwd Uncon.
  - To switch off forward unconditional, press the Off soft key.
  - To change the forwarding settings, press the Edit soft key.
    - Use the ▲ up and down ▼ arrow keys to scroll through the editing options.
      - Use the ◀ left and right ▶ arrow keys to switch the forwarding on or off.
      - Use the ◀ left and right ▶ arrow keys to select which calls should be forwarded. The options are *External Only*, *External and Group*, *Non Group Calls* and *All Calls*.
      - Select edit to change the number to which calls are forwarded.

### Access Control



The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.




## 15.2.2 Forward Unconditional (Features Menu)



You may be able to change your forward unconditional settings using the Features menu.


1. Press the Features soft key if shown.

- To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the  up and down  arrow keys to scroll the menu to Forward.

3. Press the Select soft key or the OK button or the  right arrow key.

4. Use the  up and down  arrow keys to scroll the menu to Fwd Unconditional.

5. Press the Select soft key or the OK button or the  right arrow key. The screen displayed will vary depending on whether you already have a destination set or are forwarding your calls to voicemail.

- No Number Set

```
Fwd Unconditional
Enter Number / To VMail
Dir      ToVMail  Back
```











- Number Set but Forward Unconditional Off



This menu appears if you already have set a destination number but have turned off forwarding.



```
Fwd Unconditional
↓Fwd Unconditional  [Off]
On      ToVMail     Back
```

- Press the On soft key to switch forward unconditional to the set number on. You can then continue as below.
- Press the ToVMail soft key to switch forward unconditional to voicemail on. You can then continue as below.
- Number Set and Forward Unconditional On
 

Use the  up and down  arrow keys to scroll through the forwarding settings.

  - Use the  up and down  arrow keys to scroll through the editing options.
    - Use the  left and right  arrow keys to switch the forwarding on or off.
    - Use the  left and right  arrow keys to select which calls should be forwarded. The options are *External Only*, *External and Group*, *Non Group Calls* and *All Calls*.
    - Select edit to change the number to which calls are forwarded.
- To Voicemail Set and On
 

Use the  up and down  arrow keys to scroll through the forwarding settings.

  - Select Off to disable forwarding.
  - Use the  left and right  arrow keys to select which calls should be forwarded. The options are *External Only*, *External and Group*, *Non Group Calls* and *All Calls*.

### Access Control


The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.



---

## 15.2.3 Forward On No Answer (Status Menu)

If your phone is set to [forward on no answer](#)<sup>[183]</sup>, you can clear or change the forward settings through the Status menu.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Fwd NoAns.
  - To switch off forward on no answer, press the Off soft key.
  - To change the destination of the setting, press the Edit soft key.
    - Use the ▲ up and down ▼ arrow keys to scroll through the following menu options:
      - Use the ◀ left and right ▶ arrow keys to switch forward on busy as on or off.
      - Use the ◀ left and right ▶ arrow keys to switch forward on no answer on or off.
      - Use the ◀ left and right ▶ arrow keys to select which calls should be forwarded. The options are *All Calls* or *External Calls Only*.
      - The forward destination is shown. Press the Change soft key to enter a new destination or clear the destination.
        - If the current destination is shown in ( ) brackets, that indicates that the forward unconditional destination is being used as no specific forward on busy/no answer destination has been set. Selecting Change will set a forward on busy/no answer destination, it will not change the forward unconditional destination.


### Access Control

The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.



## 15.2.4 Forward On Busy (Status Menu)

If your phone is set to forward on busy, you can clear or change the forward settings through the Status menu.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Fwd OnBsy.
  - To switch off forward on busy, press the Off soft key.
  - To change the destination of the setting, press the Edit soft key.
    - Use the ▲ up and down ▼ arrow keys to scroll through the following menu options:
      - Use the ◀ left and right ▶ arrow keys to switch forward on busy as on or off.
      - Use the ◀ left and right ▶ arrow keys to switch forward on no answer on or off.
      - Use the ◀ left and right ▶ arrow keys to select which calls should be forwarded. The options are *All Calls* or *External Calls Only*.
      - The forward destination is shown. Press the Change soft key to enter a new destination or clear the destination.
        - If the current destination is shown in ( ) brackets, that indicates that the forward unconditional destination is being used as no specific forward on busy/no answer destination has been set. Selecting Change will set a forward on busy/no answer destination, it will not change the forward unconditional destination.

### Access Control

The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.




---

## 15.2.5 Forward On Busy/No Answer (Features Menu)

You may be able to use the Features menu to switch forward on no answer, forward on busy on or off.

1. Press the Features soft key if shown.

 
- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Forward.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the menu to Fwd Busy/No Answer.

5. Press the Select soft key or the OK button or the ► right arrow key. The options that appear will depend in whether a valid forwarding destination has already been set:

- **No Forwarding Destination Set**  
Forward on busy and forward on no answer cannot be used until either a forward unconditional or forward busy/no answer destination is set.
  - If no destination has been set, you are prompted to enter a number.
  - Enter a number or press the Dir soft key to [select a number from the directory](#) .
  - When a number is set, press the Save soft key.
  - The menu can now be used in the same way as if the number had already been set.
- **Forwarding Destination Set**
  - Use the ▲ up and down ▼ arrow keys to scroll through the following menu options:
    - Use the ◀ left and right ▶ arrow keys to switch forward on busy as on or off.
    - Use the ◀ left and right ▶ arrow keys to switch forward on no answer on or off.
    - Use the ◀ left and right ▶ arrow keys to select which calls should be forwarded. The options are *All Calls* or *External Calls Only*.
    - The forward destination is shown. Press the Change soft key to enter a new destination or clear the destination.
      - If the current destination is shown in ( ) brackets, that indicates that the forward unconditional destination is being used as no specific forward on busy/no answer destination has been set. Selecting Change will set a forward on busy/no answer destination, it will not change the forward unconditional destination.

### Access Control

The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.



## 15.3 Do Not Disturb

- When you are in 'do not disturb', you callers are redirected to voicemail if available or otherwise hear busy tone.
- The only people who can call you are those calling from numbers in your do not disturb exceptions list. Forwarding can still be applied to these calls.
- Calls to any hunt group of which you are a member are not presented to you (unless you are the last available member of the group).
- Enabling do not disturb will not affect any calls already being presented to your phone.
- You can still use the phone to make outgoing calls. When you go off-hook you will hear broken dial tone.
- N = No Calls (Do Not Disturb)  
An N is shown on your phone's display when you have do not disturb enabled.

### Default Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. Your system administrator will confirm any additional short codes that they may have configured for your use.







 
- Switch Do Not Disturb On: \*08  
Set your phone to do not disturb.
- Switch Do Not Disturb Off: \*09  
Switch off do not disturb.
- Add a Do Not Disturb Exception Number: \*10\*N#  
Add a number (N) to your list of do not disturb exceptions.
- Delete a Do Not Disturb Exception Number: \*11\*N#  
Remove a number (N) from your list of do not disturb exceptions.
- Cancel All Forwarding: \*00  
Switch off any forwarding. Includes forward unconditional, forward on busy, forward on no answer, follow me and do not disturb.



---




### 15.3.1 DND On/Off (Features Menu)

You can use the Features menu to switch do not disturb on or off. Enabling DND will not affect any calls already being presented to your phone. Hunt group calls will also still be presented if you are the only available member of the group.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the  up and down  arrow keys to scroll the display to the option Call Settings.
3. Press the Select soft key or the OK button or the  right arrow key.
4. Use the  left and right  arrow keys to change the setting or use the indicated soft key.









 


### 15.3.2 DND Off (Status Menu)

You can use the Status menu to switch off do not disturb.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. If necessary use the  up and down  arrow keys to scroll the menu to Do Not Disturb.
  - To clear the do not disturb setting, press the Off soft key.

### 15.3.3 Do Not Disturb Exceptions

These numbers are used to indicate callers who you want to be allowed to call you as normal even when you have do not disturb on. This does not include group calls which are not presented when you are in do not disturb.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the  up and down  arrow keys to scroll the display to the option Call Settings.
3. Press the Select soft key or the OK button or the  right arrow key.
4. Use the  up and down  arrow keys to scroll the menu to DND Exceptions.
5. Press the Select soft key or the OK button or the  right arrow key.
6. The menu will depend on whether any numbers are already set or not.
  - No Numbers Set
    - Press the Add soft key.
    - Enter the number or press the Dir soft key to [select a number from the directory](#) .
    - When the number has been entered, press the Save soft key.
  - Numbers Set
    - Use the  up and down  arrow keys to scroll through the list of numbers. Numbers that contain an N or X are using wildcards for a range of numbers. These are entered by the system administrator.
    - Use the Add soft key to add a new number in the same way as if no numbers had been entered.
    - use the Delete soft key to delete the number shown.



## 15.4 Twinning

Twinning is a process whereby your calls ring on two phones. Twinning is only available if configured by the system administrator.

There are two methods of twinning supported, [internal twinning](#)<sup>[184]</sup> and [mobile twinning](#)<sup>[184]</sup>.

### Internal Twinning

This method of twinning twins your normal phone with another internal phone. Your incoming calls will ring on both phones. You can also make your calls from either extension.

A typical example for internal twinning would be a user who uses both a normal desk phone and also needs a mobile phone while moving around the building.

Your settings are applied to both phones. Similarly message waiting indication and voicemail access from either phone will be to your mailbox.

If both your twinned phones are 1408, 1416, 1608 or 1616 phones, the call logs and directory contacts on each will be yours.

- T = Twinned  
A T is shown on a phone's display if it is internally twinned with your phone. Calls to you will alert on both phones and can be answered by you at either phone.

### Mobile Twinning



 





Mobile twinning is [twinning](#)<sup>[185]</sup> where your calls ring at both your phone and at another number which can include an external number. If you have been configured as a mobile twinning user, you can switch use of mobile twinning on or off through the phone's menus and also change the number to which you are twinned.

Using the phone menus you can switch use of mobile twinning on/off and change the destination number for twinned calls.

#### 15.4.1 Mobile Twinning Control

**1408 1416 1608 1616**

This menu option is only available if you have been configured by the system administrator to be able to use mobile twinning.

- The addition of a button set to the Twinning function is recommended, contact your system administrator. Such a button allows you to transfer a call to your twinning destination, retrieve a call from the twinning destination and access the menu options below to set the twinning destination number and switch twinning on/off.
  1. Press the Features soft key if shown.
    - To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.
  2. Use the  up and down  arrow keys to scroll the menu to Forward.
  3. Press the Select soft key or the OK button or the  right arrow key.
  4. Use the  up and down  arrow keys to scroll the menu to Mobile Twinning.
  5. Press the Select soft key or the OK button or the  right arrow key.
  6. If no twinning number has been set, the menu will prompt you to enter a number.
  7. When a number has been entered, you can access the Enable and Disable soft keys to turn use of mobile twinning on or off. The Clear soft key removes the existing twinning number in order to allow entry of a new number.





# Chapter 16.

# Groups



---

## 16. Groups

Your system administrator can include you as a member of a group along with other users. Each group has its own extension number which can be used as the destination for call.

When a call is presented to a group, it is presented to the available group members, either one at a time or all at the same time, until answered by one of the members.

How long a group call will ring at each group member before being presented to the next member is controlled by the group's own settings. Hunt groups also use voicemail and have their own settings for when an unanswered call should go to the group's mailbox. For group calls, the hunt group's voicemail settings are used rather than your settings.

The system administrator can enable a number of hunt group menu options on your phone. Each option is enabled for a selected hunt group or hunt groups of which you are a member:

- [Enable/Disable Your Group Membership](#)<sup>[108]</sup>  
When your membership of a hunt group is disabled, you no longer receive hunt group calls for that group. You are still a member of the group and can re-enable your membership.
- [Change the Hunt Group Service Status](#)<sup>[110]</sup>  
Each hunt group can be in service, in night service or out of service. When in night service or out of service, the groups calls are redirected to an alternate group or to voicemail.
- [Change the Hunt Group Fallback Destination](#)<sup>[110]</sup>  
These menus allow you to change the alternate groups used for the groups calls when it is in night service or out of service status.

### Default Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. Your system administrator will confirm any additional short codes that they may have configured for your use.


- Night Service Status On: \*20\*N#  
Set a hunt group into night service status by entering its extension number (N).
- Night Service Status Off: \*21\*N#  
Take a hunt group out of night service status by entering its extension number (N).

## 16.1 Group Membership

Only the system administrator can change the groups of which you are a member. However, you can be provided with options to enable or disable your group membership. While your membership of a group is disabled, you will not receive any group calls for that group.

### 16.1.1 Group Membership On/Off (Status Menu)

If the system administrator has allowed you, you can enable/disable your membership of a group through the Status menu. When your membership of a group is disabled you do not receive group calls for that group.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to the hunt group name and your current membership status.
3. Press the Enable or Disable soft key to change the status of your membership of that group.

### Access Control


The system administrator is able to configure if you can access the Membership, State and Fallback options of a group. If you are not configured for any groups then the Group menu is not shown.



## 16.1.2 Group Membership On/Off (Features Menu)

You may be able to enable or disable your group membership for some of the groups to which you belong.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Group.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Press the Select soft key or the OK button or the ► right arrow key.

5. Use the ▲ up and down ▼ arrow keys to scroll through the list of hunt groups you can configure. Use All Groups for all the groups you can configure. The soft keys available will vary depending on whether a particular or all groups is selected and the current state of the selection.

- All Groups
  - Disable  
Disable your membership of all groups.
  - Enable  
Enable your membership of all groups.
- Particular Group
  - Change  
Change your membership of the currently selected group.
  - Done  
Exit the menus.

### Access Control

The system administrator is able to configure if you can access the Membership, State and Fallback options of a group. If you are not configured for any groups then the Group menu is not shown.



---

## 16.2 Group Service Status and Fallback

- Group Service Status

A hunt group can be in one of the following service modes:

- InServ = In Service  
The group operates a normal, distributing calls to available members of the group.
- Night = Night Service  
The group is in night service mode. Calls are redirected to its night service fallback group [if set](#)<sup>[113]</sup>, otherwise to voicemail if available.
  - A hunt group can also be put into and out of night service automatically by the telephone system using a time profile. If that is the case, the night service state cannot be overridden using manual controls.
- OOS = Out of Service  
The group is out of service. Calls are redirected to its out of service fallback group [if set](#)<sup>[113]</sup>, otherwise to voicemail if available.
- Fallback Group  
For the night service and out of service states, the hunt group can be configured with a fallback destination to which its group calls are redirected. This destination is another hunt group. If no fallback destination is set, the group's voicemail is used if available. Separate night service and out of service fallback destinations can be set for the group.

### Display Icon

- O = Out of Service

An O is shown on your phone's display when any of the groups of which you are enabled as a member is set to night service mode. In that mode calls to that group are diverted to its fallback if set or otherwise to voicemail if available.

### Access Control


The system administrator is able to configure if you can access the Membership, State and Fallback options of a group. If you are not configured for any groups then the Group menu is not shown.



## 16.2.1 Changing the Group Service Status (Features Menu)

Using the Features menu you may be able to change the service status of some groups to which you belong.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Group.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the menu to State.

5. Press the Select soft key or the OK button or the ► right arrow key.

6. Use the ▲ up and down ▼ arrow keys to scroll through the list of hunt groups you can configure. Use All Groups for all the groups you can configure. The soft keys available will vary depending on whether a particular or all groups is selected and the current state of the selection.

- All Groups
- InServ = In Service  
The groups operates a normal, distributing calls to available members of the group.
- Night = Night Service  
The group is in night service mode. Calls are redirected to its night service fallback group [if set](#)<sup>[113]</sup>, otherwise to voicemail if available.
  - A hunt group can also be put into and out of night service automatically by the telephone system using a time profile. If that is the case, the night service state cannot be overridden using manual controls.
- OOS = Out of Service  
The group is out of service. Calls are redirected to it out of service fallback group [if set](#)<sup>[113]</sup>, otherwise to voicemail if available.
- Particular Group
  - Change  
Change the status of the selected group.
  - Done  
Exit the menus.

### Access Control


The system administrator is able to configure if you can access the Membership, State and Fallback options of a group. If you are not configured for any groups then the Group menu is not shown.



---

## 16.2.2 Changing the Group Service Status (Status Menu)

If the system administrator has allowed you, you can change the service state of a group through the Status menu.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to the hunt group name and your current membership status.
3. Select the required state using the soft keys:
  - InServ = In Service  
The groups operates a normal, distributing calls to available members of the group.
  - Night = Night Service  
The group is in night service mode. Calls are redirected to its night service fallback group [if set](#)<sup>[113]</sup>, otherwise to voicemail if available.
    - A hunt group can also be put into and out of night service automatically by the telephone system using a time profile. If that is the case, the night service state cannot be overridden using manual controls.
  - OOS = Out of Service  
The group is out of service. Calls are redirected to it out of service fallback group [if set](#)<sup>[113]</sup>, otherwise to voicemail if available.

### Access Control


The system administrator is able to configure if you can access the Membership, State and Fallback options of a group. If you are not configured for any groups then the Group menu is not shown.



## 16.2.3 Changing the Group Fallback

You may be able to use the Features menu to change the fallback group destination for some of the hunt groups of which you are a member.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Group.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the menu to Fallback.

5. Press the Select soft key or the OK button or the ► right arrow key.

- Use the ▲ up and down ▼ arrow keys to scroll through the list of hunt groups you can configure. Use All Groups for all the groups you can configure.
- Use the ◀ left and right ▶ arrow keys to switch between altering night service (*NS*) or out of service (*OOS*) settings.
- The soft keys HGNS+, HGNS-, HGOS+ and HGOS- can be used to change the current status of the group. These options are not shown if the system administrator has not enabled you to change the group's service status.

6. When viewing a particular group, if it already has a fallback destination set the name of that group is shown on the right.

7. To change the fallback destination, press the Change soft key.

8. Either dial the name of the hunt group or press the List soft key for all groups. The display will list all the matching groups.

- Use the ▲ up and down ▼ arrow keys to scroll through the list of hunt groups.
- Select  
Select the currently displayed hunt group as the fallback destination.
- Details  
Display the details of the hunt group name and number.
- Clear  
Return to entering the group name.

### Access Control

The system administrator is able to configure if you can access the Membership, State and Fallback options of a group. If you are not configured for any groups then the Group menu is not shown.






# Chapter 17.

 
 
## Button Features



## 17. Button Features



Those  buttons not configured by the system administrators as appearance buttons can be used for other special features.

The button feature can be accessed by pressing the appropriate button. However they can also be accessed through the Button Features section of the Features menu (press the Features soft key and selecting Button Features). The  up and down  arrow keys can then be used to scroll through the programmed buttons. The associated button will briefly flash its red lamp.

The action of each button is normally set by the system administrator. However you can also use the [self-administer menu](#) <sup>116</sup> to select and assign actions to the buttons.

### Button Lamps



 


 







The use of the button lamp or icon will depend on the action associated with the button.

### Fixed Buttons

On all the phones, the programmable button features appear below the call appearance buttons. These cannot be reprogrammed by the phone user.

## 17.1 Programming a Button

This process is used to select and apply a function to a feature key. It can be used to replace or delete existing functions.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the  up and down  arrow keys to scroll the display to the option Phone User.
3. Press the Select soft key or the OK button or the  right arrow key.
4. Use the  up and down  keys to scroll the display to the option Self-Administer.
5. Press the Select soft key or the OK button or the  right arrow key.
6. Enter your login code.
7. Press the Done soft key.
8. The menu and  buttons can now be used in combination to select and apply functions to buttons.
9. Inspecting/deleting buttons:
  - a. Press a  buttons to see what function is currently programmed for that button.
  - b. To delete the function press Delete. To return to the menu press Back.
10. Programming a button:
  - a. Use the  up and down  keys to scroll the display to the function you want to apply to a button and press Select.
  - b. If the function needs some data, for example an extension number or a number to dial, dial the number.
  - c. Press the  button to which you want the function applied.
  - d. If the button is already configured with a function, you will be prompted whether you want to replace the existing function. To do so press Replace.
  - e. Press Back.
11. Repeat the process to program another button or press Back and then Exit to finish.



## 17.2 Features

There are a wide range of actions that can be assigned to the buttons. This guide only includes details of those that you can assign to a button using the [self-administer](#) menu. Functions that can only be assigned by your system administrator will be explained by the system administrator.

Some actions are not supported on all phones. However they may be set for users who hot desk between different types of phone.

- [Abbreviated Dial](#)
- [Abbreviated Dial Prog](#)
- [Account Code Entry](#)
- [AD Suppress](#)
- [Automatic Callback](#)
- [Break Out](#)
- [Call Forwarding All](#)
- [Call Park](#)
- [Call Park to Other Ext](#)
- [Call Pickup](#)
- [Directed Call Pickup](#)
- [Directory](#)
- [Drop](#)
- [Flash Hook](#)
- [Group Paging](#)
- [Headset Toggle](#)
- [Internal Auto Answer](#)
- [Ringer Off](#)
- [Self Administer](#)
- [Send All Calls](#)
- [Set Hunt Group Night Service](#)
- [Time of Day](#)
- [Timer](#)

A self-administer button set with action data 1 can be used to the following functions onto programmable buttons:

- [Abbreviated Dial](#)
- [Group](#)
- [CPark](#)
- [User](#)
- [Flash Hook](#)

Some actions are not supported on all phones. However they may be set for users who hot desk between different types of phone.



---

## 17.2.1 Abbreviated Dial

This action can be used as a speed dial button. While setting up the button, enter the number you would like it to dial.

You can enter a partial number and complete the dialing after pressing the button. For example pre-program the button with a particular international dialing code.

 
## 17.2.2 Abbreviated Dial Program

This function is not supported on 1600 Series phones.

## 17.2.3 Account Code Entry

This action can be setup with or without an account code.

If the button is setup with an account code, that account code is applied to the current call when the button is pressed.

If the button is setup without an account code, pressing the button will display the [enter account code](#)  menu.

## 17.2.4 AD Suppress

This action can be used to suppress the display of numbers that you dial. When the action is enabled, any numbers that you dial are displayed as s characters.

 
When on, the button's green lamp is lit. Pressing the button again toggles the action on or off.

## 17.2.5 Automatic Callback

A button with this action can be used to set a callback on a user who does not answer. After ring the user, press the button. When the target user ends their next call, the system will ring you and then the targeted user.

When a callback has been set, the button's green lamp is lit. Pressing the button again cancels the callback.

## 17.2.6 Breakout

This action is useable within a [Small Community Network](#)  of IP Office systems. When the button is pressed, the menu will allow selection of another IP Office system within the network. The number that you then dial will be output from that IP Office system.

This feature is useful if you are able to hot desk to other IP Office systems within the network. While logged in on a remote system, it will allow you to dial out from your home system as if still working there.

## 17.2.7 Call Forwarding All

A button with this action can be used to switch forwarding unconditional on/off.

If setup with a preset number, that number is used as the forwarding destination.

 
If setup without a number, when the button is pressed you will be asked to confirm your existing forward unconditional destination number or to enter a new number.



 
The button's green lamp is lit when forwarding is enabled. The button can be pressed again to switch forward unconditional off.



### 17.2.8 Call Park

Button setup with this action can be used to park and unpark calls. The button can be setup with or without a park slot number.

- When associated with a specific park slot number, the button will park and unpark calls from that park slot and indicate when a call is parked in that park slot. See the table below.
- When not associated with a specific park slot number, the button will park calls by assigning them a park slot number based on your extension number.
  - If pressed while a call is connected, that call will be parked using a park slot number assigned by the system based on your extension number.
  - If pressed with no call connected, your phone will display [details of your parked calls](#) .


 
Status	Button
- Calls Parked by Extension	 Green flash.
- Call Parked by Other Extension	 Red flash.
- No Parked Calls	 Off.

### 17.2.9 Call Park to Other Ext

A button setup with this action can be used to park a call against another extension. The park slot number used will be based on your extension number.

The button can be setup with a target user number or left blank for number entry when the button is pressed.

The button can be pressed again to unpark the call.

Status	Button
- Parked Call	 Green flash.
- No Parked Call	 Off.

### 17.2.10 Call Pickup

Answer a call currently ringing on the telephone system.

### 17.2.11 Directed Call Pickup


Answer a call ringing a user or hunt group.

The target user or group number from which to pickup a call can be set when the button is configured. If no number is set, pressing the button will display a menu for number entry.

### 17.2.12 Directory

A button configured with this action will display your contacts directory when pressed.

### 17.2.13 Drop

This action is not supported on your phone as it emulates the  DROP key on the phone.

### 17.2.14 Flash Hook

A button configured for this action will send a hook flash signal to a currently connected analog line.



---

## 17.2.15 Group

A button set to this function monitors the status of a hunt group queue. This is only supported for hunt groups with queuing enabled. The user does not have to be a member of the group being monitored.

 
The button will indicate when the group has calls ringing (Green flash) and calls queued (Red flash). Queued means the group has more calls waiting (not including calls ringing) than available group members.

## 17.2.16 Group Paging

A button configured with this action can be used to make a page call.



The button can be configured with the target user or group for the page. If configured with no number, pressing the button will display a menu for number entry before making the page call.

## 17.2.17 Headset Toggle

This action is not supported on your phone as it emulates the  HEADSET key on the phone.



## 17.2.18 Internal Auto Answer

A button configured with this action can be used to switch internal auto-answer on or off.

Status	16XX/44XX/64XX
- On	 Green on.
- Off	 Off.

## 17.2.19 Ringer Off

A button configured with this action can be used to turn your phone's ringer on or off.

Status	16XX/44XX/64XX
- On	 Green on.
- Off	 Off.



## 17.2.20 Self-Administer

A button configured for this action can be used to access the [self-administer](#) menu and assign any of the following functions onto programmable buttons:

- [Abbreviated Dial](#)
- [Abbreviated Dial Prog](#)
- [Account Code Entry](#)
- [AD Suppress](#)
- [Automatic Callback](#)
- [Break Out](#)
- [Call Forwarding All](#)
- [Call Park](#)
- [Call Park to Other Ext](#)
- [Call Pickup](#)
- [Directed Call Pickup](#)
- [Directory](#)
- [Drop](#)
- [Flash Hook](#)
- [Group Paging](#)
- [Headset Toggle](#)
- [Internal Auto Answer](#)
- [Ringer Off](#)
- [Self Administer](#)
- [Send All Calls](#)
- [Set Hunt Group Night Service](#)
- [Time of Day](#)
- [Timer](#)


 
A self-administer button set with the action data 1 can be used to the following functions onto programmable buttons:

- [Abbreviated Dial](#)
- [Group](#)
- [CPark](#)
- [User](#)
- [Flash Hook](#)

A self-administer button set with the action data 2 can be used to display basic telephone system information like the software version and IP address.

## 17.2.21 Send All Calls

A button configured with this action can be used to switch do not disturb on or off.



Status	16XX/44XX/64XX
- On	 Green on.
- Off	 Off.

## 17.2.22 Set Hunt Group Night Service

A button configured with this action can be used to put a hunt group into or out of night service status.

The button cannot be used to override a hunt group put into night service by a time profile on the telephone system.

The button can be configured with a hunt group number or it can be left blank to toggle all groups of which you are a member.

Status	16XX/44XX/64XX
- On	 Green on.
- Off	 Off.

## 17.2.23 Time of Day

This action is not supported on your phone as it displays the time and date by default.

## 17.2.24 Timer

When a call is made or answered on a call appearance, the call appearance line can include a call timer. This is controlled by the phone's [Call Timer](#) setting.



may want to show or hide the call timer associated with the currently selected call appearance. For more information, see more of the caller ID information. Temporarily turning the call timer of the currently selected call off can be done using a Timer button.

---

Note that after the call, when the call appearance is next used, whether the timer is displayed or not to start with is controlled again by the [Call Timer](#) <sup>(136)</sup> setting.



### 17.2.25 User

Monitors whether another user's phone is idle or in use. The Telephone Number field should contain the users name enclosed in double quotes. The button can be used to make calls to the user or pickup their longest waiting call when ringing. On buttons with a text label, the user name is shown.

The actions performed when the button is pressed will depend on the state of the target user and whether they are local or on a remote SCN system.

Phone		Action
Idle	Off	<ul style="list-style-type: none"> <li>Call the user.</li> </ul>
Ringing	Red flash	<ul style="list-style-type: none"> <li>Displays an option to pickup the call.</li> </ul>
On a Call	Red wink (on with brief flashes)	<ul style="list-style-type: none"> <li>CALL Initiates a call to the users.</li> <li>MESSAGE Cause a single burst of ringing on the target phone. On some phones, when they end their current call their phone will then display PLEASE CALL and your extension number.</li> <li>VOICEMAIL Call the user's voicemail mailbox.</li> <li>CALLBACK Set an automatic callback.</li> <li>DROP Disconnect the user's current call.</li> </ul>
		<p>The following additional options may also be displayed:</p> <p>If configured to be able to intrude on the user:</p> <ul style="list-style-type: none"> <li>Acquire Take control of the call.</li> <li>Intrude Intrude into the call, turning it into a 3-way conference.</li> </ul> <p>If configured to be able to listen to the user:</p> <ul style="list-style-type: none"> <li>Listen Start silent monitoring of the user's call.</li> </ul>
DND	Red on	

- The status shown for a logged out user without mobile twinning will depend on whether they have Forward Unconditional enabled. If they have Forward Unconditional enabled the user is shown as idle. If they do not have Forward Unconditional enabled they will show as if on DND.
- The status shown for a logged out user with mobile twinning will be as follows:
  - If there are any calls alerting or in progress through the IP Office to the twinned destination, the user status is shown as alerting or in-use as appropriate. This includes the user showing as busy/in-use if they have such a call on hold and they have Busy on Held enabled.
  - If the user enables DND through Mobile Call Control or one-X Mobile client, their status will show as DND.
  - Calls from the IP Office direct to the user's twinned destination number rather than redirected by twinning will not change the user's status.



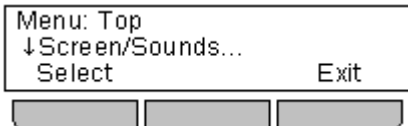


# Chapter 18.

# Phone Settings



# 18. Phone Settings



Pressing the **A** MENU key accesses a menu that can be used to control various phone settings. These are mainly settings stored by the phone rather than user settings that move with you.

The [Phone A-Menu diagram](#) shows a summary of the menu options.

General	Display Controls
<ul style="list-style-type: none"> <li>• <a href="#">Mobile Twinning</a></li> <li>• <a href="#">Withhold Number</a></li> <li>• <a href="#">Redial Mode</a></li> <li>• <a href="#">Backup/Restore</a></li> <li>• <a href="#">En-Bloc Dialing</a></li> <li>• <a href="#">Auto Lock</a></li> </ul>	<ul style="list-style-type: none"> <li>• <a href="#">Brightness</a></li> <li>• <a href="#">Contrast</a></li> <li>• <a href="#">Call Timer Display</a></li> <li>• <a href="#">Language</a></li> <li>• <a href="#">Display Name</a></li> <li>• <a href="#">A-Menu Auto Exit</a></li> <li>• <a href="#">Exit Menu Timer (Auto Return)</a></li> </ul>
Sounds	Ringer Controls
<ul style="list-style-type: none"> <li>• <a href="#">Button Clicks</a></li> <li>• <a href="#">Error Tones</a></li> <li>• <a href="#">Ringer Volume</a></li> <li>• <a href="#">Handset Volume</a></li> <li>• <a href="#">Headset Volume</a></li> <li>• <a href="#">Speaker Volume</a></li> <li>• <a href="#">Automatic Gain Control</a></li> <li>• <a href="#">Default Audio Path</a></li> </ul>	<ul style="list-style-type: none"> <li>• <a href="#">Disabling the Ringer</a></li> <li>• <a href="#">Visual Alerting</a></li> <li>• <a href="#">Audible Alerting</a></li> <li>• <a href="#">Coverage Ring</a></li> <li>• <a href="#">Ring Sound</a></li> <li>• <a href="#">Ringer Volume</a></li> <li>• <a href="#">Internal Auto Answer</a></li> </ul>





## 18.1 Mobile Twinning

1408 1416 1608 1616

This menu option is only available if you have been configured by the system administrator to be able to use mobile twinning.



- The addition of a button set to the Twinning function is recommended, contact your system administrator. Such a button allows you to transfer a call to your twinning destination, retrieve a call from the twinning destination and access the menu options below to set the twinning destination number and switch twinning on/off.

1. Press the Features soft key if shown.

- To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the  up and down  arrow keys to scroll the menu to Forward.

3. Press the Select soft key or the OK button or the  right arrow key.

4. Use the  up and down  arrow keys to scroll the menu to Mobile Twinning.

5. Press the Select soft key or the OK button or the  right arrow key.

6. If no twinning number has been set, the menu will prompt you to enter a number.



7. When a number has been entered, you can access the Enable and Disable soft keys to turn use of mobile twinning on or off. The Clear soft key removes the existing twinning number in order to allow entry of a new number.



## 18.2 Withhold Number

1408 1416 1608 1616



You can select to withhold your number on external calls. Note that this option may not be supported in all situations. It may depend on the configuration of your phone system and options supported by your telephone line provider.



1. Press the Features soft key if shown.

- To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the  up and down  arrow keys to scroll the display to the option Call Settings.

3. Press the Select soft key or the OK button or the  right arrow key.

4. Use the  up and down  menu keys to scroll the menu to Withhold Number.

5. Use the  left or right  arrow keys to change the current setting or press the indicated soft key.




---

## 18.3 Redial Mode

1408 1416 1608 1616

You can select whether your phone uses the redial list or last call redial mode.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Call Settings.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the menu to Redial Action.

5. The current mode, *List* or *One* is displayed.

- *List*

If this mode is selected, pressing the Redial will display a menu of the 10 most recent outgoing calls in your call log. You can select the call that you want to redial and perform a number of other functions.

- *One*

If this mode is selecting, pressing Redial will immediately repeat the most recent outgoing call in your call log. None of the other redial function will be accessible.

6. Use either the Change soft key or the ◀ left or right ▶ arrow keys to change the mode.

7. When the required mode is displayed, press the Done soft key.



## 18.4 En-Bloc Dialing










1408 1416 1608 1616

By default, when you start dialing a number on your phone, the phone immediately connects to the telephone system and starts passing the digits you dial to the phone system. You cannot correct the digits you have already dialed except by ending the call and starting again. Also if you pause dialing for too long the phone system may think that you have finished dialing and will attempt to connect the call using only the digits you have completed dialing so far.

En-bloc dialing allows you to compose and edit the number to dial on your phone's display before it is sent to the phone system to be dialed.


Through the phone's menus you can select whether you want to use traditional or en-bloc dialing when making calls. Your chosen setting is then applied whenever you are using a phone that supports en-bloc dialing.








You can enable or disable your en-bloc dialing setting through the phone's Features menu.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the  up and down  arrow keys to scroll the display to the option Call Settings.
3. Press the Select soft key or the OK button or the  right arrow key.
4. Use the  up and down  arrow keys to scroll the display to the option En-Bloc Dial.
5. Use the  left and right  arrow keys to change the setting or use the indicated soft key.

## 18.5 Erase Options

1408 1416

The A-menu accessed by pressing the  key can be used to set a number of phone options specific to the phone. You can use the Erase menu to reset those options back to their defaults. This option is not available on the 1608 and 1616 phones.

1. Press the  MENU button.
2. Use the  up and down  arrow keys to locate the option Advanced.... Press the Select soft key.
3. Use the  up and down  arrow keys to locate the option Erase. Press the Select soft key.
4. Use the  up and down  arrow keys to select which settings you want to erase.
  - Contacts  
This options is not used as the contacts are stored by the telephone system.
  - Call Log  
This option is not used as your call log is stored by the telephone system.
  - Options  
This option is used to reset other settings set through the phone's A-menu.
  - Language  
This option is not used as your language selection is stored by the telephone system.
  - All  
Will only be applied to your A-menu options.
5. Press the Erase soft key.
6. When completed, press the Done soft key.
7. Press the Exit soft key to exit the menus.



---

## 18.6 Auto Lock



1408 1416 1608 1616



Rather than logging out, you can lock your phone. You can either [lock your phone manually](#)<sup>[88]</sup> using the steps below or have it automatically locked after a period of phone inactivity.

When your phone is locked:



- It can only be used to make internal and emergency calls.
- None of the menus for your user settings can be accessed.
- To [unlock the phone](#)<sup>[89]</sup> requires your login code if you have [configured a login code](#)<sup>[90]</sup>.

1. Press the Features soft key if shown.


- To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.



2. Use the  up and down  arrow keys to scroll the display to the option Phone User.

3. Press the Select soft key or the OK button or the  right arrow key.

4. Use the  up and down  arrow keys to scroll the display to the option Phone Screen Settings.

5. Press the Select soft key or the OK button or the  right arrow key.

4. Use the  up and down  arrow keys to scroll the display to the option Auto Lock. The (m) indicates that the setting is in minutes.

5. Press the Change soft key to change the setting or use the  left or right  arrow keys.

- Off  
Do not use the inactivity timer.
- 1 / 5 / 30 / 60  
Lock the phone after the indicated number of minutes.

6. Press the Done soft key.



## 18.7 Ringer Controls

This section covers controls for adjusting the ringing used by your phone.

- [Switch the Ringer On/Off](#) <sup>[131]</sup>
- [Flash the message lamp for calls \(Visual Alerting\)](#) <sup>[132]</sup>
- [Audible Alerting On/Off](#) <sup>[132]</sup>
- [Coverage Ring](#) <sup>[132]</sup>
- [Ring Sound](#) <sup>[133]</sup>
- [Ring Volume](#) <sup>[134]</sup>
- [Internal Auto Answer](#) <sup>[134]</sup>

Calls are presented with a number of different ring patterns.








- Internal Calls: *Repeated single ring.*
- External Calls: *Repeated double ring.*
- Ringback/Return Calls: *Repeated single-ring followed by two short rings.*  
This type of ring is used for calls that are returning to your phone. For example, a call that you put on hold and which is returning due to being left on hold too long.
- Coverage Ring: *Variable*  
You can also adjust the ringing used for call coverage and bridged appearance buttons. See [Coverage Ring](#) <sup>[132]</sup>. The options are normal ringing, an abbreviated ring (a non-repeated single ring) or no ring.
- Attention Ring: *Variable*  
The system administrator can adjust the ring used for new calls when you are already talking to a caller. The options are an abbreviated ring (a non-repeated single ring) or no ring.
  - For calls alerting on a call coverage or bridged appearance button when you are already on a call, the shorter of the coverage ring or attention ring settings is used.

The system administrator can also adjust the when ringing is used for each specific appearance button. The ringing can be immediate, delayed for a set time or off.

### 18.7.1 Disabling the Ringer

1408 1416 1608 1616

This option can be used to turn off the ringer for all calls. If set to no ring, this disables both the phones [audible alerting](#) <sup>[132]</sup> and [visual alerting](#) <sup>[132]</sup> settings.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the  up and down  arrow keys to scroll the display to the option Call Settings.
3. Press the Select soft key or the OK button or the  right arrow key.
4. Use the  up and down  arrow keys to scroll the menu to Disable Ringer.
5. Press the Change soft key to change the setting. Selecting On will turn the ringer off.




---

## 18.7.2 Visual Alerting

1408 1416 1608 1616


The message waiting lamp at the top-right corner of the phone can also be used to indicate when you have a call alerting your phone. The lamp is flashed to indicate a call waiting to be answered.

1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Call Settings....
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the option Visual Alerting.
5. Use the ◀ left and right ▶ arrow keys or press the On/Off soft key to change the setting.
6. When completed, press the Done soft key.
7. Press the Exit soft key to exit the menus.

## 18.7.3 Audible Alerting

1408 1416

The phone's audible ringer can be switched off. Unlike [disabling the ringer](#)<sup>[131]</sup>, this only affect the ring and does not affect the [visual alerting](#)<sup>[132]</sup>.


1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Call Settings....
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the option Audible Alerting.
5. Use the ◀ left and right ▶ arrow keys or press the On/Off soft key to change the setting.
6. When completed, press the Done soft key.
7. Press the Exit soft key to exit the menus.

## 18.7.4 Coverage Ring

1408 1416 1608 1616

If you have any bridged appearance and or call coverage buttons, you can [set the type of ringing \(coverage ring\)](#)<sup>[132]</sup> that should be used when a call alerts on any of those buttons. The options are to use normal ringing, a single non-repeated ring (abbreviated ring) or no ring. The coverage ring setting is only used if you do not already have a connected call. If you already have a connected call in progress, the shorter of your coverage ring and the system administrator set attention ring settings is used.

This is a user setting which will move with you if you hot desk another phone.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the ▶ right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Call Settings.
3. Press the Select soft key or the OK button or the ▶ right arrow key.
4. Use the ▲ up and down ▼ arrow keys to scroll the menu to Coverage Ring.
5. Press the Change soft key to change the setting.
  - Ring  
Use normal ringing.
  - Abbr  
Use a single non-repeated ring (abbreviated ring).
  - Off  
No ring.



## 18.7.5 Ring Sound


1408 1416 1608 1616

Calls are presented with a number of different ring patterns.

- Internal Calls: *Repeated single ring.*
- External Calls: *Repeated double ring.*
- Ringback/Return Calls: *Repeated single-ring followed by two short rings.*  
This type of ring is used for calls that are returning to your phone. For example, a call that you put on hold and which is returning due to being left on hold too long.
- Coverage Ring: *Variable*  
You can also adjust the ringing used for call coverage and bridged appearance buttons. See [Coverage Ring](#)<sup>[132]</sup>. The options are normal ringing, an abbreviated ring (a non-repeated single ring) or no ring.
- Attention Ring: *Variable*  
The system administrator can adjust the ring used for new calls when you are already talking to a caller. The options are an abbreviated ring (a non-repeated single ring) or no ring.
  - For calls alerting on a call coverage or bridged appearance button when you are already on a call, the shorter of the coverage ring or attention ring settings is used.

The system administrator can also adjust the when ringing is used for each specific appearance button. The ringing can be immediate, delayed for a set time or off.

You can adjust the sound of the ring used by the phone.

1. Press the  MENU button.
2. Press the Select soft key.
3. Use the ▲ up and down ▼ arrow keys to locate the option Personalized Ringing. Press the Select soft key.
  - Use the ▲ up and down ▼ arrow keys to scroll through the different available ring patterns.
  - Press the Play soft key to repeat the currently display ring pattern.
  - To make the currently displayed ring pattern the selected ring pattern for the phone press the Save soft key.
  - To leave the menu without making any changes press the Cancel soft key.
4. When completed, press the Done soft key.
5. Press the Exit soft key to exit the menus.




---

## 18.7.6 Ringer Volume

1408 1416 1608 1616


You can adjust the ringer volume while the phone is idle or while it is ringing.

1. With the phone idle or ringing, press the  key.
2. Use the + plus and – minus keys to adjust the volume.
3. The display will return to normal after a few seconds.

## 18.7.7 Internal Auto Answer

1408 1416 1608 1616

You can select to have internal calls automatically connected if you are not already on a call. The call will be connected, after the phone gives a brief tone, using either the phone's speaker or the headset as set by the phone's [audio path setting](#)<sup>[142]</sup>.

1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Call Settings....
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the option Internal Auto-Answer.
5. Press the Change soft key to change the setting.

This function can be assigned to a [feature button](#)<sup>[116]</sup> configured with the [Internal Auto Answer](#)<sup>[120]</sup> action. The button lamp will indicate when internal auto answer is on.






## 18.8 Display Controls

This section covers controls for adjusting the phones display and the information shown on the display.

- [Display Brightness](#) <sup>[138]</sup>  
Adjust the brightness of the display.
- [Display Contrast](#) <sup>[138]</sup>  
Adjust the contrast of the display.
- [Call Timer](#) <sup>[138]</sup>  
Adjust whether the ring/call time is displayed for calls on appearance buttons.
- [Show Last Call Duration](#) <sup>[138]</sup>  
Display the duration of a call for a few seconds after the call is ended.
- [Display Language](#) <sup>[137]</sup>  
Select the language used for the phones menus.
- [Display Name](#) <sup>[138]</sup>  
Change the information displayed by the phone when it is not in use.
- [A-Menu Auto Exit](#) <sup>[138]</sup>  
Automatically exit the A-menu screens when a new call alerts your phone.
- [Show Waiting Calls](#) <sup>[139]</sup>  
If, when already on a call, there is another call waiting to be answered, automatically toggle the call information displayed between details of the current call and those of the waiting call.
- [Exit Menu Inactivity Timer \(Auto Return\)](#) <sup>[139]</sup>  
Return to the normal call display after a period of inactivity in a menu.



 


### 18.8.1 Display Brightness

1408 1416 1608 1616

1. Press the  MENU button.
2. Press the Select soft key.
3. Press the Select soft key.
4. Use the  up and down  arrow keys to adjust the brightness as required.
5. When completed, press the Done soft key.
6. Press the Exit soft key to exit the menus.

### 18.8.2 Display Contrast

1408 1416 1608 1616

1. Press the  MENU button.
2. Press the Select soft key.
3. Use the  up and down  arrow keys to locate the option Contrast.
4. Press the Select soft key.
5. Use the  left and right  arrow keys to adjust the brightness as required.
6. When completed, press the Done soft key.
7. Press the Exit soft key to exit the menus.



## 18.8.3 Call Timer Display

1608 1616


When you have calls alerting on appearance buttons, the phone can include a timer in the appearance details shown on the display. The timer shows how long the call has been alerting and, if you answer the call, resets to show how long the call has been connected. The timer will also show how long a call has been on hold when you hold the call.

You can turn the timer display on or off. Turning it off provides more space for other call details on the display.

- For the currently selected call appearance, the call timer display can be temporarily turned on or off using a programmable button set to the [Timer](#)<sup>[12]</sup> function.


### 1608 or 1616 Phone

1608 1616

1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Call Settings....
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the option Call Timer.
5. Use the ◀ left and right ▶ arrow keys or press the On/Off soft key to change the setting.
6. When completed, press the Done soft key.
7. Press the Exit soft key to exit the menus.


### 1408 or 1416 Phone

1408 1416

1. Press the Features soft key if shown.
  - To access the menu during a call, press the ▶ right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Call Settings.
3. Press the Select soft key or the OK button or the ▶ right arrow key.
4. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Call Timer.
5. Use the ◀ left and right ▶ arrow keys to change the setting or use the indicated soft key.

## 18.8.4 Last Call Duration Display

As an alternate to [call timer](#)<sup>[13]</sup> display, you can have the phone briefly (4 seconds) display the duration of the call after it is ended.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the ▶ right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Call Settings.
3. Press the Select soft key or the OK button or the ▶ right arrow key.
3. Use the ▲ up and down ▼ arrow keys to highlight Show Last Call Duration.
4. Press Change to change the setting between *On* or *Off*.
5. Press the Save soft key.



## 18.8.5 Display Language


1408 1416 1608 1616

The system administrator can configure which languages are available for use by the phone for its own menus. Up to 5 languages can be made available.

Though the phone's menu you can select which of those languages the phone should use.

Note that many of the messages displayed on the phone use text sent from the telephone system. They will use the default language of the telephone system unless the system administrator has set you to use a specific language supported by the phone system.

Phone Languages	Telephone System Languages	
<ul style="list-style-type: none"> <li>• Dutch</li> <li>• English</li> <li>• French</li> <li>• French (Canadian)</li> <li>• German</li> <li>• Italian</li> <li>• Portuguese (Brazilian)</li> <li>• Russian</li> <li>• Spanish (Castilian)</li> <li>• Spanish (Latin American)</li> </ul>	<ul style="list-style-type: none"> <li>• Danish</li> <li>• Dutch</li> <li>• English (UK)</li> <li>• English (US)</li> <li>• Finnish</li> <li>• French</li> <li>• French (Canadian)</li> <li>• German</li> </ul>	<ul style="list-style-type: none"> <li>• Italian</li> <li>• Norwegian</li> <li>• Portuguese</li> <li>• Portuguese (Brazilian)</li> <li>• Russian</li> <li>• Spanish (Castilian)</li> <li>• Spanish (Latin American)</li> <li>• Swedish</li> </ul>

 
1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Advanced.
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the option Language.
5. Press the Select soft key.
6. Use the ▲ up and down ▼ arrow keys scroll through the different languages available.
7. To select the language currently displayed, press the Select soft key or OK.
8. When completed, press the Done soft key.
9. Press the Exit soft key to exit the menus.



 
## 18.8.6 Display Name

1408 1416 1608 1616

You can select what information is displayed on the top line of the phone display when the phone is idle.







*Normal idle phone display showing extension number, time and date.*





*Optional idle phone display showing extension number and name.*

1. Press the Features soft key if shown.



- To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.



2. Use the  up and down  arrow keys to scroll the display to the option Phone User.

3. Press the Select soft key or the OK button or the  right arrow key.

4. Use the  up and down  arrow keys to scroll the display to the option Phone Screen Settings.

5. Press the Select soft key or the OK button or the  right arrow key.

4. Use the  up and down  arrow keys to scroll the display to the option Display Name.

 
5. Press the Change soft key to change the setting or use the  left or right  arrow keys.

- Off  
Display your extension number and the date and time on the phone when it is idle.
- On  
Display your extension number and name on the phone when it is idle.

6. Press the Done soft key.

## 18.8.7 A-Menu Auto Exit



1408 1416

The Show Phone Screen option only applies to the A-menu screens accessed when you press the  key. If the option is on, if you receive a call while in the A-menu, the phone will automatically exit the menus and display the call details.

1. Press the  MENU button.

2. Use the  up and down  arrow keys to locate the option Call Settings....

3. Press the Select soft key.

4. Use the  up and down  arrow keys to locate the option Show Phone Screen.

5. Use the  left and right  arrow keys or press the On/Off soft key to change the setting.

6. When completed, press the Done soft key.

7. Press the Exit soft key to exit the menus.




## 18.8.8 Show Call Waiting

1408 1416 1608 1616

By default, when you are connected on a call, the display will show details of that call. In order to see details of a another call such as a held call or a waiting call you need to scroll the display using the up and down arrow buttons.

Using the Show Call Waiting option, you can select to have the current call display automatically toggle between details of the current call and the waiting call display.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Phone User.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Phone Screen Settings.

5. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Show Waiting Call.

5. Press the Change soft key to change the setting or use the ◀ left or right ▶ arrow keys.

- Off  
Show details of the current call only.
- On  
Automatically toggle the display between details of the current call and the waiting call.

6. Press the Done soft key.


## 18.8.9 Inactivity Timer (Auto Return)

1408 1416 1608 1616

You can set a timer which will return the phone to its normal call display after a set period of phone inactivity. By default the phone will be set to auto return after 60 seconds.

Note that the timer is not applied to all menus. For example it is not applied to the A-menu and to the visual voice menu. It is also not applied to the System Admin section of the Features menus.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Phone User.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Phone Screen Settings.

5. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Auto Return (s).

5. Press the Change soft key to change the setting or use the ◀ left or right ▶ arrow keys.

- Off  
Do not use the inactivity timer.
- 30 / 60  
Apply the inactivity timer after the selected number of seconds.

6. Press the Done soft key.



---

## 18.9 Volume and Sound

This section covers controls that relate to the various sounds that your phone uses and to the volume. These are in addition to the [ringer controls](#)<sup>[13]</sup> available.

- [Button Click](#)<sup>[14]</sup>  
Turn the phone menu key click on or off.
- [Error Tones](#)<sup>[14]</sup>  
Turn the phone menu error tones on or off.
- [Ringer Volume](#)<sup>[14]</sup>  
Adjust the volume of the ringer used by the phone.
- [Handset Volume](#)<sup>[14]</sup>  
Adjust the incoming call volume heard through the phone's handset.
- [Headset Volume](#)<sup>[14]</sup>  
Adjust the incoming call volume heard through a headset attached to the phone.
- [Speaker Volume](#)<sup>[14]</sup>  
Adjust the incoming call volume heard through the phone's speaker.
- [Automatic Gain Control](#)<sup>[14]</sup>  
Switch automatic gain control on or off.

### Note


The system administrator can set your phone to reset its volume after each call.



## 18.9.1 Button Clicks


1408 1416 1608 1616

While using the phone menus, the phone can provide a key press confirmation click sound. This can be turned off if it is annoying.

1. Press the  MENU button.
2. Press the Select soft key.
3. Use the ▲ up and down ▼ arrow keys to locate the option Button Clicks.
4. Use the ◀ left and right ▶ arrow keys or press the On/Off soft key to change the setting.
5. When completed, press the Done soft key.
6. Press the Exit soft key to exit the menus.

## 18.9.2 Error Tones


1408 1416 1608 1616

1. Press the  MENU button.
2. Press the Select soft key.
3. Use the ▲ up and down ▼ arrow keys to locate the option Error Tone.
4. Use the ◀ left and right ▶ arrow keys or press the On/Off soft key to change the setting.
5. When completed, press the Done soft key.
6. Press the Exit soft key to exit the menus.

## 18.9.3 Ringer Volume

1408 1416 1608 1616


You can adjust the ringer volume while the phone is idle or while it is ringing.

1. With the phone idle or ringing, press the  key.
2. Use the + plus and – minus keys to adjust the volume.
3. The display will return to normal after a few seconds.

## 18.9.4 Handset Volume

1408 1416 1608 1616


While talking via the handset, you can adjust the volume of the incoming call.

1. With the call connected on the handset, press the  key.
2. Use the + plus and – minus keys to adjust the volume.
3. The display will return to normal after a few seconds.

## 18.9.5 Headset Volume

1408 1416 1608 1616

While talking via the headset, you can adjust the volume of the incoming call.

1. With the call connected on the headset, press the  key.
2. Use the + plus and – minus keys to adjust the volume.
3. The display will return to normal after a few seconds.




---

## 18.9.6 Speaker Volume

1408 1416 1608 1616


While talking handsfree via the phone's speaker, you can adjust the volume of the incoming call.

1. With the call connected on the speaker, press the  key.
2. Use the + plus and – minus keys to adjust the volume.
3. The display will return to normal after a few seconds.

## 18.9.7 Automatic Gain Control

1408 1416 1608 1616

When using automatic gain control (AGC), the phone tries to maintain a constant audio level even if the incoming call changes between loud and quiet.


1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Advanced.
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the option Automatic Gain Control (1608 and 1616 phones) or Audio (other phones).
5. Press the Select soft key.
  - Use the ▲ up and down ▼ arrow keys to switch between the *Handset*, *Headset* or *Speaker* settings for automatic gain control.
  - To change a setting, use the ◀ left and right ▶ arrow keys or press the On/Off soft key.
6. When completed, press the Done soft key.
7. Press the Exit soft key to exit the menus.

## 18.9.8 Default Handsfree Audio Path

1408 1416 1608 1616

By default, when you make a call or answer a call without lifting the handset, the audio is played through the phone's speaker while you speak via the phone's microphone.

 
If you have a headset attached, you can change the phone's behavior so the audio is played through the headset by default rather than the speaker.

1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Call Settings....
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the option Audio Path.
5. Use the ◀ left and right ▶ arrow keys or press the Change soft key to change the setting.
6. When completed, press the Done soft key.
7. Press the Exit soft key to exit the menus.



## 18.10 Backup/Restore

If backup/restore has been setup by your system administrator, it is used automatically when you login or log out from the phone.

 
 
 
 
 

 
 
 
 
 
Backup/restore is used for the phone settings that you have configured within the menu's provided by the phone's  MENU button. When you login at another 1600 Series phone extension, your phone settings are restored and applied to that phone. They will remain applied to the phone until another user logs in and their phone settings are applied.

By default your call log and your personal contacts are stored on the telephone system. These will be restored by the telephone system when you login on another 1600 Series phone regardless of whether backup/restore has been configured for 1600 Series phones.

 
 
When backup/restore has been configured, the phone menu provides options to manually access backup and restore functions.

- [Manually Backup Phone Settings](#) 
- [Manually Restore Phone Settings](#) 

The following settings are included in the backup/restore operation:




- [Handset Automatic Gain Control setting](#) 
- [Headset Automatic Gain Control setting](#) 
- [Speaker Automatic Gain Control setting](#) 
- [Default Audio Path](#) 
- [Button Clicks](#) 
- [Error Tones](#) 
- [Personalized Ringing](#) 
- [Redial Mode](#) 
- [Display Call Timer](#) 
- [Visual Alerting](#) 
- [Display Language](#) 

### 18.10.1 Backup

If backup/restore has been setup by your system administrator, it is used automatically when you login or log out from the phone.

In addition, the option below is available to manually trigger a backup of your user settings.

1. Press the  MENU button.
2. Use the  up and down  arrow keys to locate the option Advanced.
3. Press the Select soft key.
4. Press the Backup soft key.

#### Access Control

This option is only available if your system administrator has configured backup/restore operation.




---

## 18.10.2 Restore

1608 1616

If backup/restore has been setup by your system administrator, it is used automatically when you login or log out from the phone.

In addition, the option below is available to manually trigger a restore of your user settings.

1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Advanced.
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the option Manual Restore.
5. Press the Restore soft key.

### Access Control


This option is only available if your system administrator has configured backup/restore operation.



## 18.11 Viewing Information

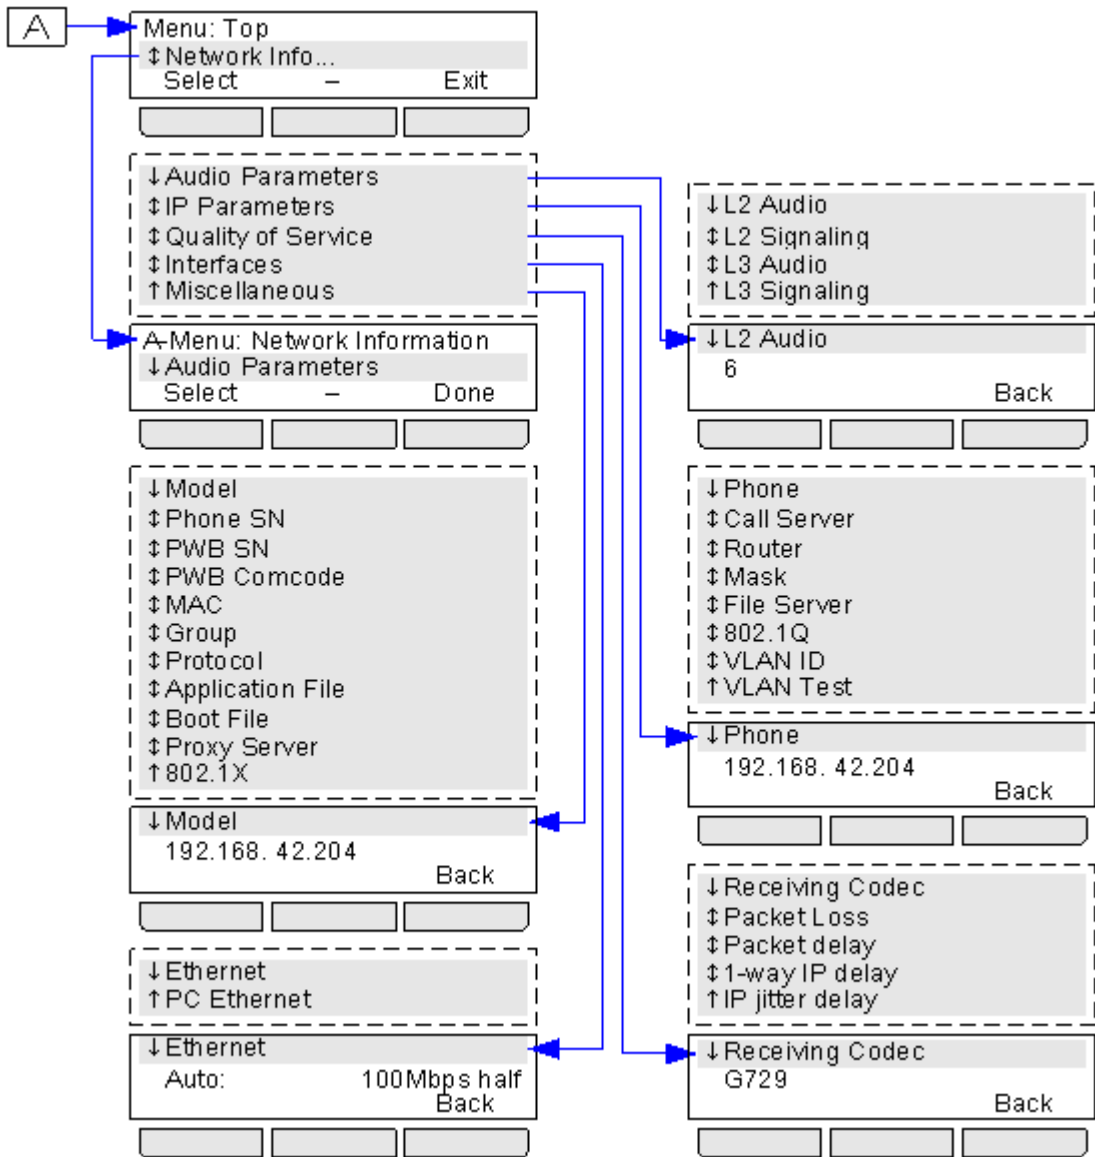
1608 1616

You can view a large amount of information about the phone's settings and current operation. When reporting a problem to your system administrator they may ask you to provide some of this information to help resolve the problem.

1. Press the  MENU button.
2. Use the ▲ up and down ▼ arrow keys to locate the option Network Info....
3. Press the Select soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the aspect of phone operation on which you need information.
  - Audio Parameters
  - IP Parameters  
The IP settings with which the phone has been configured by the installer or by a DHCP server.
  - Quality of Service  
Quality of Service (QoS) measurements for the current call.
  - Interfaces  
The current speed of the phone's ethernet port and its PC pass-through Ethernet port.
  - Miscellaneous  
Details of the phone and the firmware that it current has loaded.
5. Press the Select soft key to access the currently displayed option.
6. Use the ▲ up and down ▼ arrow keys to scroll through the different items of information available.
7. To return to the parent menu, press the Back soft key.

The diagram below summarizes the information accessible through the menu.





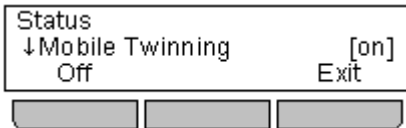
# Chapter 19.

# Status Menu



---

## 19. Status Menu



The Status menu is not always visible. It is shown when you have any special call routing features active. For example do not disturb switched on.


It is also shown if the system administrator has given you the rights to change the status of your hunt group memberships or to change the service status of the hunt groups.

A summary of the menu options is shown in the [Status Menu diagram](#) <sup>[17]</sup>.

- [Switching mobile twinning off](#) <sup>[152]</sup>
- [View and unpark parked calls](#) <sup>[152]</sup>
- [Clear or change a follow me to setting](#) <sup>[148]</sup>
- [Switch off do not disturb](#) <sup>[148]</sup>
- [Clear or change forward unconditional](#) <sup>[150]</sup>
- [Clear or change forward on no answer](#) <sup>[150]</sup>
- [Clear or change forward on busy](#) <sup>[149]</sup>
- [Clear or change follow me here settings](#) <sup>[149]</sup>
- [Change hunt group membership status](#) <sup>[151]</sup>
- [Change hunt group service status](#) <sup>[151]</sup>
- [View System Alarms](#) <sup>[152]</sup>


### 19.1 Do Not Disturb

You can use the Status menu to switch off do not disturb.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. If necessary use the ▲ up and down ▼ arrow keys to scroll the menu to Do Not Disturb.
  - To clear the do not disturb setting, press the Off soft key.

### 19.2 Follow Me To

If you have set a follow me destination for calls to your phone, you can clear or change the setting through the Status menu.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Follow Me To.
  - To clear the follow me to setting, press the Clear soft key.
  - To change the destination of the setting, press the Edit soft key.


#### Access Control

The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.



## 19.3 Follow Me Here

If other users has a follow me set to you phone, you can clear or change the setting through the Status menu.


1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Follow Me Here. There will be a separate entry for each user.
  - To clear the follow me to setting, press the Clear soft key.
  - To change the destination of the setting, press the Edit soft key.
  - Use the menu to add or remove users.
    - Use the ▲ up and down ▼ arrow keys to scroll through the names.
    - To remove a user, press the Clear soft key.
    - To add a user, press the Add soft key.
      - Dial the number of another user. When it matches a user their name is displayed. Alternatively, use the Dir soft key to [select a user from the directory](#)<sup>168</sup>.
    - Press the Save soft key to set the follow me here.

### Access Control

The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.

## 19.4 Forward On Busy

If your phone is set to forward on busy, you can clear or change the forward settings through the Status menu.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Fwd OnBsy.
  - To switch off forward on busy, press the Off soft key.
  - To change the destination of the setting, press the Edit soft key.
    - Use the ▲ up and down ▼ arrow keys to scroll through the following menu options:
      - Use the ◀ left and right ▶ arrow keys to switch forward on busy as on or off.
      - Use the ◀ left and right ▶ arrow keys to switch forward on no answer on or off.
      - Use the ◀ left and right ▶ arrow keys to select which calls should be forwarded. The options are *All Calls* or *External Calls Only*.
      - The forward destination is shown. Press the Change soft key to enter a new destination or clear the destination.
        - If the current destination is shown in ( ) brackets, that indicates that the forward unconditional destination is being used as no specific forward on busy/no answer destination has been set. Selecting Change will set a forward on busy/no answer destination, it will not change the forward unconditional destination.

### Access Control


The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.



---

## 19.5 Forward On No Answer

If your phone is set to [forward on no answer](#) <sup>[183]</sup>, you can clear or change the forward settings through the Status menu.


1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Fwd NoAns.
  - To switch off forward on no answer, press the Off soft key.
  - To change the destination of the setting, press the Edit soft key.
    - Use the ▲ up and down ▼ arrow keys to scroll through the following menu options:
      - Use the ◀ left and right ▶ arrow keys to switch forward on busy as on or off.
      - Use the ◀ left and right ▶ arrow keys to switch forward on no answer on or off.
      - Use the ◀ left and right ▶ arrow keys to select which calls should be forwarded. The options are *All Calls* or *External Calls Only*.
      - The forward destination is shown. Press the Change soft key to enter a new destination or clear the destination.
        - If the current destination is shown in ( ) brackets, that indicates that the forward unconditional destination is being used as no specific forward on busy/no answer destination has been set. Selecting Change will set a forward on busy/no answer destination, it will not change the forward unconditional destination.

### Access Control

The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.

## 19.6 Forward Unconditional

You can clear or change your forward unconditional settings through the Status menu.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Fwd Uncon.
  - To switch off forward unconditional, press the Off soft key.
  - To change the forwarding settings, press the Edit soft key.
    - Use the ▲ up and down ▼ arrow keys to scroll through the editing options.
      - Use the ◀ left and right ▶ arrow keys to switch the forwarding on or off.
      - Use the ◀ left and right ▶ arrow keys to select which calls should be forwarded. The options are *External Only*, *External and Group*, *Non Group Calls* and *All Calls*.
      - Select edit to change the number to which calls are forwarded.


### Access Control

The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.



## 19.7 Forwarded Here

This option allows you to see the names of users who are currently forwarding calls to you. It includes forward unconditional, forward on no answer and forward on busy. A separate entry is shown for each user.


1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to Fwd To Here.

### Access Control

The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.


## 19.8 Group Membership

If the system administrator has allowed you, you can enable/disable your membership of a group through the Status menu. When your membership of a group is disabled you do not receive group calls for that group.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to the hunt group name and your current membership status.
3. Press the Enable or Disable soft key to change the status of your membership of that group.

## 19.9 Group Service Status

If the system administrator has allowed you, you can change the service state of a group through the Status menu.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. Use the ▲ up and down ▼ arrow keys to scroll the menu to the hunt group name and your current membership status.
3. Select the required state using the soft keys:
  - InServ = In Service  
The groups operates a normal, distributing calls to available members of the group.
  - Night = Night Service  
The group is in night service mode. Calls are redirected to its night service fallback group [if set](#)<sup>[113]</sup>, otherwise to voicemail if available.
    - A hunt group can also be put into and out of night service automatically by the telephone system using a time profile. If that is the case, the night service state cannot be overridden using manual controls.
  - OOS = Out of Service  
The group is out of service. Calls are redirected to it out of service fallback group [if set](#)<sup>[113]</sup>, otherwise to voicemail if available.

### Access Control


The system administrator is able to configure if you can access the Membership, State and Fallback options of a group. If you are not configured for any groups then the Group menu is not shown.



---


## 19.10 Mobile Twinning

If you have been configured as a mobile twinning user, you can use the status menu to switch mobile twinning mode off.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. If necessary use the ▲ up and down ▼ arrow keys to scroll the menu to Mobile Twinning.
  - To clear the setting, press the Off soft key.

## 19.11 Parked Calls

While parked calls are parked on the telephone system and can be unparked by any other user, the parked call indication is sent to a particular extension. If there are any calls parked against your phone, you can view and unpark them using the Status menu.

1. Press the Status soft key if shown. To access the status menu during a call, press the  PHONE key and then press the Status soft key if shown.
2. If you have any parked calls, the Parks option is displayed. The option is not present if you do not have calls parked against your extension.
3. Press the Details soft key.
4. Use the ▲ up and down ▼ arrow keys to scroll through the parked calls.
5. To unpark a particular call, press the CPkUp soft key.

## 19.12 System Alarms

If you have been configured as a system administrator (also called a system phone user), an S on the phone's display indicates a system alarm message. While you are not expected to be able to fix the error causing the alarm, the error message allows you to report the problem to your system maintainer.

- **Memory Card Failure**  
There is a problem with one of the memory cards used by the telephone system. Selecting Admin will take you to the system administration menu where you can check the [status of the memory cards](#) <sup>[163]</sup>.
- **Expansion Failure**  
There is a problem with one of the external expansion modules attached to the telephone system.
- **Voicemail Failure**  
The voicemail system is not available.
- **Voicemail Almost Full**  
The voicemail system is nearly out of storage space for any more messages, prompts and recordings.
- **Voicemail Full**  
The voicemail system cannot store any more messages, prompts and recordings.
- **Licence Key Failure**  
There is a problem with the memory card used to license features and applications.
- **System Boot Error**  
The telephone system has encountered an error while restarting.
- **Corrupt Date/Time**  
There is an error in the date or time being used by the system. Selecting Admin will take you to the system administration menu where you can change the [date](#) <sup>[159]</sup> and [time](#) <sup>[159]</sup>.



# Chapter 20.

# Short Codes



---

## 20. Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. Your system administrator will confirm any additional short codes that they may have configured for your use.

These are useful as they can be dialed from any phone on the system. For example this allows you to login at a basic analog extension and still control a number of features.

Some short codes require you to enter some information when you dial them, typically an extension number. That is indicated by N in the short codes shown below.

### Park/Unpark

- Park Call: \*37\*N#  
Parks the held call using the park number dialed in place of *N*.
- Unpark Call: \*38\*N#  
Unpark the call parked using the park number *N*.

### Call Pickup

- Pickup Any Call: \*30  
Answer a call ringing on the telephone system.
- Pickup a Group Call: \*31  
Answer a call ringing a group of which you are a member.
- Pickup a Users Call: \*32\*N#  
Pickup a call ringing a user's extension number (*N*).
- Pickup a Group Members Call: \*53\*N#  
Pickup a call ringing the members of a group (*N*). This does not necessarily have to be a group call.

### Conference

- Conference Held Calls: \*47  
Start a conference between yourself and any calls that you have on hold.

### Do Not Disturb

- Switch Do Not Disturb On: \*08  
Set your phone to do not disturb.
- Switch Do Not Disturb Off: \*09  
Switch off do not disturb.
- Add a Do Not Disturb Exception Number: \*10\*N#  
Add a number (*N*) to your list of do not disturb exceptions.
- Delete a Do Not Disturb Exception Number: \*11\*N#  
Remove a number (*N*) from your list of do not disturb exceptions.
- Cancel All Forwarding: \*00  
Switch off any forwarding. Includes forward unconditional, forward on busy, forward on no answer, follow me and do not disturb.

### Follow Me

- Follow Me Here: \*12\*N#  
Dialed at the extension to which you want you calls redirected. Use your own extension number (*N*) when dialing the short code.
- Follow Me Here Cancel: \*13\*N#  
Dialed at the extension to which you want your calls were redirected. Use your own extension number (*N*) when dialing the short code.
- Follow Me To: \*14\*N#  
Dialed at your phone. Dial the extension number (*N*) to which you want your calls redirected. You can dial just \*14# to cancel follow me.
- Cancel All Forwarding: \*00  
Switch off any forwarding. Includes forward unconditional, forward on busy, forward on no answer, follow me and do not disturb.



## Forwarding

- **Cancel All Forwarding: \*00**  
Switch off any forwarding. Includes forward unconditional, forward on busy, forward on no answer, follow me and do not disturb.
- **Set the Forward Unconditional Destination: \*07\*N#**  
Set the destination number (*N*) for forward unconditional when it is switched on.
  - **Switch Forward Unconditional On: \*01**  
Switch on forward unconditional. A destination must have been set.
  - **Switch Forward Unconditional Off: \*02**
  - **Include Hunt Group Calls in Forward Unconditional: \*50**
  - **Exclude Hunt Group Calls from Forward Unconditional: \*51**
- **Set the Forward On Busy/No Answer Destination: \*57\*N#**  
Set the destination number (*N*) for forward on busy and forward on no answer. If no number has been set, those functions will use the forward unconditional number if set.
  - **Switch Forward On Busy On: \*03**
  - **Switch Forward On Busy Off: \*04**
  - **Switch Forward on No Answer On: \*05**
  - **Switch Forward on No Answer Off: \*06**

## Hunt Group

- **Night Service Status On: \*20\*N#**  
Set a hunt group into night service status by entering its extension number (*N*).
- **Night Service Status Off: \*21\*N#**  
Take a hunt group out of night service status by entering its extension number (*N*).

## Login

- **Login: \*35\*N\*P#**  
Login to a phone using your extension number (*N*) and login code (*P*).
- **Log Out: \*36**  
Log yourself out from the phone where you are currently logged in.

## Voicemail

- **Check Messages: \*17**  
Access mailboxes to check for messages.
- **Voicemail On: \*18**  
Allow voicemail to be used to answer calls.
- **Voicemail Off: \*19**  
Stop voicemail being used to answer calls.
- **Voicemail Ringback On: \*48**  
Have voicemail ring your phone when you have any new messages. It will call when you use the phone.
- **Voicemail Ringback Off: \*49**  
Switch off ringback.





# Chapter 21.

# System Administration



---

## 21. System Administration


If necessary, the system administrator can configure you as a 'system phone' user. This allows you to perform a range of additional functions to help maintain your phone system.

- Edit external contacts stored by the phone system.
- View and/or change the system date and time.
- Check the system type and software version.
- Check and perform various actions on any additional memory card installed in the telephone system.

### 21.1 Checking the System and Software Version

1408 1416 1608 1616

Being able to check and report the system software version may be useful when reporting any potential problems to the system maintainer.

1. Press the Features soft key if shown.
  - To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Phone User.
3. Press the Select soft key or the OK button or the ► right arrow key.
4. Use the ▲ up and down ▼ arrow keys to scroll the display to the option System Admin. If the option is not present then you may not have been configured as a system phone user by your system administrator.
5. Press the Select soft key.
6. Enter your security code (this is the same as your login code) and press the Done soft key.
7. Use the up and down arrow keys to scroll the display to the option System Information.
8. Press the Select soft key or the OK button or the ► right arrow key.
9. You can now scroll through information about the system including its IP address and license key serial number.




## 21.2 Checking the Time Settings

1408 1416 1608 1616

When the phone system is configured to get the time automatically from a time server, you can view the settings through the phone. The details include the address of the time server, the UTC time value obtained and the current local time. If daylight saving time (DST) is being used, the DST setting being applied is also shown.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Phone User.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the display to the option System Admin. If the option is not present then you may not have been configured as a system phone user by your system administrator.

5. Press the Select soft key.

6. Enter your security code (this is the same as your login code) and press the Done soft key.

7. Use the up and down arrow keys to scroll the display to the option Time Server Status.

8. Press the Select soft key or the OK button or the ► right arrow key. The current date being used by the telephone system is displayed.


9. Use the ▲ up and down ▼ arrow keys to scroll through the details.

## 21.3 Setting the Date

1408 1416 1608 1616

The process below can be used when the telephone system does not obtain the time and date automatically. On systems that are configured to obtain the time automatically, the current [time server settings](#)<sup>159</sup> can be displayed.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Phone User.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the display to the option System Admin. If the option is not present then you may not have been configured as a system phone user by your system administrator.

5. Press the Select soft key.

6. Enter your security code (this is the same as your login code) and press the Done soft key.

7. Use the up and down arrow keys to scroll the display to the option Date.

8. Press the Select soft key or the OK button or the ► right arrow key. The current date being used by the telephone system is displayed.

9. Enter the required date, using the either the \* or # keys to enter the / separators. To delete the previous digit or character entered press the ◀ left arrow key.

10. When a complete valid date has been entered, the display will confirm that by showing the full date and the Done soft key option.


11. To set the date as the new date to be used by the telephone system press the Done soft key.

## 21.4 Setting the Time

1408 1416 1608 1616

The process below can be used when the telephone system does not obtain the time and date automatically. On systems that are configured to obtain the time automatically, the current [time server settings](#)<sup>159</sup> can be displayed.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Phone User.

3. Press the Select soft key or the OK button or the ► right arrow key.












- 
4. Use the ▲ up and down ▼ arrow keys to scroll the display to the option System Admin. If the option is not present then you may not have been configured as a system phone user by your system administrator.
  5. Press the Select soft key.
  6. Enter your security code (this is the same as your login code) and press the Done soft key.
  7. Use the up and down arrow keys to scroll the display to the option Time.
  8. Press the Select soft key or the OK button or the ► right arrow key. The current time being used by the telephone system is displayed.
  9. Enter the required time in 24-hour clock format:
    - Use either the \* or # keys to enter the : separator.
    - To delete the previous digit or character entered press the ◀ left arrow key.
  10. When a complete valid time has been entered, the display will confirm that by showing the Done soft key option.
  11. To set the time as the new time to be used by the telephone system press the Done soft key.



## 21.5 Setting the Time Offset

1408 1416 1608 1616

1. Press the Features soft key if shown.
  - To access the menu during a call, press the  right arrow key or press the  PHONE key and then press the Features soft key.
2. Use the  up and down  arrow keys to scroll the display to the option Phone User.
3. Press the Select soft key or the OK button or the  right arrow key.
4. Use the  up and down  arrow keys to scroll the display to the option System Admin. If the option is not present then you may not have been configured as a system phone user by your system administrator.
5. Press the Select soft key.
6. Enter your security code (this is the same as your login code) and press the Done soft key.
7. Use the up and down arrow keys to scroll the display to the option Time Offset or UTC Offset.
8. Press the Select soft key or the OK button or the  right arrow key. The current offset is displayed.
9. Enter the offset required in hours and minutes:
  - To enter the : separator press either the \* or # key.
  - To delete the previous digit or character entered press the  left arrow key.
  - To change the offset from between positive or negative press the +/- soft key.
10. When a valid offset has been entered, the Done soft key is displayed.
11. To apply the offset to the current telephone system time press the Done soft key.




---

## 21.6 System Shutdown

1408 1416 1608 1616

You can shutdown the telephone system for a specified number of minutes. Note that this is not a polite shut-down, once you have confirmed the action, any existing calls and services using the IP Office telephone system will start being disconnected. The telephone system will then remain unavailable for the duration you specify, the default being 10 minutes. After the shutdown duration it will take up to 5 more minutes for the telephone system to complete its restart.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Phone User.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the display to the option System Admin. If the option is not present then you may not have been configured as a system phone user by your system administrator.

5. Press the Select soft key.

6. Enter your security code (this is the same as your login code) and press the Done soft key.

7. Use the up and down arrow keys to scroll the display to the option System Shutdown.

8. Press the Select soft key or the OK button or the ► right arrow key.

9. The current default timeout (10 minutes) setting is shown and can be used by pressing Done soft key. Otherwise enter the timeout required in hours and minutes and then press the Done soft key.

- The allowable range for the timeout is from *00:05* to *24:00*. Note that the Done soft key is not displayed if the timeout entered is not within the allowed range.
- To enter the : symbol in the timeout press either the \* or # key.
- To delete the previous digit or character entered press the ◀ left arrow key.

10. After pressing the Done soft key, you will be asked to confirm whether you want to shutdown the telephone system. Only proceed if you are sure. If you are not sure press the Back soft key.

11. If you press the Confirm soft key, the telephone system will switch itself to a shutdown state. This will disconnect all current calls and services.




## 21.7 Memory Card Management

1408	1416	1608	1616
------	------	------	------

The telephone system can be fitted with an additional memory card or cards which are used for various functions. The memory card menu allows you to check the status of the card or cards fitted to your telephone system and to perform a number of actions on the cards.

1. Press the Features soft key if shown.

- To access the menu during a call, press the ► right arrow key or press the  PHONE key and then press the Features soft key.

2. Use the ▲ up and down ▼ arrow keys to scroll the display to the option Phone User.

3. Press the Select soft key or the OK button or the ► right arrow key.

4. Use the ▲ up and down ▼ arrow keys to scroll the display to the option System Admin. If the option is not present then you may not have been configured as a system phone user by your system administrator.

5. Press the Select soft key.

6. Enter your security code (this is the same as your login code) and press the Done soft key.

7. Use the up and down arrow keys to scroll the display to the option Memory Card.

8. Press the Select soft key or the OK button or the ► right arrow key.

9. The menu lists both the current state of the memory card or cards that can be added to the telephone system followed by the actions that can be performed on those cards.

- The status of each memory card listed will be one of No Card, Active or Inactive. Entries are only listed for the types of cards that are supported on the telephone system to which you are connected:
  - CF  
This refers to the compact flash card that can be fitted to systems that support just a single card.
  - System  
This refers to the first SD memory card that can be fitted to systems that support two memory cards.
  - Option  
This refers to the second SD memory card that can be fitted to systems that support two memory cards.
- The actions that can be performed on the memory cards are listed after the status of the cards. The actions available will depend on the cards fitted and the current status of those cards. After selecting an action, you can then select the card on which you want the action performed and then press the Confirm soft key to start the action.
  - Shut Down  
This option is available when an *Active* card is present. It allows the card to be made inactive.
  - Start Up  
This option is available when an *Inactive* card is present. It allows the card to be made active again.
  - System Backup  
This option is available when a System card is present and active. It allows the telephone system's current configuration settings to be copied to a backup file on the memory card.
  - System Restore  
This option is available when a System card is present and active. It overwrites the telephone system's current configuration settings with those from a backup file on the card.
  - Upgrade Config  
Copy configuration files from an Optional card to the System card in an IP Office IP500 V2 control unit.
  - Upgrade Binaries  
Copy software files from an Optional card to the System card in an IP Office IP500 V2 control unit.
  - Copy  
This option is available on systems where both a System and Option memory card are active. It copies the contents of the System card to the Option card.



---

## 21.8 System Alarms

If you have been configured as a system administrator (also called a system phone user), an S on the phone's display indicates a system alarm message. While you are not expected to be able to fix the error causing the alarm, the error message allows you to report the problem to your system maintainer.

- **Memory Card Failure**  
There is a problem with one of the memory cards used by the telephone system. Selecting Admin will take you to the system administration menu where you can check the [status of the memory cards](#)<sup>[163]</sup>.
- **Expansion Failure**  
There is a problem with one of the external expansion modules attached to the telephone system.
- **Voicemail Failure**  
The voicemail system is not available.
- **Voicemail Almost Full**  
The voicemail system is nearly out of storage space for any more messages, prompts and recordings.
- **Voicemail Full**  
The voicemail system cannot store any more messages, prompts and recordings.
- **Licence Key Failure**  
There is a problem with the memory card used to license features and applications.
- **System Boot Error**  
The telephone system has encountered an error while restarting.
- **Corrupt Date/Time**  
There is an error in the date or time being used by the system. Selecting Admin will take you to the system administration menu where you can change the [date](#)<sup>[159]</sup> and [time](#)<sup>[159]</sup>.



# Chapter 22.

## The Phone Menus



---

## 22. The Phone Menus

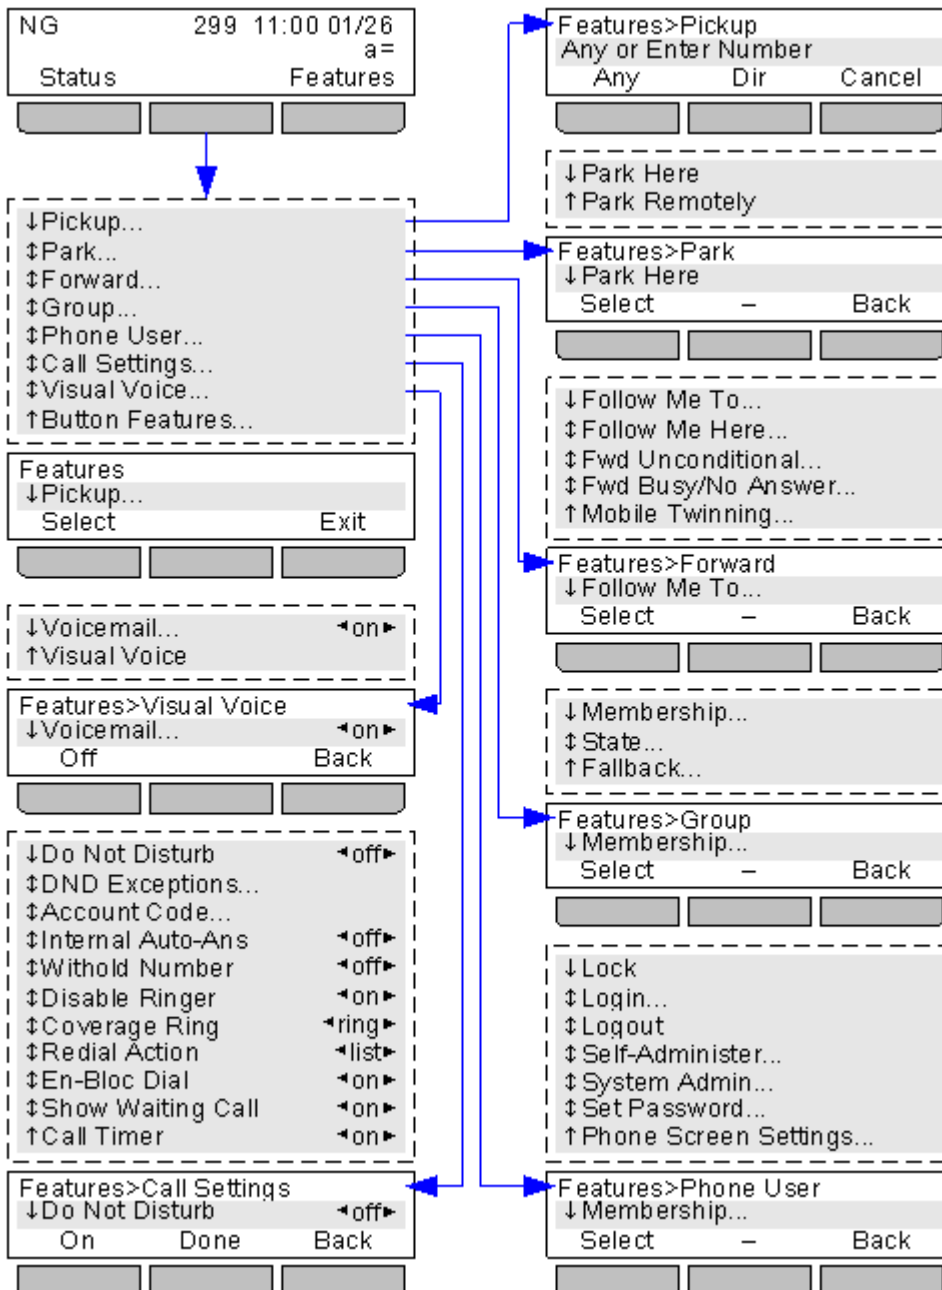
This section gives summaries of the phone menus.


- [Features Menu](#)<sup>[167]</sup>  
This menu allows you to change a number of your user settings.
  - [Self-Administer Menu](#)<sup>[168]</sup>  
This is a sub-menu of the Features menu. It allows you to assign functions to the feature buttons.
- [Visual Voice Menu](#)<sup>[170]</sup>  
This menu is used to access voicemail messages and other voicemail settings.
- [Status Menu](#)<sup>[171]</sup>  
This menu is used to change the settings of various features when they are enabled.
- [A-Menu](#)<sup>[172]</sup>  
This menu is used to configure various phone settings and to view details of the phone software.
- [Call Log Menu](#)<sup>[174]</sup>  
This menu is used to display a log of missed, outgoing and answered calls.
- [Contacts Menu](#)<sup>[175]</sup>  
This menu is used to display and select personal and system directory entries.
- [Redial Menu](#)<sup>[176]</sup>  
This menu is displayed when the Redial key is set to use [List](#)<sup>[43]</sup> mode.
- [Phone Locked Menu](#)<sup>[177]</sup>  
This menu is displayed when you have locked the phone.
- [System Admin Menu](#)<sup>[178]</sup>  
This menu is only available to a user who has been configured as a 'system phone' user by the system maintainer.



## 22.1 Features Menu

This menu is accessed by pressing the Features soft key. It can be used to access a range of user settings.



To exit the whole user menu and return to the appearance menu, press the  PHONE/EXIT button or, if displayed, press the Exit soft key.

Within the menu, the ▲ up and down ▼ arrows keys are used to scroll through menu options. The availability of additional options is indicated by the ↓ ↓ ↑ arrow icons.

When the menu option displayed has sub menus, that is indicated by the ... 3 dots (ellipsis) icon after the menu option name. Except where they are being used to change the value of a setting (see below), the ◀ left and right ▶ arrow keys can be used to exit and enter sub-menus.

 
Entering a sub-menu can also be done by pressing the Select soft key or the OK button.

Exiting a sub-menu can also be done by pressing the Back soft key.

Menu options where the current settings is enclosed by ◀ left and right ▶ arrow icons can be changed using the ◀ left and right ▶ arrow keys in addition to the soft key options.



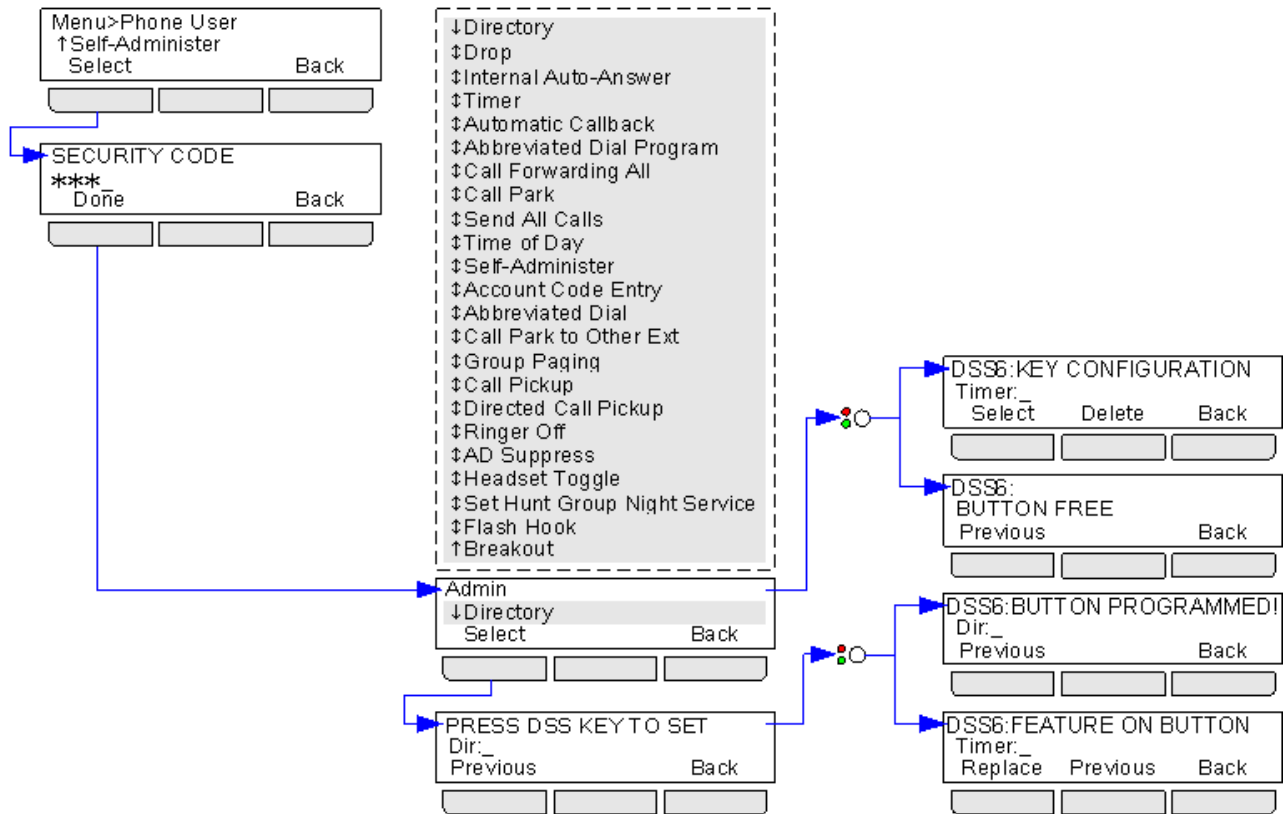
Administrator controls whether you can access some of the menus. Others are only available if certain

- 
- While the phone is [locked](#) , the Features menu cannot be accessed to change user settings.
  - The system administrator is able to configure if you can access the Membership, State and Fallback options of a group. If you are not configured for any groups then the Group menu is not shown.
  - The system administrator is able to configure whether you can access the Forward and Follow Me menu and status options.
  - The Park menu and status options are only accessible while you are talking to a caller or already have parked calls.
  - The Account Code menu is only accessible if the system has been configured with accounts codes.
  - The Mobile Twinning options are only shown if you have been configured to use mobile twinning.
  - The System Admin option is only shown if you have been configured as a 'System Phone' user.




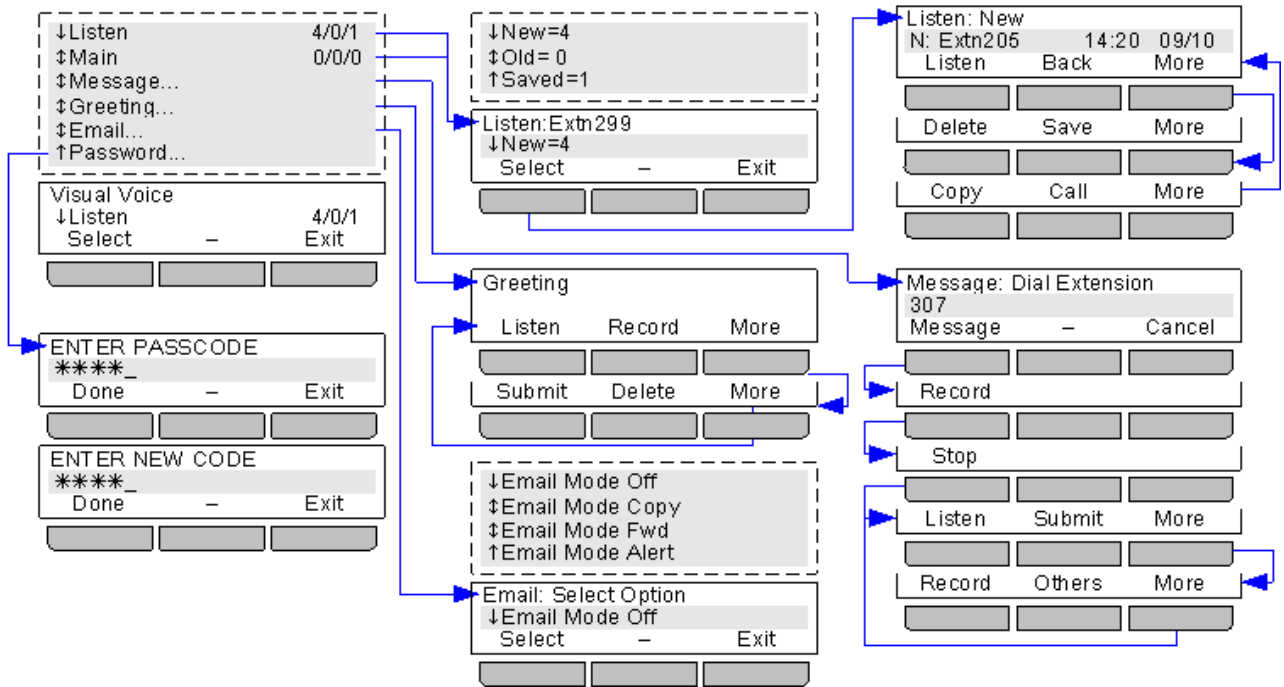
## 22.2 Self-Administer Menu

This menu is accessed by pressing the Features soft key and selecting Phone User and then Self-Administer.



## 22.3 Visual Voice Menu

This menu is accessed by pressing the  key. The system administrator may have configured it so that you are required to enter your voicemail code after pressing the button.



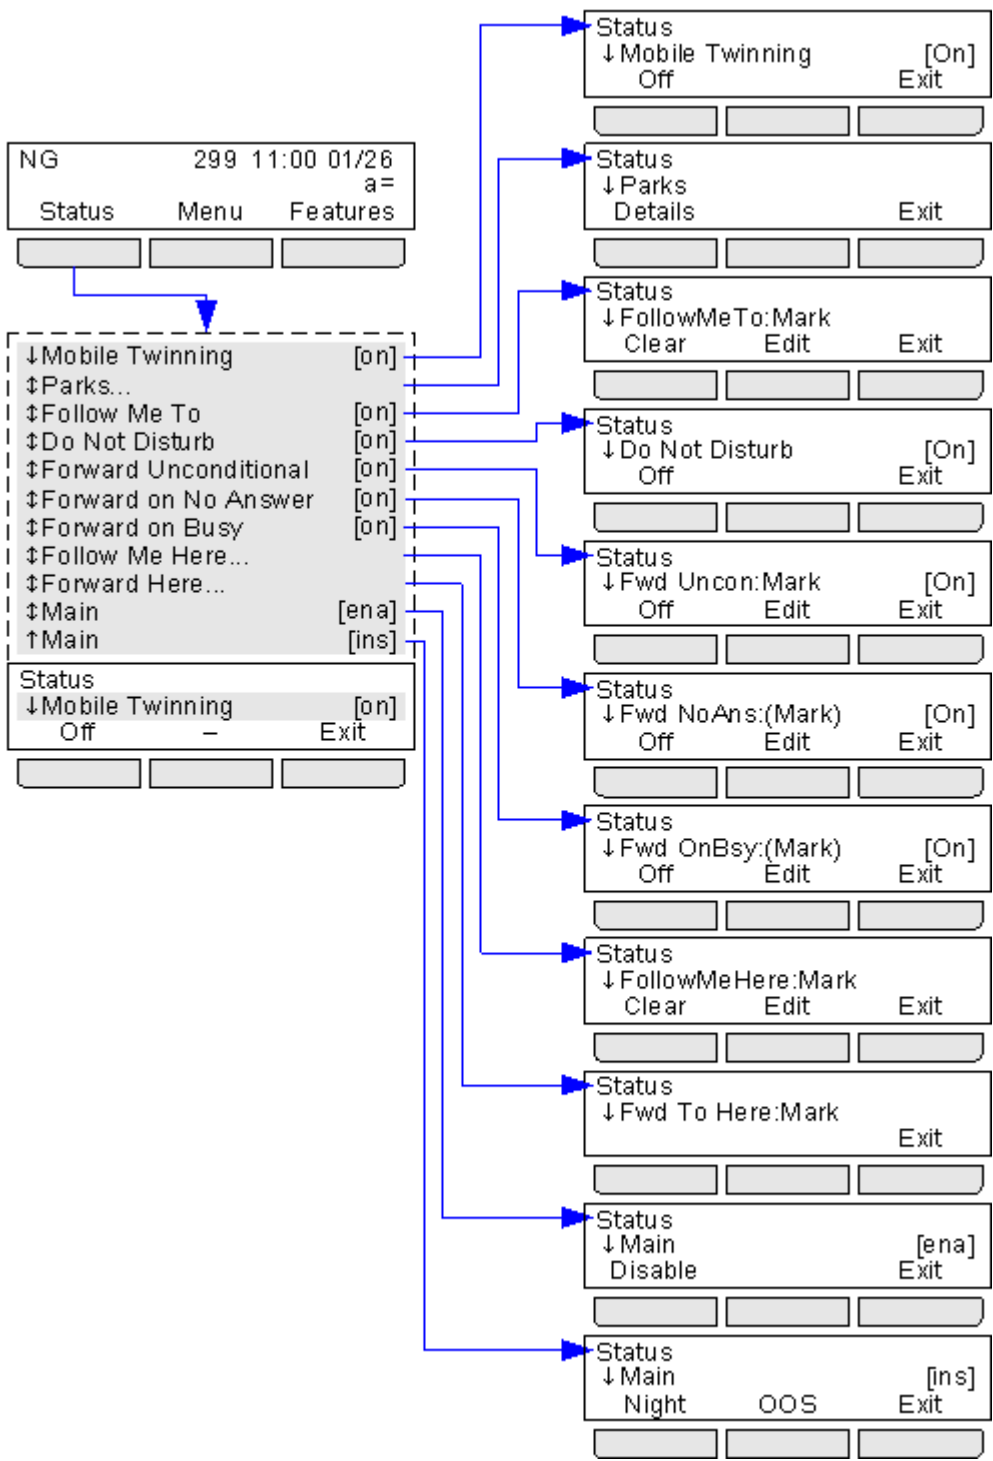
The Email option is only available if configured by the system administrator.

Hunt group mailbox access is only available if configured by the system administrator.



## 22.4 Status Menu

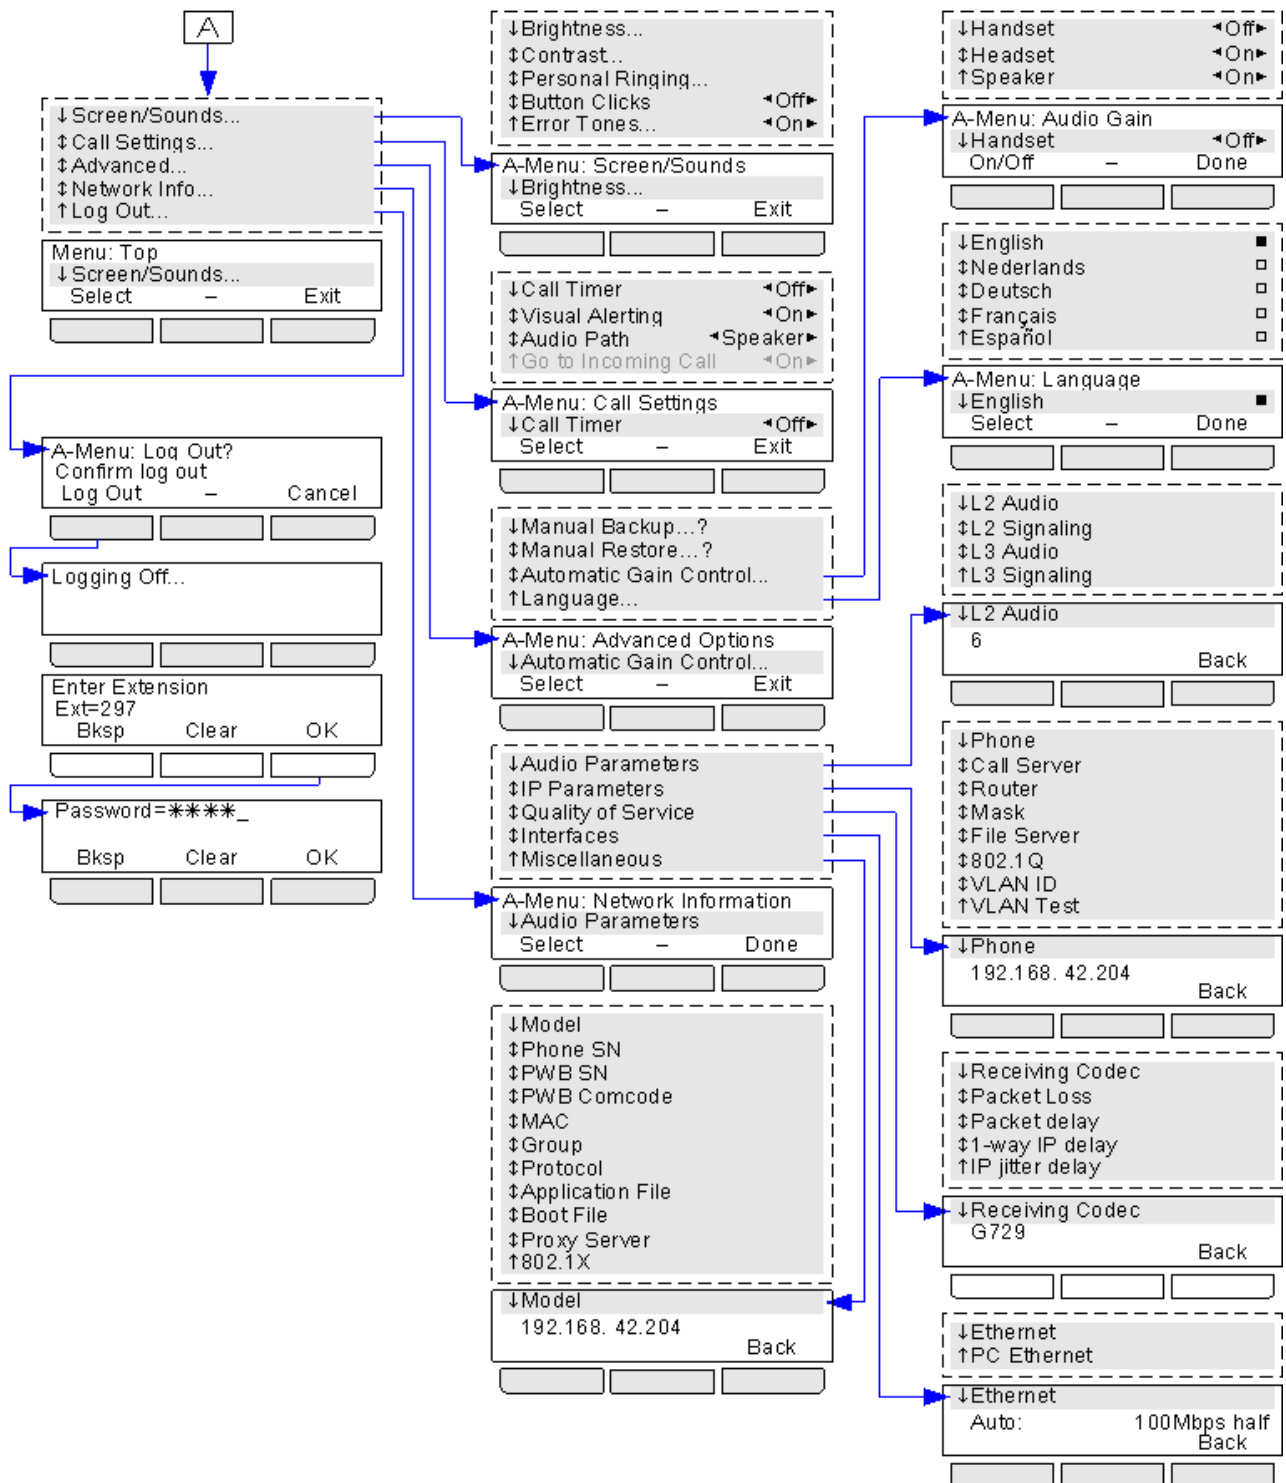
This menu is accessed by pressing the Status soft key.



## 22.5 Phone A-Menu

1608 and 1616 Phones

This menu is accessed by pressing the **A** key. It is used mainly for phone specific settings rather than your user settings. It can also be used to view details of the phones software.

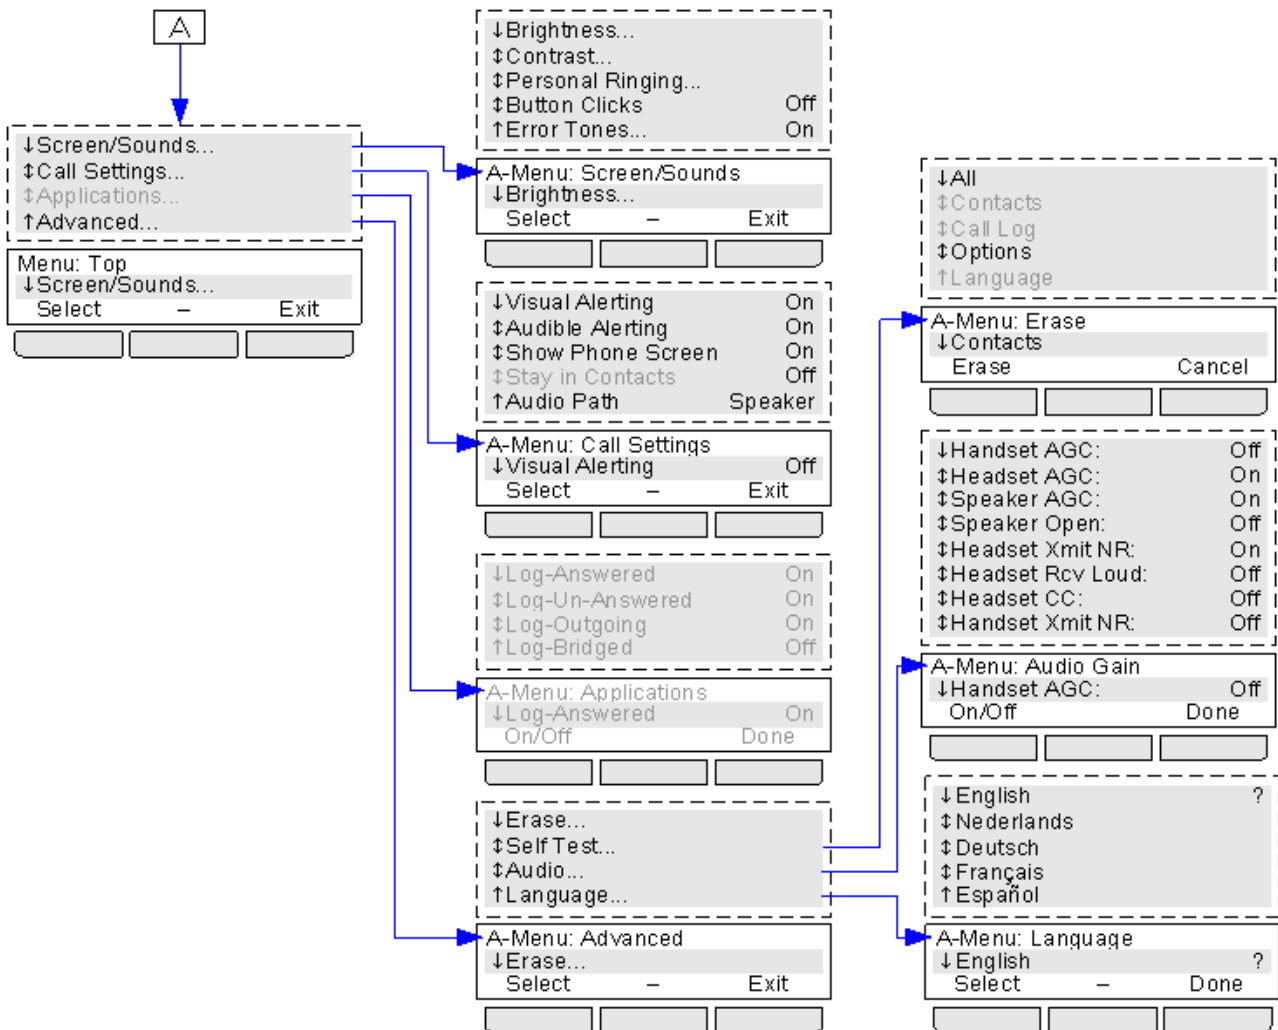


The following options are not used with IP Office and are not included in this documentation; Go to Incoming Call.



1408 and 1416 Phones


This menu is accessed by pressing the **A** key. It is used mainly for phone specific settings rather than your user settings. It can also be used to view details of the phones software.

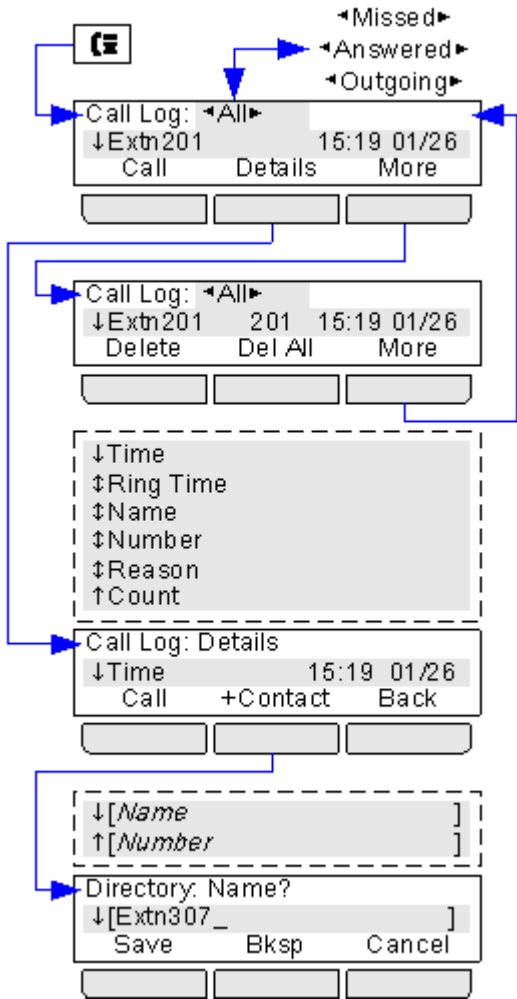


The following options are not used with IP Office and are not included in this documentation; Applications, Log-Answered, Log-Un-Answered, Log-Outgoing, Log-Bridged, Erase Contacts, Erase Call Log and Stay in Contacts




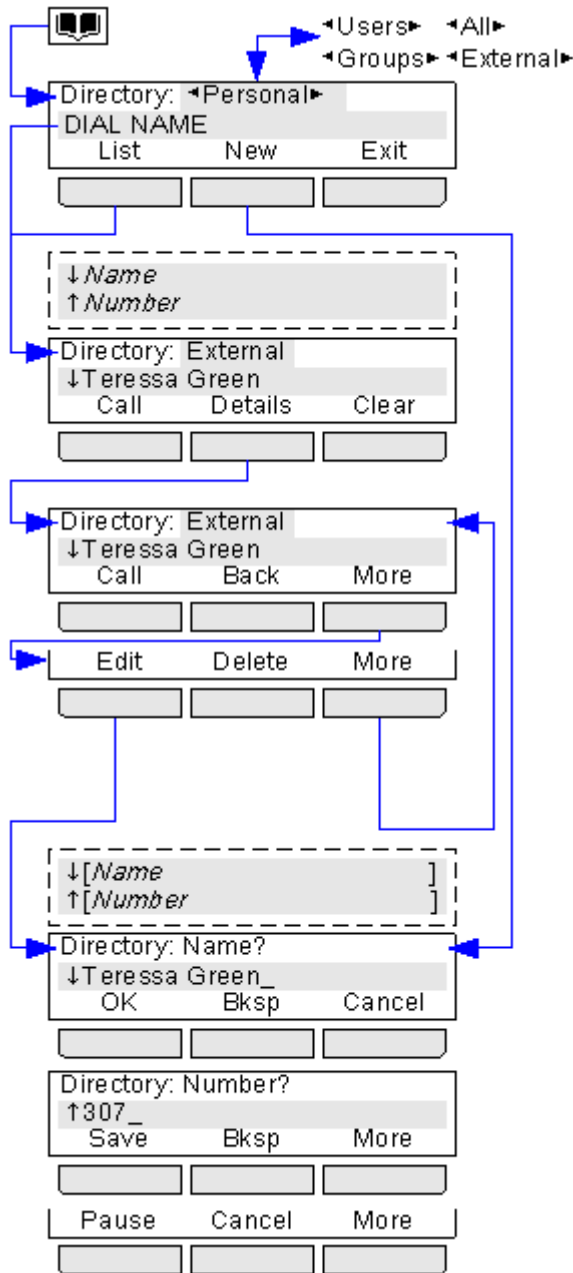
## 22.6 Call Log Menu

This menu is accessed by pressing the  key. The diagram below summarizes the structure of the menu.


 


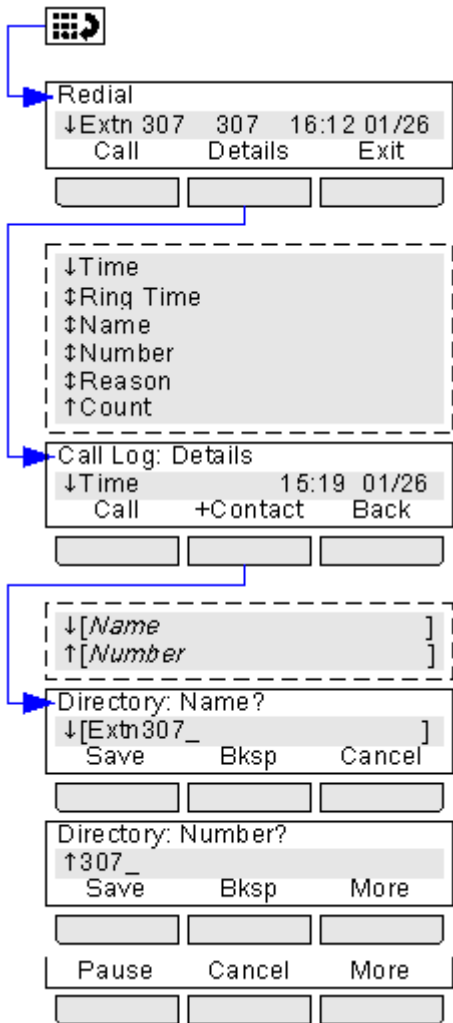
## 22.7 Contacts Menu

This menu is accessed by pressing the  key. This menu is used to access your own personal contacts and the system directory of contacts.



## 22.8 Redial Menu

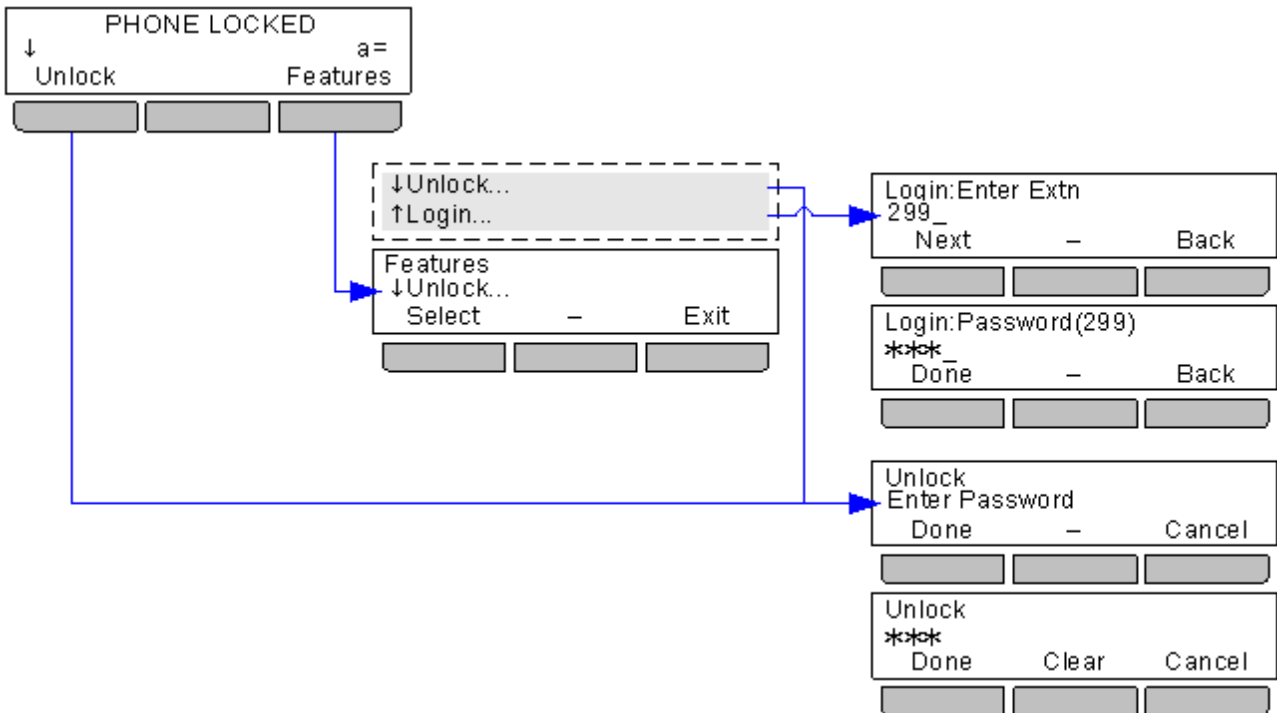
This menu is accessed by pressing the  key. This menu is only used when you [set your redial mode](#)  to *L/sf*. The numbers (up to 10) shown come from your outgoing call log.



## 22.9 Phone Locked Menu

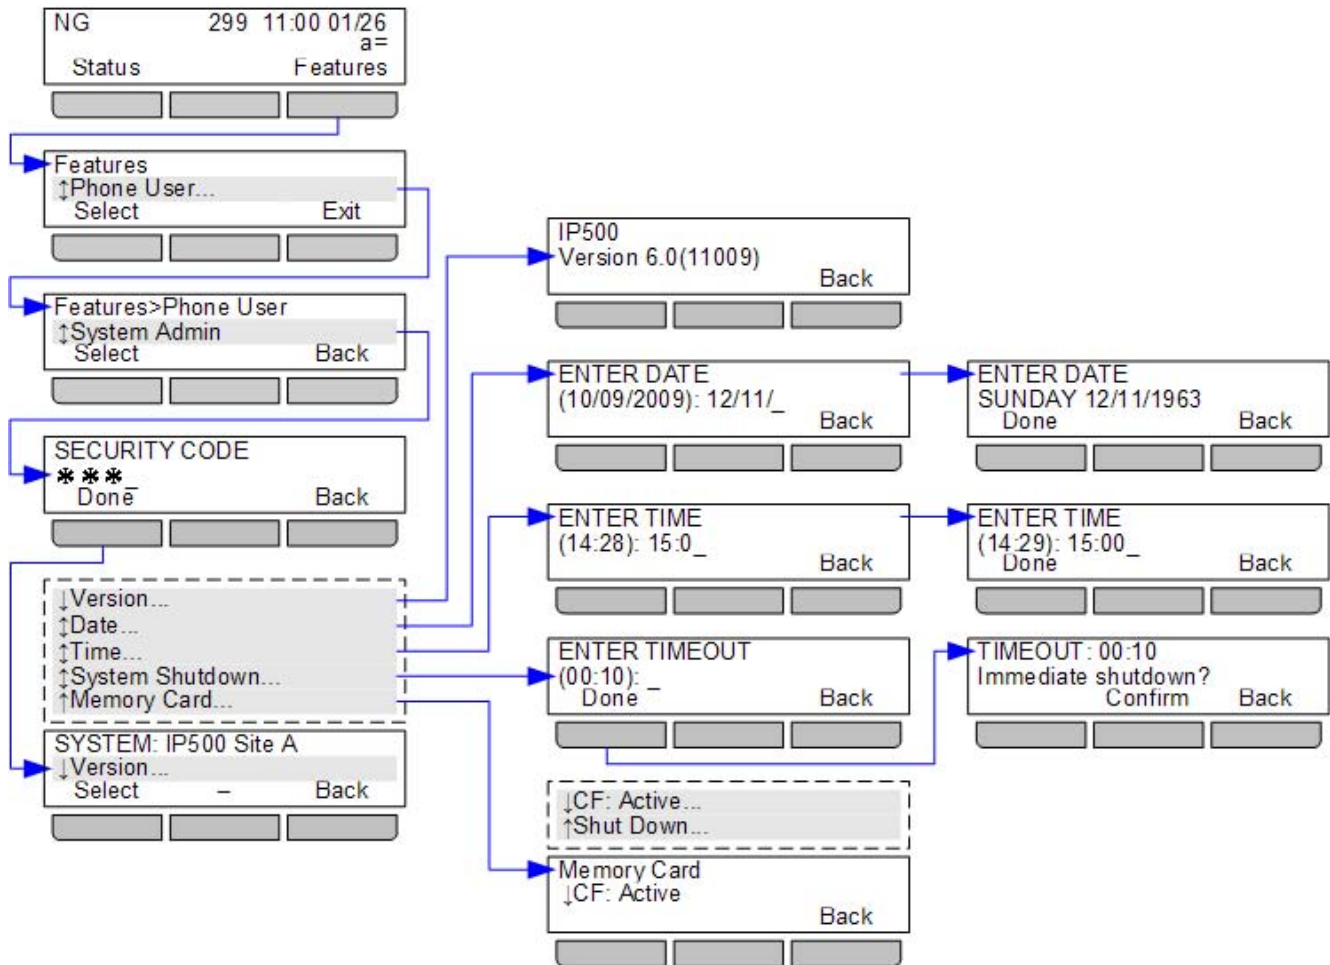
When your phone is locked:

- It can only be used to make internal and emergency calls.
- None of the menus for your user settings can be accessed.
- To [unlock the phone](#)<sup>[89]</sup> requires your login code if you have [configured a login code](#)<sup>[90]</sup>.



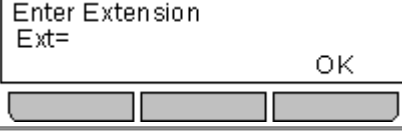
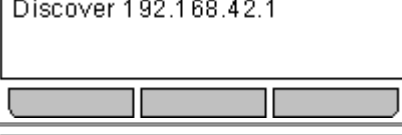
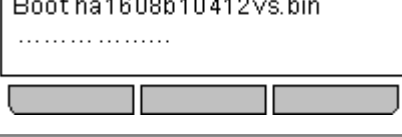

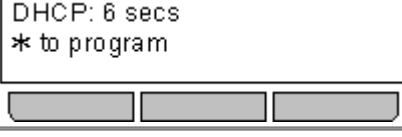



## 22.10 System Admin Menu

This menu is only available to users who have been configured as a system phone user.



## 22.11 Error Screens

Display	Likely Cause
	<b>NoUser</b> This screen is displayed when there is no user currently logged in on the phone. The phone can still be used for internal and emergency calls. To <a href="#">login</a> <sup>(87)</sup> press Select.
	<b>PHONE LOCKED</b> This screen is displayed if the user has locked it. The phone can still be used to make and receive internal calls and to make emergency calls. If it is your phone you can unlock it using your login code. If it not you phone, you can still <a href="#">login</a> <sup>(87)</sup> .
	<b>Enter Extension</b> This screen is displayed on an unregistered phone. 1608 and 1616 only.
	<b>Discover</b> This screen typically indicates that the phone has lost connection with the telephone system for a period of several minutes. Contact your system administrator if this remains. 1608 and 1616 only.
	<b>Boot</b> This screen is shown by a phone that has just been powered on or has been remotely restarted by the system administrator. It indicates that the phone is loading its own software. This will typically be followed by the screens below in sequence. 1608 and 1616 only.
	<b>Ethernet</b> Shown following a restart of the phone. Indicates the network connection has been established. Do not press * unless you have been instructed to do so by your system administrator. 1608 and 1616 only.
	<b>DHCP</b> Shown following a restart of the phone. The phone is waiting for information from the DHCP server. Do not press * unless you have been instructed to do so by your system administrator. 1608 and 1616 only.
	<b>HTTP/HTTPS</b> Shown following a restart of the phone. The phone may go through a process of requesting files and downloading those files. This should only last a few seconds. However if the system administrator has done this to install new phone software it may take several minutes and should not be interrupted. 1608 and 1616 only.





# Chapter 23.

# Glossary



---

## 23. Glossary

### 23.1 Abbreviated Ring

A single non-repeated ring. By default this is the type of ring used when another call alerts you when you already have a call in connected.

### 23.2 Appearance Button

Appearance buttons are used to represent calls made and received by you and other users on the telephone system. They are configured by your system administrator. Normally your first 3 buttons are call appearance buttons but additional buttons can be configured as appearance buttons.

### 23.3 Attention Ring

Your system administrator can set what ringing should be used if another call alerts you when you already have a call connected. The options are a single non-repeated ring (abbreviated ring) or no ring.

### 23.4 Auto Hold

By default, when you have a connected call in progress, if you press another appearance button, the connected call is automatically put on hold. Without auto-hold, the connected call is ended when you press another appearance button.

### 23.5 Bridged Appearance Button

A bridged appearance button shows the state of one of another user's call appearance buttons. It can be used to answer or join calls on that other user's call appearance button. It can also be used to make a call that the call appearance user can then join or retrieve from hold.

- When the user's call appearance button alerts, your matching bridged appearance button also alerts. The bridged appearance button can be used to answer the call on the call appearance button user's behalf.
- When the call appearance button user answers or makes a call using that call appearance, your matching bridged appearance button show the status of that call, for example connected, on hold, etc. The bridged appearance button can be used to retrieve the call if on hold or to join the call if active.
- Bridged appearance buttons are not supported between users on different systems in a [Small Community Network](#) <sup>[185]</sup>.

### 23.6 Call Appearance Button

Call appearance buttons are used to display calls to and from your phone. By having several call appearance buttons, you are able to answer and make several calls, switch between calls and perform other actions.

When all your call appearance buttons are in use, any further calls to your number follow your forward on busy setting if set or otherwise go to voicemail if available.

### 23.7 Call Coverage Button

Each call coverage button is associated with another user on your telephone system. The button allows you to be alerted when that user has an unanswered call still ringing. You can view the details of the call and answer it if required.

The settings of the user being covered control how long it rings at their phone before it also starts alerting on your call coverage button for that user. Call coverage appearance buttons are not supported between users on different systems in a Small Community Network.

### 23.8 Coverage Ring

If you have any bridged appearance and or call coverage buttons, you can [set the type of ringing \(coverage ring\)](#) <sup>[132]</sup> that should be used when a call alerts on any of those buttons. The options are to use normal ringing, a single non-repeated ring (abbreviated ring) or no ring. The coverage ring setting is only used if you do not already have a connected call. If you already have a connected call in progress, the shorter of your coverage ring and the system administrator set attention ring settings is used.

### 23.9 Do Not Disturb

- When you are in 'do not disturb', you callers are redirected to voicemail if available or otherwise hear busy tone.
- The only people who can call you are those calling from numbers in your do not disturb exceptions list. Forwarding can still be applied to these calls.
- Calls to any hunt group of which you are a member are not presented to you (unless you are the last available member of the group).
- Enabling do not disturb will not affect any calls already being presented to your phone.

••••• use the phone to make outgoing calls. When you go off-hook you will hear broken dial tone.



s (Do Not Disturb)

vn on your phone's display when you have do not disturb enabled.

## 23.10 Do Not Disturb Exceptions

- These are numbers for caller's who can call you even when you are set to do not disturb. This only applies for calls to you. It does not apply for calls to a hunt group of which you are a member.

## 23.11 Follow Me

Follow me to is used to redirect your calls to another extension where you will be working.

The calls are presented with your user name so that they can be distinguished from calls for the extensions normal user. This allows you to share another person's phone without logging them off their phone.

The calls are still subject to all your user settings as if they were ringing at your phone.

All calls are redirected.

## 23.12 Follow Me Here

Follow here the function used to enable follow me at the extension to which you want your calls redirected.

## 23.13 Follow Me To

Follow me to is the function used to enable follow me from your own phone.

## 23.14 Forward on Busy

Forward on busy redirects your calls when your phone is not able to present you with any more alerting calls.

- By default this function is only applied to incoming external calls to you. However, if required internal calls can also be selected.
- When enabled, all calls matching the settings are forwarded to the number set as the forward on busy/no answer destination. That number can be internal or external.
- Busy is defined as having no available call appearance buttons on which further calls can be presented.
- Hunt group calls are not presented when you are busy and so are not forwarded by this setting.
- The forward on busy and forward on no answer options use the same forwarding destination number. If no number is set, they use the same destination as set for forward unconditional.
- If you have [voicemail enabled](#) <sup>83</sup>, the telephone system will attempt to redirect forwarded calls to voicemail if they are still unanswered after having rung for your no answer time (default 15 seconds). This is not always possible for calls that have been forwarded to an external number.

## 23.15 Forward on No Answer

Forward on no answer redirect calls that have alerted your phone but have not been answered for some reason.

- By default this function is only applied to incoming external calls to you. However if required internal calls can also be selected.
- When enabled, all calls matching the settings are forwarded to the number set as the forward on busy/no answer destination. That number can be internal or external.
- No answer is defined as having been presented to your phone for your no answer time (default 15 seconds).
- Hunt group calls are not forwarded.
- The forward on busy and forward on no answer options use the same forwarding destination number. If no number is set, they use the same destination as set for forward unconditional.
- If you have [voicemail enabled](#) <sup>83</sup>, the telephone system will attempt to redirect forwarded calls to voicemail if they are still unanswered after having rung for your no answer time (default 15 seconds). This is not always possible for calls that have been forwarded to an external number.

## 23.16 Forward Unconditional

Forward unconditional can be used to immediately redirect your calls.

- By default this function is only applied to incoming external calls to you. However, if required internal calls and or hunt group calls can also be selected.
- When enabled, all calls matching the settings are forwarded to the number set as the forward unconditional destination. That number can be internal or external.
- You can still use the phone to make outgoing calls. When you go off-hook you will hear broken dial tone.
- The forward on busy and forward on no answer options use the same forwarding destination number. If no number is set, they use the same destination as set for forward unconditional.



[voicemail enabled](#) <sup>83</sup>, the telephone system will attempt to redirect forwarded calls to voicemail if they are still unanswered after having rung for your no answer time (default 15 seconds). This is not always possible for calls that have been forwarded to an external number.

- 
- D = Diverting (Forwarding) Calls  
A D is shown on your phone's display when you have forward unconditional enabled.

## 23.17 Group

Your system administrator can include you as a member of a group along with other users. Each group has its own extension number which can be used as the destination for call.

When a call is presented to a group, it is presented to the available group members, either one at a time or all at the same time, until answered by one of the members.

How long a group call will ring at each group member before being presented to the next member is controlled by the group's own settings. Hunt groups also use voicemail and have their own settings for when an unanswered call should go to the group's mailbox. For group calls, the hunt group's voicemail settings are used rather than your settings.

## 23.18 Idle Line Preference

Having one of your phone's call or line appearance button set as the currently selected appearance button, means it will be the appearance button used when you go off hook. If this was not the case, you would need to select an appearance button before going off hook. Idle line preference automatically selects the first available call appearance or line appearance as your currently selected button when you do not have a call connected.

## 23.19 Internal Twinning

This method of twinning twins your normal phone with another internal phone. Your incoming calls will ring on both phones. You can also make your calls from either extension.

A typical example for internal twinning would be a user who uses both a normal desk phone and also needs a mobile phone while moving around the building.

Your settings are applied to both phones. Similarly message waiting indication and voicemail access from either phone will be to your mailbox.

If both your twinned phones are 1408, 1416, 1608 or 1616 phones, the call logs and directory contacts on each will be yours.

## 23.20 Line Appearance Button

Line appearance buttons allow you to make and receive calls on a specific telephone line connected to your telephone system. The button also allows you to see when the line is in use by other users.

For incoming calls, the telephone system still determines the destination for the call. That may be a user or group. However, if you have a line appearance button for the line, you will see that there is a call alerting and can answer it if required.

- Private Lines  
Special behaviour is applied to calls where the user has both a line appearance for the line involved and is also the Incoming Call Route destination of that call. Such calls will alert only on the Line Appearance button and not on any other buttons. These calls will also not follow any forwarding.

## 23.21 Logged Out

If you are logged out from any phone, you are treated as being busy to receiving any calls. Callers follow your forwarding settings if set or go to voicemail if available.

## 23.22 Login Code

You can use a login code to login at any phone on the telephone system and then use that phone as your own. While logged in at a 1408, 1416, 1608 or 1616 phone, you can use the phone's menus to set and change your login code.

## 23.23 Missed Call

Missed calls are calls that ring at your phone but are not answered by you. Your 10 most recent missed calls are included in your call log.

The system administrator can configure whether missed calls should include calls that you did not answer but were answered for you by another user. For example by a user with a call coverage button set for your calls. If this mode is enabled, it will also include calls that were answered by your voicemail.

## 23.24 Missed Group Call

The system administrator can configure whether the telephone system should keep an internal log of missed hunt group calls. They can then also set which groups of which you are a member, should have their missed calls shown as part of your missed calls call log. This does not require the group call to have been presented to you and missed.

## 23.25 Mobile Twinning

Mobile twinning is [twinning](#) <sup>(185)</sup> where your calls ring at both your phone and at another number which can include an extension. If you have been configured as a mobile twinning user, you can switch use of mobile twinning on or off from your phone's menus and also change the number to which you are twinned.



## 23.26 Park Call

Parking a call is similar to holding a call. However parked calls can be retrieved by other users on the telephone system.

A call that you park and leave parked for too long will recall to your phone. The recall will ignore any do not disturb and forwarding settings, recalling to the phone from which it was parked.

## 23.27 Park Slot Number

If you park a call without specifying a park slot number, the system will assign a number based on your extension number plus a single digit. For example for extension 201, the first parked call will use park slot number 2010 if available. If you already have one parked call, the next parked call will use park slot 2011 if available.

Call park buttons can be configured with a specific park slot numbers. A calls parked using that button will be given that park slot number. Any other users with a call park button set to the same number will see that there is a parked call and can unpark it using their button.

## 23.28 Ringing Line Preference

This setting is controlled by your system administrator and is normally on. When you are not connected to a call, if you receive an incoming call, ringing line preference will make the alerting appearance button your selected appearance button. You can answer the call on the selected appearance button by lifting the handset or pressing the Headset or Speaker button.

Without ringing line preference, to answer the call on the alerting appearance button you must press the appearance button to select it manually.

## 23.29 Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. Your system administrator will confirm any additional short codes that they may have configured for your use.

## 23.30 Small Community Network

Several IP Office telephone systems can be connected together to form a Small Community Network. You can then dial the user on other systems in the same way as for internal calls on your own system. The remote users are listed in the directory.

The system administrator can also configure which hunt groups are accessible across the network. You may also be able to hot desk to a phone located on another system in the network.

## 23.31 System Administrator

The system administrator is able to make or arrange changes to the telephone system configuration. They are able to see and change most of your user settings.

## 23.32 System Phone User

Your system administrator can configure some user's as system phone users. They will be able to access a range of additional functions such as changing the system date and time. A system phone user is able to add, edit and delete system directory entries.

## 23.33 Twinning

Twining is a process whereby your calls ring on two phones. Twinning is only available if configured by the system administrator.

There are two methods of twinning supported, [internal twinning](#)<sup>[184]</sup> and [mobile twinning](#)<sup>[184]</sup>.





# Index

## A

Abbreviated ring 23, 25, 132, 182

### Access Control

- Fallback 108, 109, 110, 111, 112, 113, 151
- Follow Me 93, 94, 95, 96, 98, 99, 100, 101, 102, 148, 149, 150, 151
- Forward 93, 94, 95, 96, 98, 99, 100, 101, 102, 148, 149, 150, 151
- Membership 108, 109, 110, 111, 112, 113, 151
- State 108, 109, 110, 111, 112, 113, 151

### Add

- Contact 44, 68, 76
- Contact from Redial List 44, 68
- External contact 64, 67, 69, 70
- to conference call 56

Alarm 152, 164

### All

- Call Log 33, 68, 73, 74, 75, 76
- Contacts 33, 65, 66
- Forward 98, 99, 150

All Calls 98, 99, 150

Almost Full 152, 164

A-Menu 18, 126, 172

Answered 33, 68, 73, 74, 75, 76

Appearance Buttons 21, 25, 27

Attention Ring 131, 133

Audible Alerting 132

Audio Path 60, 62, 142

Auto-Answer 39, 134

## B

B 20

### Backup

- Manual backup 143

Barred 20

BM32 12

Boot Error 152, 164

Bridge Appearance Button State 23

Bridged 21, 23, 27

Bridged appearance 21

- Coverage ring 23, 25, 132, 182
- Lights 23

Bridged Appearance Button Indication 23

Bridged Appearance Buttons 21, 23

broken dial tone 96, 103, 182, 183

### Busy

- Forward 100, 101, 102, 149, 150

Button Module 12

## C

### Call

- from Call Log 33, 73
- from Contacts 33, 66
- from redial list 34, 42

Call Appearance 21, 23

Call Appearance Button Indication 21

Call Appearance Button State 21

Call Appearance Buttons 21, 23

### Call coverage

- Coverage ring 23, 25, 132, 182
- Lights 25

Call Coverage Appearance 25

on Indication 25

on State 25

, 74, 75, 76

73

Details 44, 74

Menu 18, 72, 174

Call Settings 31, 35, 43, 54, 104, 127, 128, 129, 131, 132, 136

Audible alerting on/off 132

Audio Path 60, 62, 142

Auto-Answer 39, 134

Internal Auto-Answer 39, 134

Visual alerting on/off 132

Withhold number 35, 127

Call Waiting 139

### Caller

Details 44, 74

Cannot 21, 23, 27

Cannot Be 21, 23, 27

Channel Name 27

Channels 27

### Conference

Add call 56

Caller details 57

Drop caller 57

End automatically 48, 52, 57, 58

Hold 47, 58

Last internal user 48, 52, 57, 58

Music on hold 47, 58

### Contact

Add 44, 68, 76

add external 64, 67, 69, 70

Add from Redial List 44, 68

delete external 64, 67, 69, 70

Edit 67, 69

edit external 64, 67, 69, 70

Contacts 18, 33, 64, 65, 66, 67, 69, 70

Make call 33, 66

Menu 175

Corrupt Date/Time 152, 164

Count 44, 74

Cover 21, 23, 25, 27

Coverage 25

Coverage ring 23, 25, 131, 132, 133, 182

Covered User 25

CPKUp 50, 152

## D

D 20, 96, 183

Delay 21, 23, 25, 27

### Delete

External contact 64, 67, 69, 70

Follow me here 95, 149

### Details

Call Log 44, 74

Dial 21, 23, 27

### Dial tone

Broken 96, 103, 182, 183

### Directory

Add 44, 68, 76

add external 64, 67, 69, 70

Add from Redial List 44, 68

delete external 64, 67, 69, 70

Edit 67, 69

edit external 64, 67, 69, 70

Make call 33, 66

Menu 175

### Display

Call Waiting 139

### Divert

To voicemail 39, 84



Diverting 20, 96, 183  
Do Not Disturb 20, 103, 182  
Off 104, 148  
Status 104, 148

## E

Edit  
Contact 67, 69  
External contact 64, 67, 69, 70  
Follow me here 95, 149  
En-bloc 31, 129  
En-Bloc Dial 31, 129  
Expansion Failure 152, 164  
External 33, 65, 66  
Forward 98, 99, 150  
Forward on Busy 100, 101, 102, 149, 150  
External and Group 98, 99, 150  
External Calls 131, 133  
external directory 64, 67, 69, 70  
External Only 98, 99, 150

## F

Failure 152, 164  
Fast Flash 21, 23, 25, 27  
Features  
Menu 16, 167  
Flash 21, 23, 25, 27  
Follow me here  
Clear 95, 149  
Edit 95, 149  
Off 149  
Status 149  
Follow Me To  
Off 94, 148  
Status 94, 148  
Forward  
All Calls 98, 99, 150  
External and Group 98, 99, 150  
External Only 98, 99, 150  
Non Group Calls 98, 99, 150  
Off 98, 99, 150  
on Busy 100, 101, 102, 149, 150  
Forward on Busy  
Off 101, 149  
Status 101, 149  
Forward on No Answer  
Off 100, 150  
Status 100, 150  
Forward Unconditional 98, 99, 150  
Off 98, 150  
Status 98, 150  
Forwarded to Here  
Off 151  
Status 151  
Forwarding 20, 96, 183  
Full 152, 164  
Fwd To Here 151

## G

G 20  
Goes Off Hook 21, 25, 27  
Group  
Call log 18, 72  
Forward 98, 99, 150  
Membership status 108, 151  
Groups 33, 65, 66  
110, 111, 112, 151

Groups 33, 65, 66

## H

Handset  
Volume 141  
Headset 10, 11  
Volume 60, 141  
Held 21, 23, 25, 27  
Held call  
Transfer 48, 52, 58  
Held Calls 21  
Hold 21, 23, 25, 27  
Conference 47, 58  
Transfer 48, 52, 58  
Hold Elsewhere 21, 23, 27  
Hold Here 21, 23, 25, 27  
Hunt group  
Call log 18, 72  
Forward 98, 99, 150  
Membership status 108, 151  
Missed 18, 72  
Service status 112, 151

## I

In Service 110, 111, 112, 151  
Intermittent Flash 21, 23, 27  
Internal Auto-Answer 39, 134  
Internal Calls 131, 133


## L

Lamp 132  
Line 27  
Line Appearance 27  
Line Appearance Button Indication 27  
Line Appearance Button State 27  
Line Appearance Buttons 27  
Line Appearance ID 27  
List 42, 43, 128  
Locked  
Menu 177  
Login 87

## M

Make call  
from Call Log 33, 73  
from Contacts 33, 66  
from redial list 34, 42  
Manual  
Restore 144  
matches 21, 23  
Memory Card Failure 152, 164  
Menu  
A-Menu 18, 126, 172  
Call Log 18, 72, 174  
Contacts 18, 64, 175  
Features 16, 167  
Locked 177  
Redial 18, 176  
Self Admin 169  
Status 171  
Status menu 16, 148  
System Admin 178  
Visual Voice 18, 170  
Message waiting lamp 132  
Missed 33, 68, 73, 74, 75, 76  
Missed calls  
Hunt group calls 18, 72  
Mobile Twinning  
Number 105, 127



- Mobile Twinning  
 Off 152  
 On/Off 105, 127  
 Status 152
- More 73, 79, 80, 81
- Music on hold 47, 58
- N**
- N 20, 103, 182
- New  
 Contact 44, 68, 76
- Night Service  
 Automatic 110, 111, 112, 151
- No answer  
 Forward status 100, 150
- No Calls 20, 103, 182
- No ring 23, 25, 132, 182
- Non Group Calls 98, 99, 150  
 number 27
- O**
- O 20, 110
- One 42, 43, 128
- OOS 110, 111, 112, 151
- Out of Service 20, 110, 111, 112, 151
- Outgoing 33, 68, 73, 74, 75, 76
- P**
- Parked calls  
 Status 50, 152
- Password 87
- Personal 33, 65, 66
- Phone User 88, 89, 90, 116, 130, 138, 139, 158, 159, 161, 162, 163
- phones display 21
- R**
- R 20
- Reason 44, 74
- Redial 18, 34, 42, 44, 68  
 Add to Contacts 44, 68  
 List 34, 42  
 Menu 176
- Redial mode 42, 43, 128
- requires 21, 25
- Resilience 20
- Restore 144
- Ring  
 Attention Ring 131, 133  
 Coverage Ring 131, 133  
 External Calls 131, 133  
 Internal Calls 131, 133  
 Ringback 131, 133
- Ring Time 44, 74
- Ringback 131, 133
- Ringer  
 Audible alerting on/off 132  
 Volume 134, 141
- Ringling Line Preference 21, 23, 25, 27
- S**
- S 20
- SBM32 12
- Select 21, 23, 25, 27
- Self Admin  
 Menu 169  
 39, 150
-  11
- Speaker  
 Volume 62, 142
- Stand 10, 11
- Status  
 Do Not Disturb 104, 148  
 Follow Me here 149  
 Follow Me To 94, 148  
 Forward on Busy 101, 149  
 Forward on No Answer 100, 150  
 Forward unconditional 98, 150  
 Forwarded to Here 151  
 Group membership 108, 151  
 Group service status 112, 151  
 Hunt group service status 112, 151  
 Membership 108, 151  
 Menu 171  
 Mobile twinning 152  
 Parked calls 50, 152  
 Service status 112, 151
- Status menu 16, 148
- Steady Flash 21, 23, 25, 27
- System Admin  
 Menu 178
- System Administrator 152, 164
- System Alarm 20, 152, 164
- System Boot Error 152, 164
- System Phone 64, 67, 69, 70, 152, 164
- T**
- T 20, 105
- Time profile 110, 111, 112, 151
- Transfer  
 Held call 48, 52, 58  
 To voicemail 39, 52, 84
- Twinned 20, 105
- Twinning  
 Number 105, 127  
 Off 152  
 On/Off 105, 127  
 Status 152
- U**
- Use 21, 23, 25, 27
- Use Elsewhere 21, 23, 27
- Use Here 21, 23, 25, 27
- Users 33, 65, 66
- V**
- Visual Alerting 132
- Visual Voice 18  
 Menu 170
- Voicemail  
 Transfer 39, 52, 84
- Voicemail Almost Full 152, 164
- Voicemail Failure 152, 164
- Voicemail Full 152, 164
- Volume  
 Handset 141  
 Headset 60, 141  
 Ringer 134, 141  
 Speaker 62, 142
- W**
- Waiting Call 139
- Withhold Number 35, 127





Performance figures and data quoted in this document are typical, and must be specifically confirmed in writing by Avaya before they become applicable to any particular order or contract. The company reserves the right to make alterations or amendments to the detailed specifications at its discretion. The publication of information in this document does not imply freedom from patent or other protective rights of Avaya or others.

All trademarks identified by the ® or ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners.

This document contains proprietary information of Avaya and is not to be disclosed or used except in accordance with applicable agreements.

© 2011 Avaya Inc. All rights reserved.

